Transport Canada Transports Canada

TP 6980E

Issue 1/2003

feedback

Canadian Aviation Service Difficulty Reports

table of contents **table of *contents*** table of contents

HANGAR NOISE	*inside cover*
FIXED WING	1
ROTORCRAFT	4
MISCELLANEOUS	5
AGING AIRCRAFT	6
HEADS UP	8
FAA UNAPPROVED PARTS	9
SUSPECTED UNAPPROVED PARTS	10
EQUIPMENT ADs	12
SDR LIST	14

hangar noise

A Message for Aircraft Maintenance Personnel

A Message from the Chief, Continuing Airworthiness...

Over 2002 we have made great efforts to improve our efficiency with the SDR program so that resource demands affecting all of us, will be greater focused on safety issues. Some of these improvements include the ability to report SDRs "on-line" through our Web-based reporting system and the development of guidance material to help you identify what constitutes reportable information.

Our Corrective Action Technical Inspectors have been visiting the industry to share our new tools. Look for them at AME symposiums or during a visit to you. The results of these changes will be more apparent in future issues of this publication and in our future ability to use the SDR system for our mutual benefit.

Towards 2003 we are better developing our ability to use SDRs to monitor trend. We are looking forward to developing a system to provide you, the industry, with SDR-based service history data to allow you to use that information in areas such as your reliability and maintainability programs.

Implementing these changes has caused, and will cause adjustments for all of us.

As always, our team welcomes your feedback on the SDR program.

Léo N.J. Maisonneuve joins our Continuing Airworthiness team from NAV CANADA as Manager, Informaton Programs.

Prior to the transfer of Air Navigation Services (ANS) to NAV CANADA, Léo had worked in several ANS areas in Transport Canada.

Apart from his Information Programs responsibilities, Léo will be also be working with the team responsible to implement the Continuing Airworthiness Web Information System (CAWIS) GOL (Government On-Line) Project.

For more information or copies of **feedback** or other Civil Aviation publications, call 1-800-305-2059 or visit our web site at www.tc.gc.ca/aviation/pubs/index_e. To ensure continued delivery, send any address changes to:

Transport Canada, Civil Aviation Communications Centre AARA, Place de Ville, Ottawa, ON, K1A ON8.

Copyright - Minister of Public Works and Government Services, Canada, 2003
Permission is granted by the Department of Transport, Canada, to copy and/or reproduce the contents of this publication in whole or in part provided that full acknowledgement is given to the Department of Transport, Canada, and that the material be accurately reproduced. While use of this material has been authorized, the Department of Transport, Canada, shall not be responsible for the manner in which the information is presented, nor for any interpretations thereof.

The information in this publication may not be updated to reflect amendments made to original content. For up-to-date information, contact the Department of Transport, Canada.

The information in this publication is to be considered solely as a guide and should not be quoted as or considered to be a legal authority. It may become obsolete in whole or in part at any time without notice.

Cover Photos: Courtesy of J.R. (Rod) Digney and Ramon (Ray) Raoux

Cette publication est aussi disponible en français.

fixed wing

BEECH 200 SUPER KING AIR

Starter-Generator Terminal Block Cover Jammed FCU SDR # 20020828011

During a routine landing approach, the pilot reduced engine power on both #1 and #2 power levers however, for some unknown reason, all the parameters for #1 engine increased. The pilot immediately advanced the #1 power lever and all engine parameters responded accordingly and returned to normal.

In an attempt to confirm the problem, the pilot cycled the #1 power lever several times and confirmed that at each time engine power was reduced, the engine parameters increased. The #1 engine was shut down and an uneventful landing was carried out.

Upon opening the #1 engine cowling, the maintenance engineer immediately identified the cause of the problem. The terminal block cover had come off the starter-generator and fallen into the engine control linkage cluster. The cover had landed in such a way, that when the #1 engine power lever was brought back, it tipped the terminal block cover which then forced the FCU fuel control arm forward and scheduled more fuel to the #1 engine.

Transport Canada reminds maintainers to check for proper security of these terminal block covers.

BOMBARDIER (CANADAIR) CL 600 2B16 (601 3A)

Hydraulic Pump Wiring Shorted SDR # 20020923001

During pre-flight checks, the hydraulic pumps were selected "on" and the cockpit lighting dimmed. A heavy current load could be heard coming from the ground power cart. Hydraulic pump 3B C/B tripped. Two attempts were made to reset the C/B, each having the same effect as previously noted, but would not reset. Smoke was noticed coming from the avionics bay, and power was removed from the aircraft.

Investigation revealed the main power feed wire to the 3B hydraulic pump in the avionics bay around Station 281 had shorted to a clamp that secured that wire bundle.

Proper installation practices of wire bundle clamps must be strictly adhered to with thorough inspections. Do not hesitate to move that wire bundle and inspect where the wires pass through clamps for chafed or pinched wires.

BRITISH AEROSPACE 3112

Nose Gear Switch Wiring Broken SDR # 20020404002

On approach, the pilot noticed that the nose gear was not indicating down and locked. After cycling the gear with no change in the indication, a fly-past was carried out to determine the gear status. After deciding that the gear was likely down and locked, a landing was attempted with ERS on stand-by. The landing was successful. Upon an investigation a wire was found to be broken about 12 inches from the switch.

A search of the SDR database returns in excess of 100 similar occurrences on this aircraft type only. Transport Canada reminds all maintainers to be diligent when inspecting wiring that is in SWAMP (Severe Water and Moisture Prone) areas, subject to flexing, or other installations that may lead to premature failure. Gear indications snags are costly for the operator and may indirectly affect the safe operation of an aircraft.

CESSNA 172P

Stabilizer Cracks SDR # 20020116004

Cracks were found during a scheduled inspection of the aircraft at 8239 hrs in the area of the front spar of the stabilizer, at the lightening hole between the two nose ribs (P/N 0532001-50). The skin stabilizer center (P/N 10532001-23) was also found cracked in the same area.

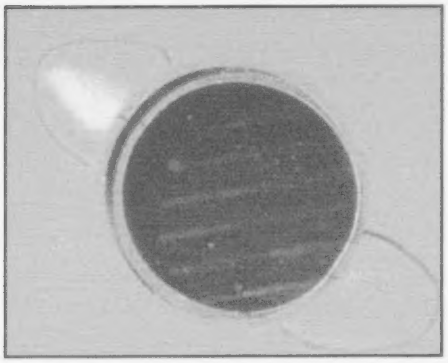

Cracks at the front spar of the stabilizer of a C172 aircraft

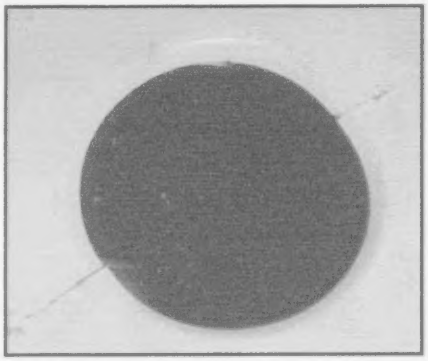

The SDR database contains many reports of similar cracking in this area. Transport Canada reminds maintainers pay close attention when inspecting this area.

CHAMPION 7ECA

Swaged Rudder Cable Failure SDR # 20021029008

The R/H forward rudder cable attached to the mico-sleeve (Nicopress) let go during taxi. Upon AME inspection, the mico-sleeve was found not to be crimped down to the proper dimension. The mico-sleeve was replaced and crimped properly.

All mico-sleeves on the aircraft were checked for the proper crimp, and it was found that the left forward rudder cable attachment was not crimped to the proper dimension either. All other mico-sleeves on the aircraft were at the proper dimensions. The factory was notified and they are submitting a Service Difficulty Report (SDR) as well.

This incident illustrates the importance of closely following standard practices when completing what some may consider "routine tasks". Complete installation of compression or swage-type fittings on cables must include the inspection of the finished product. Use of Go-No-Go gauges is a quick and efficient method of checking for the final dimension of these fittings. Manufacturers' instructions must be closely followed in order to prevent this type of occurrence (Ref: AC 43 13-1B 7-148).

FOUND BROS FBA 2C

Wing Spar Corrosion SDR # 20020718010

Transport Canada has received a report of substantial corrosion found on the wing spar, centre section, lower forward cap angle vertical flange leg where it was riveted to the spar web. A 25% loss of thickness in several areas, probably due to inter-granular stress corrosion, was present. The operator checked another wing and severe corrosion was also present.

Transport Canada considers this a significant safety issue, and recommends all owners of this aircraft inspect this area to ensure structural integrity of the spar and attach fittings. Most transport category aircraft operating in Canada have in place special inspection requirements, a corrosion protection program, and special Structural Inspection or similar program mandated by airworthiness directive or other documents.

Small aircraft, many of which are operated in environments conducive to corrosion propagation, are not affected by

these regulations and, as such, have no specific special inspection requirements specifically for corrosion of structural elements.

Transport Canada reminds operators of older general aviation aircraft to ensure all structural areas are closely inspected for corrosion.

PIPER PA31T

Uncommanded De-pressurization SDR # 20020910001

During descent, the aircraft de-pressurized. Upon further inspection, the forward clamp on the fresh air tube (P/N 8124402) was found loose and the tube disconnected.

This clamp is of the type containing a threaded rod and nut assembly for securing the clamp.

Part total time: 3318 hours and 3011 cycles.

The SDR database contains other similar reports, both on this aircraft and others where clamps have become loose, resulting in de-pressurization.

Transport Canada reminds maintainers when installing this type of clamp to ensure the self-locking feature of the nut is adequate, the components are correctly aligned, and the clamps are correctly torqued. Specifications for these locking values can be found in the manufacturer's product support manuals or in AC 43.13-1B.

SWEARINGEN SA226TC

Avionics Relay Wiring Chafed SDR # 20020923007

During taxi after an uneventful flight, smoke was detected in the cockpit. The aircraft was shut down, evacuated, and the smoke eventually dissipated.

A subsequent inspection revealed that the avionics relay wire #2a10a had chafed through and then arced on a hydraulic line in the area below the floor, just aft of the co-pilot's seat. The wiring and the line were repaired and the aircraft returned to service.

AMEs are reminded to inspect, protect, and secure wires. This is especially important in areas that you may access frequently and, as a result, disturb exposed wire runs.

AME SYMPOSIA / TRADE SHOWS / WORKSHOPS 2003

CENTRAL *March 5 & 7*	WESTERN *March 27 & 28*	ATLANTIC *May 2 & 3*
Best Western Victoria Inn (Winnipeg Airport) 1808 Wellington Avenue Winnipeg, MB R3H 0G3	Coast Plaza Hotel & Conference Centre 1316 - 33rd Street NE, Calgary, AB T2A 6B6	Delta St. John's Hotel & Conference Centre 120 New Gower Street, St. John's, NF A1C 6K4
Tel: (204) 786-4801 **Fax:** (204) 786-1329	**Tel:** 1-800-661-1464 or (403) 248-8888 **Fax:** (403) 248-0749	**Tel:** 1-800-268-1133 or (709) 739-6404 **Fax:** (709) 570-1622

rotorcraft

AEROSPATIALE AS 350B2

Tail Rotor Teleflex Cable Binding SDR # 20020507006

While on approach to a heli-skiing site, the pilot noticed that he did not have full tail rotor authority. A landing was not attempted because of the confined area, and the aircraft returned to base without further incident.

The rotorcraft was brought into the hangar for inspection and functional checks of the flight control system were initiated. During the check, the maintenance engineer noticed that the tail rotor Teleflex cable (P/N 704A34 130 18 0, Ref: IPC, Chapter 67.20.15, Pages 8 & 9, Item 110, Control, Rotor Pitch, Flexible) felt "ratchety" and appeared to be binding. This ball-type Teleflex cable is routed from the tail rotor pedals through the fuselage and connects to the tail rotor servo-control input lever located at the tailboom/fuselage interface.

As the rotorcraft warmed up to room temperature, the teleflex cable appeared to function much better with no apparent binding. The cable assembly was replaced and the aircraft returned to service. This problem may not be temperature related because there have been two other reports of a similar nature during this past summer.

Transport Canada recommends that maintenance personnel be extra vigilant in their assessment of conditions of the Teleflex cable upon report of similar malfunctions or discrepancies. Teleflex are "routing" sensitive and can bind if not installed with appropriate radius bends.

BELL 214B

Wiring Chafed SDR # 20021108017

While hovering during heli-logging operations, the pilot noticed smoke and sparks originating from the left overhead circuit breaker panel. The pilot initiated an unscheduled landing and shut down the helicopter without further incident.

It was later determined that a wire bundle clamp, located in the left overhead circuit breaker panel had failed. The power wire (#12 gauge) for the landing light was found chafed through its insulation and caused an electrical short to ground. The heat generated by the shorted landing light power wire then melted the insulation of the adjacent wires, causing them to also short to ground. It appears that the cascading effect happened faster than the circuit breakers could trip open.

Transport Canada cautions all maintainers and operators to remain vigilant with respect to the security of wire bundles. When a wire bundle is routed through a clamp, the bundle must be held within the rubber lining of the clamp, and no wires should be pinched between the flanges of the clamp. Pinching of the wire could cause the insulation to be damaged and a short circuit could result.

MCDONNELL DOUGLAS HELICOPTERS (MDHI) 369D

Tail Rotor Torque Tube Cracked SDR # 2002043004 and AC65-12A, p. 444

As the rotorcraft was entering into a hover condition, the pilot noticed that the tail rotor pedals felt "spongy" and immediately noticed a loss of tail rotor authority. The helicopter was successfully landed and shut down.

A further detailed inspection found that the subject tail rotor assembly torque tube (P/N 369H7531-9) was cracked almost 360 degrees in circumference. This crack originated from underneath the torque tube Magnesium fitting (P/N 369A7511), where the attachment hole is located.

A review of the SDR database revealed several similar reports of (P/N 369H7531-9) defects such as torque tube and sleeve found with elongated holes, cracked torque tube at fitting bolt hole, and other worn parts.

Transport Canada has contacted the responsible foreign airworthiness authority with our concerns. Additionally, we caution all maintainers to remain vigilant for cracks in this area.

Horizontal Stabilizer - Tip Cap Failures SDR # 20020729001

While in steep descent, the pilot observed the right hand horizontal stabilizer Tip Plate assembly depart the aircraft and impact the ground. The rotorcraft continued the descent and made a normal power landing.

Recovery and inspection of the Tip Cap Plate assembly revealed recent cracking at the forward edge of the Tip Cap (P/N 369D23633-12). There was no indication of birdstrike or other ground impact damage.

A review of the SDR database revealed another in-flight departure of a Tip Cap. In this case, the pilot noticed a vibration on the floor which later went away. After landing, it was then noted that a portion of the Tip Cap had departed during flight.

The manufacturer has stated that the root cause of these cracks may be as a result of tail rotor vibrations that have not been adequately resolved.

Transport Canada has reported these Tip Cap failures to the responsible foreign airworthiness authority. In the interim, it is recommended that operators pay close attention to this area for any evidence of cracks.

miscellaneous

PLASTIC "TY-WRAPS" AGAIN!!... SDR # 20020122003
SDR # 20020122004

Upon descent, the pilot of the Beech 1900D noticed that he had no aural warnings for decision height, altitude, alert, overspeed, gear warning, or stall warning. Maintenance personnel inspected plugs for aural amplifiers, and nothing appeared to be wrong. Wiring was inspected and one wire (Code 24A22) for 28VDC input of the aural annunciator amplifier (P/N 207), and another wire at plug W314P8 for co-pilot speakers, had been chafed by large plastic ty-wraps. The wires in question were "ty-wrapped" at a point where the bundle was bending. If the ty-wraps were 1 cm on either side of the bend, this would not have happened.

In another incident, an ELT remote switch indicator light was on in the hangar with no aural signal being received on comm frequency 121-5. The ELT and the wiring were inspected at Zone 312, and the wires 3150-12, 3150-13, 3150-15 were found chafed and were grounding out. Plastic ty-wraps, and plastic clamps cutting into the wiring were the cause of the problem.

Transport Canada continues to receive SDRs on plastic wire ties that, due to incorrect installation, have damaged adjacent wiring, structure, or components. Plastic wire retention devices, although more convenient that the lacing method for certain installations, often are installed quickly and as a result, not in the optimum position, leading to the chafing of adjacent wires or structures.

Manufacturers' Instructions for Continuing Airworthiness and/or AC 43.13 2B, Chapter 11, Aircraft Electrical Systems, covers wire installation and inspection, and includes information on the use of wire ties.

feedback

Friends and staff in Continuing Airworthiness wish

Paulette Thanase, former Editor of **feedback** magazine,
and
Gerry Villiers, former Manager of the SDR Program,

All the Best in your Future Endeavours

AGING AIRCRAFT

→ Ramon (Ray) Raoux, P. Eng.

Background

Aging aircraft have been with the aviation community for many years. On the basis of the generally accepted definition that an aircraft can be considered "aged" when it becomes 20 years old, we must then accept that we have been living with aging aircraft (and their issues) for over 70 years. It must be a certainty that the designers never expected their aircraft to remain in service indefinitely, but some have. Their structural integrity is being assured by the safe life, fail-safe and damage tolerance concepts as indicated; more extensive information on these concepts can be found in Advisory Circular 25.571-1C.

The life concept is applied to components that the design and inspection concepts for ensuring structural integrity have evolved over the years. The safe life concept is applied to components that are not normally subject to any inspection programs related to fatigue, but is rarely applied in the structure of transport category aircraft. Landing gears are the exception and are typically designed around the safe life concept.

The fail-safe concept is based upon designed-in redundancy in the structure such that a fatigue failure in one component will not result in a catastrophic failure, i.e., the loads are then transferred to other structural components. General maintenance programs to cater for normal wear and tear usually address the airworthiness of fail-safe components and it was assumed that the designed redundancy would not have deteriorated.

Damage tolerance concepts are based on the ability of structure to tolerate deterioration (such as due to corrosion) until any fatigue can be detected based upon specific and mandatory inspections as determined by fracture mechanics and probability of detection.

Aging aircraft issues have really only come to the forefront of the aviation community in the past 25 years and they have essentially been associated with large transport (FAR 25) category aircraft. It was the 1977 in-flight structural failure of a Boeing 707 air freighter in Africa that reminded the aviation community of the special needs of older aircraft. In conjunction with previous criticism over the retirement life approach applied to aircraft originally certified as being fail-safe (but with major safe-life components), this African accident of a fail-safe aircraft led to the issuance of Airworthiness Notice (AN) No. 89 in 1978 by the British Civil Aviation Authority. The intent of AN No. 89 was to permit the continual certification (and hence eligibility for a Certificate of Airworthiness) of older aircraft without having restrictions applied to their operational life. The essence of AN No. 89 was to require a "structural integrity audit" or "review" where fail-safe structural members were considered to be critical. This review was also to consider other aspects that could affect the structure such as the effects of operational damage and environmental deterioration including corrosion. In effect, this was the regulatory forerunner of the requirement for what we know of today as Supplemental Inspection Programs (SIPs) (additional maintenance requirements developed to inspect for fatigue cracks) and the corresponding Supplemental Structural Inspection Documents (SSIDs).

Canadian Experience

Aging aircraft issues were brought to the attention of the Canadian aviation community in 1987 when a 43 year old DC-3 experienced an in-flight wing separation near Pickle Lake in northern Ontario. The wing separation occurred at a location that was the subject of mandatory periodic radiographic inspections; the radiographs from the previous inspection indicated the presence of fatigue cracking and missing fasteners. The investigation findings led to corrective action in several areas. Foremost, it was recognized that reliance on inspections indefinitely could not be accepted, if terminating actions or structural modifications can negate the need for inspections. Also, a better understanding of the capability of various non-destructive testing (NDT) methods by personnel involved with all aspects of aircraft maintenance was recognized and regulatory changes were implemented to address this need.

International Focus

It was the Aloha Airlines B737 accident in 1988 that put aging aircraft issues onto the international stage and introduced this concern to the global traveling public. This accident not only highlighted the adverse effect of undetected corrosion on the original design criteria that served as the basis of certification, but also confirmed the existence of widespread fatigue to the aviation industry. This was now recognized as an issue(s) too big to be addressed by just one organization (Federal Aviation Administration (FAA)) and the result was the establishment of a series of working groups for eleven aircraft models to formally address all the factors that could prevent an aircraft from being operated indefinitely.

These working groups were comprised of representatives of airworthiness authorities (FAA, Transport Canada and several European civil aviation authorities), aircraft manufacturers (Airbus, British Aerospace, Boeing, Douglas, Fokker, Lockheed), and airlines (Air Canada, American, Canadian, United etc.); in effect, the aviation industry came together to address a common concern. One of the first areas to be looked at was existing non-mandatory service bulletins that provided information on inspections, and modifications that served as terminating action for the inspections. Experience had shown that inspecting to detect a known problem could only be considered a temporary solution that should not be relied upon indefinitely; the preferred solution was to modify or fix the problem permanently.

Supplemental Inspection Programs had been developed for many aircraft during the previous eight years; they were reviewed and updated to address potentially new locations of fatigue damage. These SIPs were doing their job but they were based on otherwise essentially pristine structure and it became clear that additional measures were needed for older aircraft.

Corrosion Protection and Control Program

The development of Corrosion Prevention ("Protection") is probably a more accurate term) and Control (CPC) Programs was the initial major addition to the on-going maintenance requirements for older aircraft. These CPC Programs comprise a series of repetitive maintenance actions (Corrosion Tasks (CT)) specifically dedicated to inspecting for the presence of corrosion and its removal from, or replacement of, the affected component. The inspection interval for these CT, depending upon the area, can vary from 1.5 to 10 years. The CT frequently includes the application of a CPC compound such as Dinitrol or LPS-3.

Repairs, rather that outright replacement, to aircraft structure are a common aircraft maintenance practice; however, it was recognized that not all repairs were designed to be damage tolerant (i.e., to be inspectable) and they could subsequently be the source of future grief. Hence, Repair Assessment Programs were developed to assess and categorize pressurized fuselage repairs as being:

- acceptable/permanent (inspectable as is);
- acceptable/permanent, but requiring supplemental inspections to ensure continued airworthiness;
- temporary/time limited, requiring supplemental inspections pending rework or replacement.

Widespread Fatigue Damage

Widespread fatigue damage (WFD), affecting large aging transport aircraft over 75,000 pounds, is being addressed by FAA rulemaking. The WFD concern relates to a scenario where a series of small fatigue cracks, in the absence of highly-reliable small crack detection techniques, could lead to unacceptable reduction in residual strength below the damage tolerance safety requirements. The objectives of a WFD program are to identify the primary structures susceptible to WFD, to predict the time the WFD is expected to occur and to establish additional maintenance actions (inspections and modifications/replacements) as necessary to preclude WFD.

The maintenance requirements that were developed and became mandatory have created an extensive, but not unbearable, workload for operators of large transport category aircraft. However, it was felt that compliance with these additional maintenance activities were needed to ensure the continual structural airworthiness of these aircraft as they aged; the efforts of the working groups that developed these additional programs have been vindicated. These additional maintenance requirements were initially applicable only to 11 specific large transport category aircraft models, but the lessons learned are being used to assess the structural integrity of commuter and business jet category aircraft as they age.

There are also lessons that can be applied to general aviation aircraft as well. The most obvious would be the selective use of CPC compounds such as in areas where corrosion has subsequently been found or areas that could be prone to corrosion. A subsequent Feedback article will review the currently on-going activities to address concerns with aging aircraft systems (presently wiring issues) and lessons that can be applied to all aircraft.

***Ray Raoux** is the Manager, Corrective Action Support, Continuing Airworthiness, Aircraft Certification,*
Transport Canada

***Photos:** Courtesy of J.R. (Rod) Digney*

heads *up*

While taking off from a lake near the owner's home, the Cessna 172 float plane settled and touched hard on the water causing considerable damage.

OWNER'S DESCRIPTION OF THE INCIDENT:

"Toward the end of the takeoff run, with the aircraft up approximately two feet off the water, the aircraft settled back down due to unstable air. At this point, a noise was heard and the aircraft became unstable on its gear. I then aborted takeoff. As the aircraft slowed down and the lift dissipated, the left wing suddenly dipped down and came in contact with the water. This caused the aircraft to veer left abruptly, displacing a considerable amount of water, but I managed to keep the aircraft from inverting. This caused all the fittings on the float struts to fail. The final resting position of the aircraft was engine pointing up, tail and left wing partially submerged. The aircraft was towed back to my property where it was beached. Upon inspection it was found that both cross wires were broken (left lower to right upper side)."

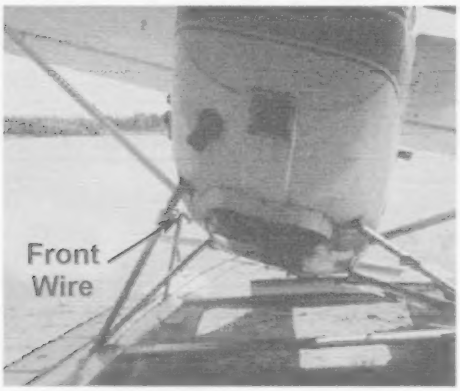

INVESTIGATOR'S NOTES:

"During my follow-up to this incident, I discovered several interesting points:

1. These floats had not been removed from the aircraft in at least 10 years. They had been inspected but no hardware was removed for detailed inspection.
2. During a conversation with a very experienced local AMO, I was told that (in his opinion) this was not a particularly uncommon problem, (he had seen at least 2 others) and that it was also easy to over-torque these wires causing damage to both the wire and the aircraft structure.
3. The broken wires in question and one additional wire from another incident were forwarded to the Transport Safety Board (TSB) lab for analysis. The report stated that the failures were "consistent with overload failure of a nominally ductile material" in the area just below the hex-shaped wrench flats below the threads.
4. In the mid 1970s (73?) EDO changed the size of the wires as the result of a couple of incidents on the west coast of the USA where the wires broke and the float rigging collapsed.
5. EDO never sent out a bulletin, or service letter, that I am aware of, describing this problem, or advising of the new stronger (5/16") wires.

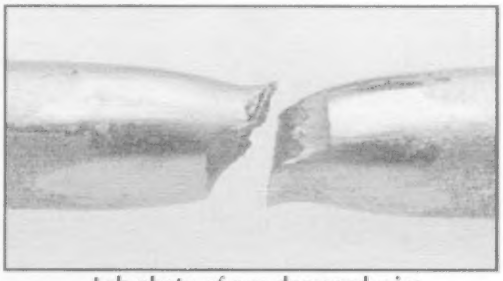

Lab photo of one damaged wire
(Note the reduction in diameter at the area of the break)

EDO drawing # 69480 dated 12/27/68; change order 1306-1 (dated 1973) shows the 5/16" wire as an alternative.

- Original forward wire P/N 3392-4924, 1/4 dia tensile strength 3400 lbs (no longer available from EDO)
- Replacement forward wire P/N 3394-4900, 5/16 dia tensile strength 6100 lbs (current part available from EDO)
- Original aft wire P/N 3392-5150, 1/4 dia tensile strength 3400 lbs (no longer available from EDO)
- Replacement aft wire P/N 3394-5125, 5/16 dia tensile strength 6100 lbs (current part available from EDO)

It is my understanding that only 5/16 wires have been supplied by EDO as replacements since mid 1970s, although I have been told that 1/4" wires may still available from other sources (used?)."

Transport Canada recommends that owners and maintainers inspect these float brace wires carefully for any signs of damage in this area and be particularly careful for signs of potential overload failure in the area adjacent to the wrench flats, if a hard landing has been reported. Any suspect wires should be replaced with the updated parts from EDO.

FAA unapproved PARTs notification

These notices were published through the FAA SUP Program Office, AVR-20
Telephone (703) 661-0580 Fax (703) 661-0113

UPNs are posted on the Internet at http://www.faa.gov/avr/sups/upn.cfm

NUMBER	MANUFACTURER	AFFECTED PRODUCT	ISSUE DATE (YR/MM/DD)
1999-00310	Reverse Engineering. Inc.	Boeing 747 Engine generator rotor shaft.	2001/07/11
2001-00059	Marchini Instruments Corporation	Aircraft parts that were repaired, overhauled, or inspected and approved for return to service by Marchini Instruments Corporation	2001/12/06
2001-00163	T.V.K. Aviation Supply Inc. (TVK)	Rolls-Royce Allison 501 D-13 turbine engines.	2001/12/06
2000-00152	Cadmar Aerospace, Inc.	Pratt & Whitney JT8D engines.	2002/01/01
2001-00209	Panaviation, S.r.l.	All aircraft.	2002/02/04
1999-00092	Allied Signal	Boeing 707.	2002/02/24
2001-00143	McRae's Aerocrafts, Inc	Aircraft emergency equipment.	2002/03/04
1999-00154	Goodrich Aerospace	Aircraft appliances that were repaired, overhauled, or inspected and approved for return to service by Goodrich Aerospace Component Overhaul and Repair	2002/04/29
2002-00044	C&M Marine, Inc.	Emergency inflatable life rafts.	2002/07/01
2002-00073	Honeywell/AVCO Lycoming	Honeywell / AVCO Lycoming LF507 series and ALF502 series turbine engines. LF507 and ALF502	2002/07/01
2002-00120	Renzco, Inc (Renzco)	Parts maintained and approved for return to service by Renzco, Inc.	2002/07/25
2001-00089	Nestor Camacho Jetpower Services, Inc.)	Boeing 737.	2002/08/12
2001-00139		Hot air balloons.	2002/09/17
2001-00229	Airframe Component Maintenance, Inc.	Boeing 707, 727, and 737; Douglas DC-8, DC-9, and DC-10.	2002/10/15

suspected *unapproved PARTs*

The submitters of the following Service Difficulty Reports (SDRs), received during the previous quarter, indicated that an unapproved part (SUP) was suspected. The list is provided here for information only and should not be construed as an identification of confirmed unapproved parts. In Canada, SUPs should be reported on a regular SDR form, indicating your suspicion of an unapproved part.

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
AEROSPATIALE						
AS 350BA	5302	LOWER FRD SKIN	182704	FRACTURED	20010228009	PAC
AS 350B2	2000	CABLE ASSY6	503270411	WORN	20021029005	WST
ALLISON						
250-C20	7323	GOVERNOR	252466715H	FAILED	20020501012	ONT
250-C20B	7250	PT INNER SHAFT	A23037403	FAILED	20011030007	CTR
501-D13	7300	LOCK GEAR ASSY	8575472	WORN-PIN HOLE	20020612004	CTR
AVCO LYCOMING						
IO-360-L2A	7314	GAS PUMP	LW15473	FAILED	20020610004	QUE
O-320-B2C	8550	OIL FILTER	CH48108	SEPARATED	20021115002	PAC
O-320-E2D	8011	SHAFT BEARING	0	MISSING	20020325003	PAC
TIO-540-J2BD	7414	CASE	1068291013	BROKEN	20011203001	ATL
T5313B	7100	COMPRSR CASE	110121004	UNAPPROVED	20020320001	PAC
T5313B	7100	1ST STG GP BLADE	110013206	CRACKED	20020320002	PAC
T5313B	7200	2ND GP NOZZLE	112000014	FAILED	20021113003	OTT
T5313B	8510	IMPELLER HOUSING	110137003	UNAPPROVED	20020320003	OTT
T5317A	7200	1ST-STG PT NOZZLE	119005007	FAILED	20021113004	PAC
BEECH						
	1000	WASHER ASSY	6147514435	FAILED	20020913005	WST
A100	0000	HSI	RD444	FAILED	20020408010	QUE
A100	1400	L/H AFT CABLE AS	1155240653	DOUBLE CUT THREAD	20020426002	ONT
A100	2435	STARTER GEARSHAFT	3021565	WORN	20020624002	ONT
C90A	3020	ANTI-ICE TUBE	9091009913	CRACKED	20021030004	ONT
1900D	3211	SOCKET	5081032019	CRACKED	20020705002	PAC
23	2000	BOLT	AN6H43AS	NEW THREAD CUT	20011109016	ONT
300	3230	ELECTRIC MOTOR	710501	FAILED	20020828006	PAC
BELL						
204B	6420	STATIC STOP	20401077411	NO SPLINES	20011121003	WST
212	6230	MAST SEAL PLATE	204040369009		20020104023	PAC
212	6510	BOLT	204040612001	BENT	20011211002	WST
407	6220	CASE ASSEMBLY.	406040406109	NEW	20020605007	OTT
427	6520	CASE ASSEMBLY	406040406109	NEW	20020610008	OTT
BF GOODRICH						
3D147211	3000	DIODE	IN5550	FAILED	20020109004	WST
BOEING						
69B962589	2000	GEARBOX ASSY	69B962589	UNABLE TO FIT	20010814001	OTT
767 35H	2133	GEAR SHAFT SPUR	20473124	SPLINE MISSING	20010105002	PAC
BULKHEAD FITTING						
	0000	BULKHEAD FITTING	3561823	FAILED	20020527002	WST
CANADAIR						
CL600 2A12(601)	2133	SECOND.OUTFLOW	62344	FAILED	20020220012	ONT
CESSNA						
A185E	2842	FUEL TRANSMITTER	774000068	FAILED	20021004008	WST
172RG	3211	PIVOT	0	UNAPPROVED	20020325004	WST
208B	2497	INLINE CONNECTOR	0	HEAT DAMAGED	20020607008	WST
208B	5310	LWR FWD DOUBLER	26530351	CRACKED	20020128004	WST
208B	5713	STRINGER, LEFT H	262200063	CRACKED	20021210003	ONT
401B	2000	SPACER	85921701	WRONG PART	20010921009	CTR
DEHAVILLAND						
DHC 2 MKI	2731	BOLT-STAINLESS	AN3C6A	SHEARED	20020104001	PAC
DHC 6	2510	FORK LAP BELT	C3FF3143	FAILED	20020304003	WST
DIAMOND						
DA 20 C1	5540	RUD HINGE BRACKET	2055450300	CRACKED	2 SDRs	ONT
DOUGLAS						
DC9 83	2910	HYDRAULIC LINE	7936907530	CRACKED	20021007012	QUE
DYNAMICAIR						
M4582C1	0000	BEARING	K271B200L	UNAPPROVED	2 SDRs	OTT
ELECTROMECH						
EM630	0000	BEARING	900012	UNAPPROVED	2 SDRs	OTT
EMBRAER						
EMB 110P1	3243	PARK BRAKE VALVE	13450A	LEAKING	20020222003	QUE
	0000	FITTING ASSEMBLYY	7955300	INCORRECT PARTS	20020722011	ONT
GARRETT						
TPE331-10UA-511G	7261	PUMP DRIVE SHAFT	8971973	SUB STND PART	20011109010	CTR
GENERAL ELECTRIC						
CF34-3A1	7500	SENSING LINE	6019801455	LEAKING	20021015005	ONT

suspected *unapproved PARTs (cont'd)*

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
GOODRICH						
23048015	0000	ARMATURE	230481030	BREAKDWN OF SHAFT	20021101010	WST
HARTZELL						
HC-E2YR-2RBSF	6120	NUT	B3807NO	TORQUE	20011003001	OTT
HC-E4A-3I	6114	SETSCREW	B70192	CRACKED	20021121007	ONT
HINGE HALF						
	0000	HINGE HALF	C6TE105329	WRONG PART	20020507016	WST
HONEYWELL						
113063024	0000	POWER SHAFT	110080004	SPLINE WORN	20020220005	PAC
113063024	0000	POWER SHAFT BOLT	114006714	SATISFACTORY	20020220002	PAC
113063024	0000	SIDE SUPPORT	115028007	SATISFACTORY	20020220003	PAC
13063024	0000	2ND STG GP NOZZLE	112000014	SATISFACTORY	20020220004	PAC
HUGHES						
369D	6310	SPRAG ASSY	369D25351	BROKEN	20020430005	PAC
369D	6520	T/R OUTPUT GEARSHAFT	369D25430	BROKEN	20011012009	PAC
LEARJET						
45	5210	BELLCRANK	4552100164001	MISSING	20020418002	ONT
LUCAS						
23046020	0000	BEARINGS	03601018	UNAPPROVED	20020903015	OTT
MAGNETIC PLUG						
	0000	MAGNETIC PLUG	2005T33P01	NEW	20021203010	PAC
MCCAULEY						
1A102/OCM6948	6111	BLADE	0	WELDED	20021119005	ONT
P&WC						
3036376	0000	NIL/UNKNOWN	0		20020418003	OTT
PILATUS						
PC 12 45	2435	STARTER-GENERATOR	23085024	WRONG CONFIGURATION	20011217013	ONT
PIPER						
PA28 161	0000	BATTERY	G30S	NEW	20020508006	ONT
PA42	3246	BOLT	AN620A	CRACKED	20020405005	ONT
557361	0000	CONNECTOR	0		20020910003	OTT
7959102	2500	BELLCRANK ASSY	7634700	CRACKED	20020617005	ONT
PLESSEY						
BP1RSMK6	0000	BEARING	501413303	UNAPPROVED	4 SDRs	OTT
PLIATS						
	0000	ANCHOR NUTS	9384237203	BROKEN	2 SDRs	WST
PRATT & WHITNEY						
PT6	0000	3016992	0	UNAPPROVED	20021022001	OTT
PT6	7200	LCF PARTS	0	FAILED	20021127004	OTT
PT6A-20	7314	GEAR & COUPLING	0	WORN	20021120007	ONT
PT6A-21	7160	ANTI-ICE TUBE	9091009913	CRACKED	20021022003	ONT
PT6A-21	7510	ANTI-ICE TUBE	9091009913	CRACKED	3 SDRs	ONT
PT6A-34	7240	FUEL NOZZLE	301474	FAILED	20020903002	QUE
PT6A-67B	7313	FUEL NOZZLE	3038495X	RUSTY	2 SDRs	PAC
PWC						
VARIOUS	0000	RIVET, TUBULAR	3031098	NEW	20021223002	OTT
ROLLS ROYCE						
	0000	FUEL CONTROL	252464429	OVERHAULED	2 SDRs	OTT
	0000	NONE	0		2 SDRs	OTT
TAY MK 611-8	7230	FAN BLADE	JR31983	UNAPPROVED	20020322001	OTT
23057344	0000	FCU	0		20021009004	OTT
23057344	0000	FUEL CONTROL	252464429	OVERHAULED	16 SDRs	OTT
SUNSTRAND						
5007024620	0000	BEARING	13863352	UNAPPROVED	20020903014	OTT
TURBOMECA						
ARRIEL 1B	7421	IGNITER	9550175400	UNSERVICEABLE	20021024002	QUE
UNITEDINST						
5934P3A83	0000	GLASS, COVER	1114300700	UNAPPROVED	20020926004	OTT
UNKNOWN						
UNKNOWN	2550	SIDE PLATES	UNKNOWN	UNAPPROVED	20020917007	PAC
UNKNOWN	7414	CARBON BRUSH	AM3215	FAILED	20020607010	WST
UNKNOWN						
MS208194	0000	SLEEVE	MS208194	FAILED	20021101012	WST

equipment ADs

Transport Canada endeavours to send copies of new ADs which are applicable in Canada to the registered owners of the affected products. This type of AD is often only distributed to our regional offices because the owners of aircraft affected by equipment/appliance ADs are not generally known.

The following new equipment ADs have been received by Transport Canada in the last three months. Maintainers and Operators of the affected products are encouraged to obtain further information or a copy of the ADs from their regional TC office, their local TCC, their PMI, or from the Civil Aviation AD website at:

http://www.tc.gc.ca/civilaviation/certifcation/continuing/ad.htm

MANUFACTURER	AD NUMBER	ORIGIN	DESCRIPTION
ANJOU AERONAUTIQUE	2002-104(AB)	FR	SAFETY BELTS & RESTRAINT SYSTEMS TYPE 343-1 ANJOU AERONAUTIQUE SB 343-1-25-01
ANJOU AERONAUTIQUE	2002-105(AB)	FR	SAFETY BELTS & RESTRAINT SYSTEMS TYPE 343 SB 343-25-02
APIC	2002-453(B)	FR	AUXILARY POWER UNIT EXHAUST TAILPIPE EJECTION CRACKS IN INNER LINER
B/E AEROSPACE	002-11-2001	UK	SKYLUXE II (AA2) PASSENGER SEATS - HYDROLOK PIN ORIENTATION.
BREEZE EASTERN AERO	2002-20-05	US	ALL HELICOPTERS - RESCUE HOIST, PART BL-16600 BREEZE EASTERN CUSTOMER AEROSPACE CAB-100-56
BRITAX SELL GMGHB	2000-379/2	GY	GALLEY EQUIPMENT- WATER BOILER, COFFEE MAKER, REMOTE WATER BOILER, & BEVERAGE MAKER
BRITISH AEROSPACE	002-12-2001	UK	SUTTON HARNESS: DETERIORATED SAFETY HARNESSES - REFER ALSO TO CAA AD 007-03-99
CHELTON	001-05-2001	UK	VOR/LOC HIGH PASS FILTER PART NO. 7-429/1 INST'N -- REF: MSB NO. CEL 01/2001 ISS.2
COLLINS AVIONICS	91-10-01	US	TCAS II MODIFICATION OF COLLINS TTR-920 COMPUTER
DUNLOP AEROSPACE LTD	AHA1837-32-1157 Rev 3	UK	MAIN WHEEL P/N AHA1837 - MODIFICATION TO MAINTENANCE LUBTORQUE
EUROCOPTER CANADA	CF-2000-06R1	CF	TRANSPORT CANADA STC SH96 32 - EUROCOPTER CANADA LEFT-SIDE PILOT CONFIGURATION KITS
GARMIN INTERNATIONAL	2001-23-17	US	MODIFICATION OF GARMIN GNS 430 UNITS SERVICE BULLETIN 9905 REVISION A
GENERAL AIRCRAFT	CF-81-29R2	CF	EMERGENCY LOCATOR TRANSMITTER - REMOVAL OF LITHIUM BATTERIES - AIRWORTHINESS NOTICE # BO14
GENERAL AIRCRAFT	CF-1978-01	CF	SUPERSEDED BY AD CF-81-29R2
GENERAL AIRCRAFT	CF-1983-26	CF	SUPERSEDED BY CF-83-30
GENERAL AIRCRAFT	CF-1983-30	CF	SUPERSEDED BY CF-83-31R2 - LAVATORY FLUSH PUMP
GOODYEAR	2001-18-05	US	INSPECT / REPLACE GOODYEAR FLIGHT EAGLE TIRES SN# 0168XXX THRU 0185XXX-- GY SB 2001-32-006
GPI	2002-367(B)R1	FR	ALL 2M2N CARGO NETSP/N# M1.13.01.2000.1300B & 2G1N CARGO NETS P/N# G1.13.03.2000.1300.A
HAMILTON SUNDSTRAND	2002-15-02	US	FORMERLY SUNDSTRAND, TURBOMACH, AND SOLAR -T62T SERIES AUXILIARY POWER UNITS
HONEYWELL	2002-13-07	US	INERTIAL REFERENCE UNITS-POWER LOSS, - ASB HG1075AB-34-A0013, OR -A0005
HONEYWELL	2001-10-09	US	KC 225 AFCS - UNDESIRABLE AUTOTRIM COMMAND - BULLETIN NO. 472 ALERT REV. 1

equipment ADs (cont'd)

MANUFACTURER	AD NUMBER	ORIGIN	DESCRIPTION
INNOVINT INTERIORS	2001-351(B)	FR	BABY BASSINETS - PIP PIN MODIFICATION SB 7250-25-002 AND SB 7250-25-003
JANAERO	2001-08-01	US	14D11 OR 23D04 FUELREGULATOR AND SHUTOFF VALVES INSTALLED TO B SERIES CUMBUSTION HEATERS
JANAERO	2001-17-13	US	14D11 OR 23D04 SERIS FUEL REGULATOR AND S/O VALVES INSTALLED TO B SERIES CUMBUSTION HEATERS
MARS SPOL SRO	T-039/2002R1	CK	RESCUE PARACHUTE - EXCLUSION FROM OPERATION P/N# ATL-88, ATL 88/92-S, ATL-88/90
OVERLAND AVIATION	2001-22-14	US	FIRE EXTINGUISHING SYSTEM BOTTLE CARTRIDGES INSTALLED TO WALTER KIDDE FIREX BOTTLES
POLTRONE	2001-479	IT	VISUAL INSPECTION ACCORDING TO AVIOINTERIORS SERVICE BULLETIN N.312/912-05 REV.1
RIBECO CARGO EQUIP'T	2002-303	GY	PRODUCTIION OF AIR CARGO PALLETS AND AIR CARGO NETS WITHOUT THE REQUIRED AUTHORIZATION AIR CARGO PALLET 7-2ALP-L-30-(X)
ROCKWELL COLLINS	2002-14-19	US	AIR DATA COMPUTERS:ADC-85, ADC-85A, ADC-850D, ADC850F - SERVICE BULLETIN NO. 62 R2
ROCKWELL COLLINS	2001-15-17	US	CTL-92 TRANSPONDER CONTROL PANELS- MODIFY THE ALTITUDE ENCODER INPUTS SB.33(CTL92-34-33)
ROCKWELL COLLINS	2002-06-05	US	MODE C 621A-3 TRANSPONDER P/N 522-2703-(ALL) SERVICE BULLETIN 621A-3-34-21 REV 1.
ROCKWELL COLLINS	2002-06-06	US	TDR-94 MODE S TXDR - CPN P/N 622-9352-004 TDR-94D MODE S TXDR - CPN P/N 622-9210-004
ROCKWELL INTL	2002-20-09	US	ADAPTIVE FLIGHT DISPLAY UNITS - AFD-3010 - PREMATURE FAILURE OF ASIC DEVICE
ROCKWELL INTL	2002-22-13	US	MODEL FMC-4200, -5000, -6000 RETENTION OF ORIGINAL INFORMATION FOLLOWING EDITING
SICMA AERO SEAT	2002-504(AB)	FR	CRACKS FOUND ON CENTRAL SPEADERS SEAT TYPES 90XX AND 92XX SB 92-25-005
SICMA AERO SEAT	2001-605(AB)	FR	PASSENGER SEAT BACKREST LINKS - LIFE LIMIT (16 G SEATS) SERVICE BULLETIN 90-25-012 R3
SICMA AERO SEAT	2001-613(AB)	FR	PASSENGER SEAT BACKREST - LINK REPLACEMENT (9G SEATS) SERVICE BULLETIN 90-25-013R2
SICMA AERO SEAT	2002-471(AB)R1	FR	PASSENGER SEATS - MODIFICATION OF BELTS ATTACHMENT FITTINGS
SICMA AERO SEAT	2002-505(AB)	FR	PASSENGER SEATS 9801 AND 9802 SERIES SB 98-25-014R1, 98-25-009, 98-25-008
STRATOS 07 S.R.O	048/2002	CK	PILOT RESCUE PARACHUTE JU-40. REMOVE FROM SERVICE PARACHUTES PRODUCED AFTER 1997/04/01
TITEFLEX CORPORATION	2002-22-12	US	INSPECTION OF ALL HIGH AND MEDIUM PRESSURE HOSES AS PER TITEFLEX CORPORATION SB 73-2
UPS AVIATION	2001-14-51	US	DSP SOFTWARE - APOLLO SL30 VHF NAV/COMM RADIO UPS AVIATION TECHNOLOGIES, INC. SB 2001-003

service difficulty *reports*

aircraft

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
AERO COMMANDER						
500S	3250	SPACER	7500801	STUD SHEARED	20020507021	ONT
690	3250	ANTI-SHIM FRC	9937	DIRTY	20020507008	WST
690	5530	SKIN	410008171173	CRACK	20021212003	PAC
690	5533	VERTICAL STAB	410008513	CRACK	20021029006	PAC
690A	5210	PUSH RODS	90000949722	BENT	20011116001	PAC
690A	5532	SKIN	410008173	CRACKED	2 SDRs	PAC
690A	5600	WINDSHIELD	36004313SS	CRACKED	20020829007	WST
AERONCA						
11AC	5711	FRONT SPAR	3146R	CRACKED	20020506005	ONT
15AC	5711	SPAR CAP	22840111	CORRODED	20020507019	ONT
7AC	5711	WING SPARS	0	CRACKED	20020730005	ONT
AEROSPATIALE						
AS 332L	6720	STRUCTURAL PEDAL	0	CRACKED	20020125007	ATL
AS 350B	2913	BEARING	62052RSIMT47CR	BROKEN	20011105017	ATL
AS 350B	6210	M/R BLADE	350A11001007	CRACKED	20011108001	PAC
AS 350B	6220	BEARING	RL12R	CORRODED	20021108015	WST
AS 350B	6220	SPHERICALTHRUST BEARING	704A3363320861	CRACKED	20021108014	PAC
AS 350B	6520	CONTROL LEVER	350A33105803	CRACKED	20011029017	PAC
AS 350B	6520	MAG CARBON SEAL	770441	CRACKED	20011029011	PAC
AS 350BA	2910	HYDRAULIC BELT	704A33890004	2 SDRs	20020315001	VAR
AS 350BA	2911	ACCUMULATOR	704A34240015	LEAKING	20011011010	QUE
AS 350BA	5302	FWD UPPER SKIN	350A23002021	CRACKED	20011029016	PAC
AS 350BA	5412	FIREWALL	350A5801100802	CRACKED	20020801013	QUE
AS 350BA	6220	ATTACH SCREW	350A37124520	BROKEN	20011102003	QUE
AS 350BA	6410	BLADE SKIN	355A12004008	CRACKED	20011029020	ONT
AS 350BA	6720	BEARING/ BAFFLE	VARIEDMULTIPLE	TSI 1041.5	20020826009	QUE
AS 350B1	2435	DRIVE END BELL	P6007052	CRACKED	20021125006	WST
AS 350B1	6220	BUSHING	704A33633180	DEBONDED	20011116009	PAC
AS 350B1	6520	TAILROTOR GEARBOXASSY	350A33020005	GEAR SET SCRAP	20020801012	ONT
AS 350B1	6720	T/R BELLCRANK	350A33105803	CRACKED	20020627001	PAC
AS 350B2	1200	BONDING STRAP	350A311851	FRAYED	20011127010	WST
AS 350B2	2432	BOLT	22208BC040010L		20020104004	PAC
AS 350B2	2910	HYDRAULIC BELT	704A33690004	DEBONDED	20020326001	PAC
AS 350B2	3400	BLIND ENCODER	8800T	FAILED	20011102004	QUE
AS 350B2	5210	DOOR POST	0	CRACKED	20021016028	PAC
AS 350B2	5210	GAS STRUT	SWF653150214P3H	FAILED	20020501001	WST
AS 350B2	6410	T/R BLADE ASSEMBLY	355A12004008	UNABLETOBALANCE	20020313002	PAC
AS 350B2	6720	BELLCRANK	350A33105803	WORN	20011017002	WST
AS 350B2	6720	T/R CNTRL LEVER	350A33105803	CRACKED	20011116010	PAC
AS 350B2	6720	T/R TELFLEX CABLE	704A34130180	BINDING	20020507006	PAC
AS 350B3	2913	HYDRAULIC BELT	704A33690004	SEPARATED	20020904003	WST
AS 350B3	6220	STARFLEX	350A31190703	DEBONDED	20020211015	ONT
AS 350B3	6410	TAIL ROTOR3	55A12005004	CRACKED	20020102001	ONT
AS 350D	2300	ELT	0	FAILED	20020515001	PAC
AS 350D	5230	LATCH	D2586	FAILED	20011114001	QUE
AS 350D	6710	FRICTION ASSEMBLY	350A2705510802	FAILED	20011109008	WST
AS 350D	6720	BEARING	60102RS1MT33CA	ROUGH	20020321004	ONT
AS 355F1	2550	L/H DOOR	D21761	MISSING	20020128002	PAC
AS 355F1	6220	BUSH	358947P	DE-BONDED	20020911002	QUE
AS 355F1	6410	TAIL ROTOR ASSEMBLY	355A12004008	CRACKED	20021119003	PAC
AS 355F1	6510	TAIL ROTOR DRIVE	350A2310534551	ELONGATED	20020828005	PAC
AS 355F1	6700	R/H BALL JOINT	0	WORN	20020521008	PAC
AIR TRACTOR						
AT 802	2497	MAIN BUSS CABLE	0	CHAFED	20020311003	PAC
AT 802	2750	RUBBR COUPLING	B10006	SPLIT	20011127005	PAC
AT 802	2820	FUEL LINE ASSEMBLY	5129811	CHAFED	20011210018	PAC
AT 802	3210	WHEEL ASSEMBLY	4279	CORRODED	20020201025	ATL
AT 802	3210	WHEEL HALF	16212401	CORRODED	20020128001	PAC
AT 802	3220	BOLT	AN5C32A	WORN	20020116005	ATL
AT 802	5530	BRACE PLATES	302511	CRACKED	20020606020	PAC
AIRBUS						
A300B4 203	2130	GRND AUX VALVE	88003BO201	INOPERATIVE	20020807005	QUE
A300B4 203	2820	FUEL LINE	9170M59P03	BROKEN	20020215011	QUE
A310 304	2400	CIRCUIT BREAKER	SP4677033A	FAILED	20011101021	QUE
A310 308	0000	HYDRAULIC LINE	A2718021000900		20011211024	QUE
A310 308	2530	WATER HEATER	24E507009G01		20020708009	QUE
A310 308	2741	THS-SENSOR,POSIT	MO48Z1402		20020718006	QUE
A310 308	2761	SPOILER VALVE GR	30629100	UNSERVICEABLE	20020308003	QUE
A310 308	2780	SFCC	4907905		2 SDRs	QUE
A310 308	2800	FUEL VALVE	B97E51655	CORRODED	20020528007	QUE
A310 308	2820	ISO VALVE	D97C00501		20020604007	QUE
A310 308	2912	HYD. PUMP GREEN	3508807	LEAKING	20011211027	QUE
A310 308	2997	ELECTRICAL CONNE	BNK12F1203SD	BURNT	20020722003	QUE
A310 308	3230	CYLINDER NLG	C23199104		20020712005	QUE
A310 308	3246	BOLT	C20211170		20021108021	QUE
A310 308	3300	FLUORESCENT TUBE	F15T12WW	U/S	2 SDRs	QUE
A310 308	3310	BALLAST	308135	DISCOLORED	20020315011	QUE
A310 308	3460	NIL	0		20020221012	QUE
A310 308	4930	TUBE ASSEMBLY	A2827042100600	CRACKED	20020514001	QUE
A310 308	5230	LINING ASSEMBLY	A5397822300600	MISSING	20020920001	QUE
A310 308	5240	DOOR	A2151060200200	MISSING	20020117017	QUE
A310 308	5754	PANEL	A5724853200100		20020705003	QUE
A319 112	2200	ACTUATOR	0		20020801005	QUE
A319 112	3251	CONTROL UNIT	D23119750		20021011001	QUE
A319 114	2720	RUDDER CONTROL S	0		20020104016	QUE
A319 114	2900	CHECK VALVE	374612	LEAKING	20020530003	QUE
A319 114	3441	ADIRU	HG2030AD09		20020528009	QUE
A319 114	3460	FLT. MANAGEMENT	B546BAM0206		20020731015	QUE
A319 114	5530	L/E PANEL	D5537002500800	CRACKED	2 SDRs	QUE
A319 114	5610	WINDOW ASSEMBLY	0		20020801007	QUE
A320 211	0000	ENGINE	0	DENTED	20011019006	QUE
A320 211	0000	NIL/UNKNOWN	6714C01	FAILED	20020228006	QUE
A320 211	1200	SENSORS	0	OVERGREASED	20020121006	QUE
A320 211	2100	AIR CYCLING	757A000010		20020927006	QUE
A320 211	2210	ACTUATOR	SC47003		20020918005	QUE
A320 211	2420	IDG	740119D	OVERHEATED	20020110003	QUE
A320 211	2520	SEAT ELECT BOX	RDAX4431	HEAT DAMAGED	20020527008	QUE
A320 211	2530	GALLEY OVEN	92023895		20020731008	QUE
A320 211	2560	SLIDE ASSEMBLY	D36179107		20021016022	QUE
A320 211	2700	SIDE STICK	96500019007	FAILED	20011121020	QUE
A320 211	2730	ELEVATOR SERVO	31075217		20020801002	QUE
A320 211	2740	FITTINGS	D59981002	FAILED	20020228004	QUE
A320 211	2742	FITTINGS	D5598123320000	FAILED	20020328002	QUE
A320 211	2782	ACTUATOR	30A000002		20021115012	QUE
A320 211	2900	FLEX LINE	AE2463921J0227	LEAKING	20020315004	QUE
A320 211	2900	PACKING	NAS161212		20020530007	QUE
A320 211	2900	PTU	41010029	FAILED	20020328003	QUE
A320 211	3200	CONTROLLER	664700500A4D		20020826006	QUE
A320 211	3210	UPLOCK ASSEMBLY	201122006		20020731010	QUE
A320 211	3230	MLG SELECTOR VALVE	114079015	FAILED	20020201023	QUE
A320 211	3230	MLG UPLOCK	0	EXCESS GREASE	20011114005	QUE
A320 211	3230	VALVE	S434013100		20021008002	QUE
A320 211	3231	MLG DOOR UPLOCK	201122006	FAILED	20020201024	QUE
A320 211	3251	METERING VALVE	S3790037108		20020918003	QUE
A320 211	5230	DOOR FITTING	D5237130300200	CRACKED	20020507002	QUE
A320 211	5530	L/E PANEL	D5537002500800	CRACKED	2 SDRs	QUE
A320 211	5532	STAB L/E PANEL	D5537002600400	CRACKED	20020215005	QUE
A320 211	5610	WINDOW HEAT COMP	0		20021021007	QUE
A320 211	5700	LOCK PLATE	D5735110120000		20021211004	QUE
A320 211	5744	ANTI-ROTATION WA	D5725260120000		20021108006	QUE
A320 212	2100	PRV	6714D060000	UNSERVICEABLE	20011112001	OTT
A320 212	2130	CABINPRESSURECONTROL	90221570210		20020712004	ONT
A320 212	2130	NIL/UNKNOWN	0		20020717002	ONT
A320 212	2434	APU	4500001A	FAILED	20011203004	ONT
A320 212	5753	SEALING-FRONT	D5757185015200		20020708004	ONT
A320 231	2530	COFFEE MAKER	72012400	BURNED	20020628003	ONT
A320 231	2910	HOSE	AE7079101	RUPTURED	20020204001	OTT
A320 231	3242	BRAKE	0		20020109008	ONT
A320 231	4950	DUCT	0	LOOSE	20020620001	ONT
A320 231	5230	DOOR HANDLE	D523713400000		20020118006	ONT
A320 231	5400	FRONT ANTI-ICE	5R0083		20020913011	ONT
A320 232	2530	AFT COFFEE MAKER	3510004409	BURNED	20020618003	ONT
A321 211	2530	OVEN	0		20021205003	QUE
A321 211	2730	COMPUTER	3945122506		20020801004	QUE
A330 243	0000	IDG	752168B		20011207005	QUE
A330 243	1420	NIL	3010VC		20020315012	QUE
A330 243	2700	FLIGHT CONTROL S	0		20020117016	QUE

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
A330 243	2810	NIL	0		20020221001	QUE
A330 243	2913	PUMP	974976		20020118007	QUE
A330 243	2913	SHAFT	861276	CORRODED	20020121009	QUE
A330 243	3260	SENSOR	848401		20020110013	QUE
A330 243	5240	DOOR ASSEMBLY	F5348614400200	MISSING	20020503006	QUE
A330 243	5270	SENSOR	848401		20021108019	QUE
A330 322	2922	O-RING	NAS161228	FRETTED	20011018006	ONT
A330 342	2913	HYDRAULIC PUMP	AE71112112CTD	LOOSE	20020307016	QUE
A330 342	2920	SELECTOR VALVE	MVT1001	CRACKED CASING	20011207004	QUE
A330 342	3222	AXLE-SLEEVE	F3225000700060	CRACKED	20011019011	QUE
A330 342	3251	SOLENOID VALVE	C247820001	LINER BROKEN	20011206002	QUE
A330 343	2330	SMU	9700029005	FAILED	20020124008	QUE
A330 343	3242	BRAKE ASSEMBLY	21577		20021218001	QUE
A330 343	5342	Y-BOLT	F53574150004		20021108005	QUE
A340 313	2750	TE FLAP CONTROL	0		20020104015	QUE
A340 313	2761	INPUT GEARBOX	697657001	FAILED	20011114013	QUE
A340 313	2780	SYS TORQUE LIMITER	0	FAILED	20011127014	QUE
A340 313	2900	ENG RETURN LINE	AE7088224	LEAKING	20020315005	QUE
BEECH						
A100	2460	BUSS FEEDER DIODE	5036430821	BURNT	20011231003	ONT
A100	2730	PULLEY BRACKET	505244325		20011108003	CTR
A100	2750	B-NUT	UNKNOWN	CRACKED	20021003009	ONT
A100	2780	FLAP TRACK	501600183	CRACKED	20021212002	ONT
A100	3200	LANDING GEAR	0		20011012002	OTT
A100	3200	LGA NUT/COVER	1158100731	UNSEATED	20020910004	ONT
A100	3210	MAIN LANDING GEAR	0		20020802003	WST
A100	3230	CONECTOR	0	DIRTY	20020626010	ONT
A100	3233	DWNLCK GUIDE PIN	50810354	CRACKED	20020912007	PAC
A100	3233	GEAR ACTUATOR	508202085	BINDING	2 SDRs	ONT
A100	3233	THRUST BEARING	115380103	FAILED	20011217001	OTT
A100	3260	BULB	327	LOOSE FILAMENT	20021203004	ONT
A100	3260	GEAR ACTUATOR	508202085	FAILED	20020322007	WST
A100	3260	SWITCH	404EN516	INTERMITTENT	20020215017	ONT
A100	3500	HOSE	503800573	BROKEN IN HALF	20011128017	WST
A100	5300	ANGLE	50440014595	SHARP EDGE	20020730002	ONT
A100	5311	FRAME	5042002857	CRACKED	20020326012	CTR
A100	5321	FLOORBOARD	50440012655	CRACKED	20020624003	ONT
A100	5520	SPLINE T EDGE	11561001012S	CRACKED	4 SDRs	ONT
A100	5540	BEAM	5042003S7	CRACKED	20021202005	ONT
A100	5541	SPAR	97630000I7	CRACKED	20021211001	ONT
A100	5610	WND SHIELD	5042006933	CRACKED	20021018003	ONT
A100	5753	NOSE RIB	5016000310	CRACKED	20011120011	CTR
A24R	2750	FLAP ARM	1695240483	BOLT HOLE WORN	20020723002	QUE
A24R	2752	FLAP MOTOR	1045641	WORN	20020608005	WST
A24R	3211	L/H BRACKET	169110001223	EXTREME CORROSION	20020723001	QUE
A24R	5300	FLAP HANDLE PEDESTAL	0	CRACKED	20020723003	QUE
A24R	5514	BEARINGS	MS244625	WORN/CORRODED	20020723005	QUE
B100	2497	WIRE	AIRDATA115VAC	CHAFED	20020220009	WST
B100	2824	CHECK VALVE	36600	PARTIALLY OPEN	20020724002	QUE
B100	3230	BRUSH	4013004	FAILED	20020729009	QUE
B100	3230	MICRO SWITCH	50301008	BROKEN	20020903005	QUE
B100	5341	L/H AFT WINGBOLT	8178610	CRACKED	20021002006	WST
B100	5600	INNER LAMINATION	5042006937	CRACKED	20011120010	WST
B100	5610	WINDSHIELD R/H	5042006938	CRACKED/GRAZED	20011212003	WST
B100	5740	BOLT	817841432SPS12	CRACKED	2 SDRs	VAR
B200	3000	HINGE ASSEMBLY	101910022I1	CRACKED	20021104010	WST
B200	5610	L/H WINDSHIELD	10138402517	OVERHEATED	20021001006	PAC
B200	5610	L/H WINDSHIELD	10138402523	SHATTERED	20020214001	ONT
B300	1100	PLATE INSTRUCT	1013840831	SERVICEABLE	2 SDRs	ONT
B300	2121	ELECTRIC MOTOR	EM6401	LOOSE BEARING	20011019004	QUE
B300	2810	GASKET	509215821	TORN	20020828010	WST
B300	3230	LDG GEAR CONTROL	1013841377	SHORTED	20020109003	WST
B300	3230	MOTOR	M710501	DIRTY	20020830012	CTR
B300	5610	WINDSCREEN	101384025	SHATTERED	20020605006	ONT
C90	3230	L/G CONTROL	A4503M95	FAILED	20021002015	WST
C90	5730	WING SKIN, UPPER	0	CRACKED	20011127006	ONT
C90A	2133	SOLENOID VALVE	0		20020618005	ONT
C90A	2211	AUTO PILOT COMPU	0		20021209005	ONT
C90A	2710	BELLCRANK	AS ABOVE	MFG DEFECT	20020410002	CTR
C90A	2823	FUEL SHUTOFF VALVE	1013890253	VALVE NOT MOVING	20011018008	ONT
C90A	2823	SHUTOFF VALVE	1013890255	NOT CLOSE FULLY	20011031016	ONT
C90A	3020	ANTI ICE TUBE	9091010017	CRACKED	2 SDRs	ONT
C90A	3230	DOWNLOCK SWITCH	903610373	OPEN	20020410001	ONT
C90A	3242	BOLT	AN37A	OK	20020903007	ONT

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
C90A	3260	LDG GEAR DOWNLOCKSW	903610373	HI RESIS CONTACT	20011101012	ONT
C90A	3457	GPS RECEIVER	066040311121	BURNT	20020307001	ONT
C90A	3510	O2 BOTTLE REGULATOR	17201041	POORLY MARKED	20011005001	ONT
C90A	5311	CROSS TIE	50420013451	CRACKED	2 SDRs	ONT
C90A	5411	ANGLE	90120003	CRACKED	20011126016	WST
D17S	3211	TUBE	0	CRACKED	20021122004	ONT
D18S	3210	TUBING/GUSSETS	804184200651	CRACKED	20020607002	ONT
D95A	5753	RIB	3516505084	CRACKED/BROKEN	20020418004	PAC
F90	5610	WINDSHIELD, LH	1013840257	CRACKED	20020226014	WST
G18S	3233	SPACER	824188896	MISSING	20020619011	QUE
100	3020	DE-ICE BOOT	50389028	BURNT	20021115021	ONT
100	3233	SCREWJACK	508202085		20020328011	PAC
100	3242	BRAKE ASSEMBLY	30146	DAMAGED	20020124003	PAC
100	3251	NOSE STEERING LINE	508201892	BROKEN	20020827004	CTR
100	3260	WIRE	NA	BROKEN	20011018009	ONT
100	5101	CHANNEL	5042001423O	CRACKED	20020529004	WST
100	5311	FRAME	5042002857	CRACKED	20020531007	WST
100	5330	SKIN	97400021101	CHAFED	20011109006	WST
100	5541	FWD RUDDER SPAR	9763000023	CRACKED	20020719006	WST
100	5751	SKIN	0	CRACKED	20020222007	CTR
1900C	2435	GEN CNTRL UNIT	51538001A	FAILED	20011012004	PAC
1900C	3230	WIRE	G16D22	CHAFED	20011018010	ONT
1900C	3244	TIRE	114800115	UNBONDED	20020403002	PAC
1900C	3260	N/G DOWN LOCK SWITCH	1003810061	LOOSE WIRE	20021009025	PAC
1900D	0000	NIL	0		20011210008	PAC
1900D	1497	KEEL WEB ASSEMBLY	1149800227	WORN BY ARCING	20020422004	ATL
1900D	1497	MISCELLANEOUS	0		20020208005	ONT
1900D	2110	MOTOR ASSEMBLY	35141000	SEIZED	20020506002	PAC
1900D	2435	STARTER GENERATOR	23078019	CRACKED	20020528003	ATL
1900D	2520	BRACKET ASSEMBLY	12139901	CRACKED	20020130007	ATL
1900D	2520	BRACKET ASSEMBLY	12139902	CRACKED	20020130008	ATL
1900D	2710	BEARING	MS276404	CORRODED	20020225001	QUE
1900D	2750	FLAP RELAY	6046H39A	INTERMITTENT	20020925004	PAC
1900D	2751	SWITCH	BZ7RW822555I8T	FAILED	20011003008	WST
1900D	2810	RIVET	MS20470AD6	SHEARED	20020515014	ATL
1900D	2820	FUEL TRANS TUBE	11892000029	CHAFED	20020405003	ONT
1900D	3110	WIRING	0	FAILED	20020122003	ATL
1900D	3200	TIME DELAY PCB	1143640681	FAILED	20020213009	PAC
1900D	3210	SOCKET	5081032019	CRACKED	3 SDRs	PAC
1900D	3230	ACTUATOR	11238002223	NORMAL	20020227005	ONT
1900D	3260	BRACKET	1148200773	CRACKED	3 SDRs	ONT
1900D	3310	PRINTED CIRCUIT	1013645801		20011210007	PAC
1900D	3340	BEACON ASSEMBLY	9003312	BURNED/MELTED	20020130009	ATL
1900D	3400	ELT	ELT1104	FAILED	20020122004	ATL
1900D	3414	WIRE	M227591620	SHORTED	20020130003	OTT
1900D	3422	D.G.	6226136002		20020424001	PAC
1900D	3500	O2 FILLING LINE	1145600555	CRACKED	20011130017	ATL
1900D	3500	O2 FILLING LINE	1295600475	CRACKED	20011130016	ATL
1900D	5610	WINDSHIELD	10138402518	CRACKED	20020417001	PAC
1900D	5610	WINDSHIELD	10138402515	SHATTERED	20020213015	CTR
1900D	5620	CABIN WINDOW	1294300561	SHATTERED	20020510017	ATL
200	2435	TERMINAL BLOCK COVER	0	WORN	20020828011	WST
200	2610	FIRE DETECTOR	302158	INTERNAL FAULT	20020726005	ATL
200	2610	FLAME DETECTOR	302157	INTERMITENT	20020722017	WST
200	2612	FIRE DETECTOR	302158	O/C	20020619013	QUE
200	3200	PRESSURE SWITCH	MS28883C6	STICKS	20020314001	ATL
200	5210	FWD UPPER BELLCRANK	5043003115	BENT/TWISTED	20020722002	WST
200	5210	LATCH HOOK	1014300291	FAILED	20020403006	WST
200	5300	FORMER	5042006653	CRACKED	2 SDRs	WST
200	5310	RIVET	AN470B	CORR/SEPAR	20021018001	ONT
200	5312	BULKHEAD	0	CRACKED	20020517009	WST
200	5313	FRAME	0	CRACKED	5 SDRs	WST
200	5610	L/H WINDSHIELD	101384002521	MULTIPLE CRACKS	20011116018	CTR
200	5610	R/H WINDSHIELD	101384002522	SHATTERED	2 SDRs	VAR
300	2720	PEDAL ARM	50524526272I	CRACKED	20020612001	ONT
35B33	3213	PISTON LWR SHOCK	358152607	CRACKED	20020215013	ONT
76	3230	MOTOR BRUSHES	HYC5005	WORN	20020313003	PAC
95A55	5753	FLAP	95160000604	CRACKED	20020719005	WST
95B55	2370	FLIGHT DIRECTOR	KFC295		20011026004	ONT
95B55	5280	HINGE	358150163	BROKEN	20020528012	CTR
99	2497	TERMINAL	0	LOOSE	20021001009	WST
99	2810	DRAIN VALVE	A1090	BROKEN/CRACKED	20011210009	WST
99	2820	TUBE ASSEMBLY	99920000115	CHAFED	20021205005	ONT
99	2822	WIRING FOR BOOST	0	BURNT	20011002005	ONT

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
99	3230	END CAP	4377113	MAJOR FRACTURE	20021218009	ONT
99	3230	SWITCH	1003810061	INTERMITTENT	20020111001	ONT
99	3233	ACTUATOR	993880081	FAILED	20020415001	ONT
99	3233	END CAP	4377113	CRACKED	20020628002	ONT
99	3246	OUTER WHEEL HALF	16218000	CRACKED	20011031027	ONT
99	5400	SPLICE PLATE	50980002160	CRACKED	20021031019	ONT
99	5552	ELEVATOR HINGE	1158200219	CRACKED	20011126003	ATL
99A	3260	SAFETY SWITCH	41EN16	INTERMITTENT	20011122006	ONT
BELL						
204B	2910	HOSE ASSEMBLY	70012F000D320	LEAKING	20021003007	WST
204B	6520	CHAIN	204001739003	MISSING	20011109007	WST
204B	6710	BELLCRANK	0		20021105012	PAC
204B	6720	BELL CRNK BULKHEAD	2040317491	CRACKED	20020918006	WST
204B	6720	BULKHEAD	204030749017	CRACKED	20020918010	WST
205A 1	2610	ENGINE	0	FAILED	20020807007	PAC
205A 1	2810	FUEL CELLS	0	BLOCKED	20020627007	WST
205A 1	5302	L/H LWR LONGERON	205032806089A	CRACKED	20020918004	WST
205A 1	5320	CAP	205030163095	CRACKED	20020507010	WST
205A 1	6220	BARREL	204011143005	CRACKED	20020306005	PAC
205A 1	6230	BLADE	0	BENT	20020726017	ONT
205A 1	6310	BEARING	205040242001	FAILED	20020619007	WST
205A 1	6320	LOWER CASE	2120400545	CRACKED	20020213014	CTR
205A	6320	SUN GEAR	205040230003	SPALLED	20021203011	WST
205A 1	6320	VALVE SEAT	02W116213	FAILED	20020611003	PAC
205A 1	6320	5TH MNT ATTH ANG	205030164073	CRACKED	20020507009	WST
205A 1	6330	FITTING ASSEMBLY	2090313441	CRACKED	20020501002	WST
205A 1	6510	T/R DRIVE SHAFT	204040620011	FAILED	3 SDRs	VAR
205A 1	6510	T/R DR SHAFT BEARING	205031818001	CRACKED	20021001002	ONT
205A 1	6510	T/R HANGER SUPPORT	205031818101	CRACKED	20021007007	ONT
206B	5320	LEFT BEAM CAP	205030163095	CRACKED	20011012003	PAC
206B	2435	SEAL	23063371	TORN	20020523005	WST
206B	2435	SHAFT	0	WORN	20020430007	PAC
206B	2435	STARTER GENERATOR	23032018	INOPERATIVE	20020405019	ONT
206B	2436	AS ABOVE	AS ABOVE	U/S	20020716001	PAC
206B	2520	ANGLE	206031103043	CRACKED	20020307011	CTR
206B	2810	FUEL VENT LINE	0	PLUGGED	20020322009	ONT
206B	2821	FUEL FILTER HEAD	0	BROKEN	20020312007	ONT
206B	2910	SEAL	994043	LEAKING	20021125005	PAC
206B	3100	TOR METER PISTON	6856362	PLUGGED	20011002002	PAC
206B	3200	SUPPORT STIFFENER	206031302017	CRACKS	20010622030	CTR
206B	3210	SADDLE	DART D26681	CRACKED	20020923006	ONT
206B	5302	BULKHEAD	206030446001F	CRACKED	20020405025	ONT
206B	5302	FITTING	2060313291	CRACKED	20011002009	PAC
206B	5302	UPPER SKIN	206031004075	CRACKED	20020521006	PAC
206B	5510	HORI STAB FITTING	206020121010	CRACKED	20020507015	WST
206B	5530	VERTICAL STAB	206020123008	FAILED	20011011007	QUE
206B	5551	FITTING ASSEMBLY	206020121006	CRACKED	20011011008	QUE
206B	6210	BLADE BOLT	206010152003	WORN	20020405022	ONT
206B	6210	BLADE BELT LOWER WASHER	2060101543	CRACKED/BROKEN	20020208003	WST
206B	6230	M/R MAST ASSEMBLY	20601033217	CORRODED	20020118004	WST
206B	6230	MAST ASSEMBLY	2604000020	SUSPECT CRACK	20010622017	PAC
206B	6230	MAST BEARING	2060400365	SPALLED	20020118003	WST
206B	6230	NIL/UNKNOWN	0		2 SDRs	OTT
206B	6230	SLEEVE	ASI6010454109	CRACKED	20021101008	WST
206B	6310	SPRAG CLUTCH	CL422501	BROKEN	2 SDRs	VAR
206B	6320	DRAG PIN ASSEMBLY	206031509101	UNSTAKED	3 SDRs	VAR
206B	6320	RING	6871064	CRACKED	20020403009	CTR
206B	6320	2 1/2 BEARING	23034787	ROLLERS FLAT	20011002003	PAC
206B	6510	M/R DRIVESHAFT	206040015103	FAILED	20021203005	PAC
206B	6510	SHAFT ASSEMBLY	2060403255	GROOVED	20011119001	ONT
206B	6720	T/R PITCH LINK	206010793101	CRACKED	20020114002	ONT
206B	6730	HYDRAULIC SERVO	206076031013	INOPERATIVE	20020405024	ONT
206B 3	6230	NIL/UNKNOWN	0		20020708008	OTT
206L	5310	STIFFENER	206033110189	CRACKED	20020403008	CTR
206L	5320	LEG ASSEMBLY	206063107005	CORRODED	20011003009	WST
206L	6320	SUN GEAR	206040662101	CRACKED	20020827008	PAC
206L	6320	TUBE ASSEMBLY	206040526001	CORRODED	20011105002	ATL
206L	6330	STOP MOUNT ASSEMBLY	206033542003	WORN	20020412012	CTR
206L	6510	DISC PACK	327211	PLATE CRACKED	20021104008	ATL
206L 1	2460	BATTERY WIRE	206075295053	BROKEN	20020530014	ONT
206L 1	2497	BATTERY WIRE	206075295053	BROKEN	20020530015	ONT
206L 1	5302	CHANNEL ASSEMBLY	206031314037	CHAFED	20020726015	ONT
206L 1	6220	BEARING	206011118001	FAILED	20020130005	ONT
206L 1	6320	TUBE	206040948101	CHAFED	20021129007	PAC
206L 1	6510	SPRING	206040106001	BROKEN	20020905003	ONT
206L 1	6730	HYDRAULIC SERVO	206070062003	LEAKING	3 SDRs	ONT
212	2910	RIGID TUBE ASSEMBLY	212076301001	BROKEN	20020131003	PAC
212	2910	TELEFLEX LINE	70012J220W234	LEAKING	20011105003	ATL
212	3210	SHEARHEAD	0	LEAKING	20020626018	PAC
212	3213	CROSSTUBE	205050403	BROKEN	20020718006	PAC
212	5302	BULKHEAD	205032821023	CRACKED	20011031026	ONT
212	6230	SWPLTE DUP BEARING	204011430001	WORN	20020405020	ONT
212	6320	BEARING	204040135001	FAILED	20011116015	WST
212	6320	BEARING	204040424001	FAILED	20020621010	PAC
212	6320	BEARING	212040143103	FAILED	20020402004	OTT
212	6320	BEARING	214040118001	FAILED	20020430011	PAC
212	6320	CHIP PLUG	B4429SP	FLAKING	20021016003	PAC
212	6320	SPIRAL BEVEL GEAR	204040701103	BROKEN	20011005002	ONT
212	6340	CHAIN	204001736005	BROKEN	20020131004	PAC
212	6410	TAIL ROTOR BLADE	212010750105	DELAMINATION	20011012001	PAC
212	6700	ELEV LUG BRACKET	0	CRACKED	20021001004	PAC
212	6720	TAIL ROTOR QUILL	212040365019	FAILED	20020916006	PAC
212	6730	ROTARY ACTUATOR	0	SEIZED	20020409003	PAC
212	6730	UNIVERSAL BRG	412076670101	FAILED	20011003010	WST
214B	2400	POWER WIRE	12 GAUGE	CHAFED	20021108017	OTT
222B	6220	SLEEVE BALL	222010405115	WORN	20020228013	ONT
222U	3246	SHEAR HEAD	108839	CRACKED	20011116007	PAC
222U	5210	DOOR HINGE BRACKET	222031233104	CRACKED	20021001001	PAC
222U	5563	VERTICAL FIN LOWER FIT	222035231105	BROKEN	20020131002	PAC
407	5302	SKIN	0	CRACKED	20020702010	PAC
407	6230	SEAL	406310407101	NEW	20021104001	OTT
407	6310	BEARING	406040530103	SCORED	20020814003	PAC
407	6320	MAIN CASE	407040050101	CASTING FLAW	20020814004	PAC
407	6410	MAIN ROTOR BLADE	407015001107	CRACKED	20011119004	ONT
407	6500	BEARING	407340339103	CAGE DISINTEGRATED	20011130006	ONT
412CF	6230	BEARING	214040125101	SPALLED	20020724013	WST
412CF	6230	NUT	204040309101	LOOSE	20020724014	WST
412CF	6320	BEARING	205040249001	SPALLED	20021203012	PAC
427	6710	TARGET ASSEMBLY	427001341	DAMAGED	20020914001	QUE
430	6711	WEAR SLEEVES	1201105A14	NOT BONDED	20021029010	OTT
BELLANCA						
7GCBC	3246	AXLE ASSEMBLY	22041	SHEARED	20020408006	ONT
8GCBC	2720	RUDDER CONTROL CABLE	12364	FRAYED	6 SDRs	OTT
8GCBC	2750	CONTROL CABLE	19023	FRAYED	9 SDRs	ONT
8GCBC	2750	PULLEY	12395	SEIZED & WORN	3 SDRs	ONT
8GCBC	2810	FUEL TANK	71493	CRACKED	20020830023	ONT
8GCBC	2810	FUEL TANK	714931L	CRACKED	20021007005	OTT
8GCBC	2810	FUEL TANK	714931R	CRACKED	20021031004	ONT
8GCBC	2810	FUEL TANK	714941R	CRACKED	20011130005	ONT
8GCBC	2810	FUEL TANK	71493	FUEL LEAK	20020112001	WST
8GCBC	5310	FRAME TUBE	71470101L	BROKEN	20020121001	OTT
8GCBC	5311	TUBE	71470101R	BROKEN	20011221004	ONT
8GCBC	5700	FUEL TANK	71493	CRACKED	20020913009	OTT
8GCBC	5712	RIB	21588	CRACKED	20011205001	ONT
BOEING						
717 200	1200	OIL PUMP ASSEMBLY	LR47000A	SHEARED	20010907012	OTT
720 023B	2824	VALVE	AU16B1519D	FAILED OPEN	20010626009	QUE
727 116C	5310	AIRFRAME	0	0	20020723006	WST
727 116C	5754	BRACKET	651722419	CRACKED	20020726021	WST
727 171C	2421	CSD	700642A	FAILED	20020808004	WST
727 217	3242	BRAKE ASSEMBLY	0		20020806010	ONT
727 217	3246	TIE BOLT	2601913	SHEARED	20020205006	ONT
727 22	5311	FRAME	0	CRACKED	20011012010	WST
727 22	5320	FRAME	6518622	CRACKED	20011012013	WST
727 22	5522	SKIN	0	CRACKED	20011012011	WST
727 22	5712	R/H WING RIB	0	CRACKED	20011012012	WST
727 221	2700	FLIGHT CONTROL S	0		20010823004	ONT
727 221	3230	LEVER LATCH	0	FAILED	20020227010	ONT
727 223	3231	NLG DOOR LWR CAB	0	FAILED	20011018005	ONT
727 225	2751	INDICTR FLAP POS	1812993	FAILED	20020904009	ONT
727 225	3234	L/G ACCESS UNIT	656021132	INTERNAL FAILURE	20020814002	CTR
727 227	2742	HOSE ASSEMBLY	2460510H0480	RUPTURED	20011227004	OTT
727 227	3211	PIVOT SHAFT	69149974	SHEARED	20011018023	OTT
727 227	3232	SEQUENCE VALVE	1U1085	OC	20020219002	PAC
727 231	2100	R H PACK	0	TRIPPED	20020820006	ONT
727 231	5240	E & E DOOR	0		20020820005	ONT
727 231	5754	FORE FLAP ASSEMBLY	6521630173		20020802001	ONT
727 243	0000	DEAD WEIGHT ROLL	654134411	WORN	20020328010	PAC

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
727 243	3246	MAIN WHEEL ASSEMBLY	31414	BROKEN	2 SDRs	ONT
727 25C	5300	AIRCRAFT SKIN	0		20020909004	WST
727 25C	5300	FITTING	69144681	CORRODED	20020813010	WST
727 25C	5300	STRINGER CLIP	65453132	CRACKED	5 SDRs	WST
727 25C	5310	AIRFRAME SKIN	0		20020909003	WST
727 25C	5320	SKIN	0		20020912010	WST
727 25C	5330	FUSELAGE	0	CORRODED	20011109005	WST
727 25C	5330	LAP JOINT	0	CORRODED	20011120012	WST
727 25C	5700	SPAR CORD	0		20020912011	WST
727 260	3221	FUSE BOLT	69634801		20021114006	ONT
727 260	3246	TIE BOLT	2601913	SHEARED	2 SDRs	ONT
727 260	5230	HINGE PIN	536783		20020412013	ONT
727 260	5514	HINGE PIN	6914410	CORRODED	20020205007	ONT
727 51C	2910	FLOW LIMITER	1121S11072	CRACKED	20020809002	PAC
737 2A3	0000	ELEVATOR ASSEMBLY LH	657378413	DELAMINATED;SHAT	20010703029	WST
737 2A3	2497	CIRCUIT BREAKER	BACC18W7	OVERHEAT	20020418005	WST
737 2E3	2130	CABIN PRESS CONT	0		20020321002	WST
737 2H4	2131	CONTROLLER	7612608		20020402006	WST
737 2H4	2610	FIRE LOOP	894093	LOW RESISTANCE	20020812002	WST
737 2H4	2612	APU FIRE DETECTI	0	SHORTED	20010625046	WST
737 2H4	2751	FLAP POSITION IN	1812998	SPLIT	20021030007	WST
737 2H4	2761	ACTUATOR	65449617	LEAKING	20021210001	WST
737 2H4	2900	FLOW LIMITER	61146		20021031008	WST
737 2H4	2913	HYD. PUMP	65001	LEAK	20011128012	WST
737 2H4	3231	ROD END	1060779179	CRACKED	20011107002	WST
737 2H4	5343	NLG GUSSET	654581945	CRACKED	20020404001	WST
737 2L9	2130	SERVO ALTIMETER	0		20021129003	QUE
737 2M8	4900	APU	0		20021108022	WST
737 2Q9	2540	DUMP VALVE	14352004	LEAKING	20020819009	ATL
737 2Q9	4997	APU BTB	941D3352	BURNT TERMINAL	20020812003	ATL
737 2Q9	5310	FUSELAGE MAIN, S	0		20021009024	ATL
737 2Q9	5330	FUSELAGE MAIN, P	0	CRACKED	2 SDRs	ATL
737 2T2C	2740	STAB TRIM MOTOR	56019P003	BINDING	20020806012	WST
737 2T7	2750	CONTROL CABLE	BACP30K15		20020731013	QUE
737 2T7	5610	WINDSHIELD	5893543110		20020725004	QUE
737 200	3230	UPLOCK SENSOR	189929	U/S	20011010002	OTT
737 201	2100	ACM	0		20020730003	ATL
737 201	2120	GASPER FAN	215201	BURNT ODOR	20020812004	ATL
737 201	2750	BELLCRANK ASSEMBLY	6549529	FAILED	20011119007	QUE
737 201	5300	GUSSET	654581945	CRACKED	2 SDRs	WST
737 204	2780	LE SLAT CONTROL	66245516		20020218001	WST
737 204	3230	ISOLATION VALVE	65445815	LEAKING	20020403001	WST
737 204	3244	WHEEL ASSEMBLY	26015711	BLOWN TIRE	20020108001	WST
737 210C	3200	NG TRANSFR CYL	69141064	CRACKED	20011031020	ONT
737 210C	3244	TIRE	997LH457	EXPLODED	20020903009	ONT
737 210C	3260	PROXIMITY SWITCH	0		20020722007	ONT
737 217	0000	ENGINE	JT8D17A	FAILED	20010906009	QUE
737 217	2121	GASPER FAN	0	SEIZED	20020104010	QUE
737 217	2131	CABIN PRESS CNTRL	0	FAILED	20011114010	QUE
737 217	2210	AIR DATA COMPUTER	HG480B13		20020725014	QUE
737 217	2700	ACTUATOR	65446516		20020731016	QUE
737 217	3233	LNDG GEAR ACCY U	0		20011121010	WST
737 217	3234	LG SELECTOR VALVE	0	FAILED	20011114011	QUE
737 217	3234	SELECTOR VALVE	4105DA	FAILED	20011019010	QUE
737 217	3417	NIL/UNKNOWN	34100408	FAILED	20020228001	QUE
737 217	3442	WXR INDICATOR	0		20020801010	QUE
737 217	3497	WX RADAR INDICATOR	FTN7V6748		20020726007	QUE
737 217	5521	R/H ELEVATOR	657378436	CRACKED	20020121008	QUE
737 217	5744	L/E SLAT	0	FAILED	20020215007	QUE
737 248	3297	LDG GR ACC. UNIT	0		20020722004	OTT
737 269	2131	CONTROLLER	7638102		20020402005	WST
737 269	2150	AIR CYCLE MACHINE	0		20020306003	WST
737 269	2610	FIRE LOOP	894093	U/S	20021023001	WST
737 275	2121	GASPER FAN	215201		20020610005	QUE
737 275	2400	CIRCUIT BREAKER	941D3352		20020528011	QUE
737 275	2420	DETECTOR	4362		20020507001	QUE
737 275	2422	STATIC INVERTER	60B400232		20021213001	WST
737 275	3400	STANDBY HORIZON	0		20020606018	WST
737 275	3421	VERTICAL GYRO	0	INTERNAL FAILURE	20020104012	QUE
737 275	3520	OXYGEN LATCH ASS	119001302		20020426004	WST
737 275	5314	B 737 FUSILAGE A	0		20020606002	QUE
737 275	5532	PANEL	657094728	SHEARED	20020308010	QUE
737 275	5610	WINDOW	58935722	SHATTERED	20020502018	QUE
737 275	5610	WINDOW ASSEMBLY	5893543110		20020731009	QUE
737 275	5753	CLOSURE PANEL	657094728	SHEARED	20020315006	QUE
737 281	2100	AIR CONDITIONING	0		20020429003	WST
737 281	2731	ELEVATOR	657378414		20020422006	WST
737 281	2750	MAIN TRACK BOLT	66232231	CRACKED	20021209007	WST
737 281	2761	ACTUATOR	65449617	CASE SPLIT	20020823003	CTR
737 281	5343	NLG TEE	6545819551	CRACKED	20020405001	WST
737 284	2782	ACTUATOR	65449617	LEAKING	20021203009	WST
737 296	5300	NIL/UNKNOWN	0		20020730007	QUE
737 296	5330	NIL/UNKNOWN	0		20021018004	ATL
737 297	2730	ELEVATOR PCU	654476112	LEAKING	20011120004	WST
737 297	3242	MAIN WHEEL ASSEMBLY	26015711	B-6064/B-6064	20020408017	WST
737 297	4950	APU BLEED AIR SY	0		20020305003	WST
737 76N	3460	AUTOPILOT	0		20020305002	WST
747 433	2440	SAFETY GUIDE	689236		20021203008	QUE
747 433	2597	BRACKET	214424185		20021028007	QUE
747 433	3246	MAIN WHEEL	32300541		20020726001	QUE
747 433	5400	PANEL ASSEMBLY	323U410713	FAILED	20010430003	QUE
747 475	3211	BEARING	NHA65B0150211	CRACKED	20020228002	QUE
757 236	2400	ENG ELEC HARNESS	0	DAMAGED	20011211012	QUE
757 238	2400	WRB BUNDLE	0	DAMAGED	20011211020	QUE
757 236	2510	TORQUE TUBE	2A0590173	CRACKED	20011211021	QUE
757 236	2520	TUBE	2A0590174	CRACKED	20010626008	QUE
757 236	2701	BEARING	AE66111	SEIZED	20020816004	QUE
757 236	3246	TIE BOLT	BACB30MT826	SHEARED	20020328009	QUE
757 28A	2100	NIL	0		20020221009	QUE
757 28A	2913	ELBOW FITTING	NAS1762D1212	CRACKED	20011211007	QUE
757 28A	3242	ROD ASSEMBLY-BRAKE	161N16231	BROKEN IN HALF	20011211022	QUE
757 28A	3246	BOLT	431276E	SHEARED	20021110002	QUE
767 233	2530	OVEN	8650010000		20020916008	QUE
767 233	2610	MODULE	285T03855	FAILED	20020502019	QUE
767 233	2710	ACTUATOR	550030019	FAILED	2 SDRs	QUE
767 233	2781	TRANSDUCER	Y35A	FAILED	20020121003	QUE
767 233	3230	SIDE BRACE LOCK	273T62013		20020725012	QUE
767 233	3260	SENSOR	0	FAILED	20020104008	QUE
767 233	3310	NIL/UNKNOWN	0		3 SDRs	QUE
767 275	3230	DOOR SEQUENCE VA	273T453010		20020830018	QUE
767 3S1	2131	AC MOTOR 2	20224783	FAILED	20011114004	QUE
767 3S1	2133	OUTFLOW VALVE	60683221	FAILED	20020328004	QUE
767 3S1	5280	BOLT	NAS6706D26	SHEARED	20020801008	QUE
767 3Y0	2121	FAN	732591D		20021008003	QUE
767 3Y0	2597	NIL/UNKNOWN	0		20021021001	QUE
767 3Y0	2720	ACTUATOR	658D1003	FAULTY	20020121002	QUE
767 3Y0	3310	FLIGHT COMPARTME	0		20020830015	QUE
767 3Y0	5350	PANEL ASSEMBLY	311T306558		20021016001	QUE
767 333	2160	TEMP CONTROL VAL	0		20021015001	QUE
767 333	2200	SAM	285T0015116	FAILED	20020502014	QUE
767 333	2810	FILTERS	AC92272080D2A	FAILED	20020124006	QUE
767 333	3320	PSUD	RAX5301A		20020828003	QUE
767 333	5610	WINDSHIELD	141T480150	SHATTERED	20020315008	QUE
767 35H	2121	FAN	732591C		20020826003	QUE
767 375	2434	GENERATOR	0	FAILED	20010622010	QUE
767 375	2530	COFFEE MAKER	3510001601		20020916009	QUE
767 375	2710	LOCKOUT ACTUATOR	550030017		20020801003	QUE
767 375	2750	FLAP	0	FAILED	20011121017	QUE
767 375	2900	ACTUATOR	2827001011	LEAKING	20020502011	QUE
767 375	2910	HYDRAULIC VALVE	340545		20020509003	QUE
767 375	3242	BRAKE ASSEMBLY	32800691		20020530012	QUE
767 375	3310	NIL/UNKNOWN	0		20020830011	QUE
767 38E	2330	PROJECTOR	TH41JSK21W		20020528006	QUE
767 38E	2710	POWER CONTROL UN	2828001009		20020826004	QUE
767 38E	2780	FLAP SLAT UNIT	285T004953	FAILED	20020502012	QUE
BOMBARDIER						
BD 100 1A10	5520	RIVET	MS90354465	JAMMED	20020215009	QUE
BD 700 1A10	2750	SLAT FLAP CONTRO	GT41559009		20021015008	OTT
BD 700 1A10	5750	SLAT TRACKS	GM12715911	WORN	20020905007	QUE
BRITISH AEROSPACE						
BAE 125 800A	2100	DUCT SLEVE	BAS16346416	ORIGINAL	20020930006	ONT
BAE 146 200	2910	PIPE ASSEMBLY	HC324B0017000	LEAKING	20011001004	PAC
BAE 146 200	3240	GRN ENABLE SOLEN	AC65716	ELECTRICAL SHORT	20020617008	ATL
BAE 146 200	3246	WHEEL HALF	AHA1481	SCRAP	20021010002	ATL
HS 125 700A	0000	VSI INDICATOR	066011712704	FAULTY	20020322011	ONT
HS 125 700A	1497	FAIRLEAD	257ES2873	BROKEN	20020201012	QUE
HS 125 700A	1497	WIRING	0	WORN	20020201010	QUE
HS 748 2A	2400	CONNECTOR MS3456	MS3456L3273P	SHORTED	20011025003	ONT

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
3112	3221	BOLT	A1029E		20020718005	WST
3112	3246	OTR WHEEL HALF	AH43208	CRACKED	20020904004	WST
3112	3260	WIRE	0	BROKEN	20011210019	WST
3112	3260	WIRE	622800200	BROKEN	20020404002	WST
3112	5210	DOOR HINGE	1371113C401	CRACKED	20021115015	WST
BRITTEN NORMAN						
BN2A 27	3240	BRAKE LINE	NB73A4354	BROKEN	20011109002	PAC
BN2B 21	2842	TRANSMITTER ASSEMBLY	NB571261	WORN	20021210009	ONT
BN2B 21	5524	ELEVATOR HINGE	NB310077	CRACKED	20020610007	ONT
BN2B 27	3242	BRAKE DISC	16402201	BROKEN	20020408011	QUE
BURKHART GROB						
G103 TWIN II	2720	PULLEY	102C32016	CRACKED	20020308001	ONT
CANADAIR						
CL215 1A10	2140	COMBUSTION MOTOR	A07D48	BROKEN	20020522002	CTR
CL215 1A10	2750	ARM MASS BALANCE	21515085	CRACKED	20020326009	OTT
CL215 1A10	2910	AUX HYD LINE	215751588	CRACK/PIECE MISS	20021029007	PAC
CL215 1A10	3233	ACUTATOR MOUNT	21532020	DISPLACED	20020804005	CTR
CL215 1A10	5341	FUSELAGE	2153103658	CRACKED	20020715001	CTR
CL215 1A10	5343	ACTUATOR FITTING	215340141	BROKEN	3 SDRs	CTR
CL215 1A10	5711	FRONT SPAR LOWER	2151002468		20021016033	WST
CL215 1A10	5711	LOWER SPAR CAP	S6642024T8511	CRACKED	20020221002	CTR
CL215 1A10	5711	WEB	21510032242	CRACKED	20020318001	OTT
CL215 1A10	5712	L/E ASSY	21511002822	HEAT DAMAGED	20011108010	PAC
CL215 1A10	5714	ANGLE	21530031S6	CRACKED	20020318002	CTR
CL215 1A10	5720	ANGLE	215310J6	CRACKED	20020729010	PAC
CL215 1A10	5720	R/H FWD DRAG ANG	21530031S8	CRACKED	20011108008	PAC
CL215 1A10	5740	ATTACH ANGLE	0	CRACKED	20020715003	CTR
CL215 1A10	5741	LOWER SPAR CAP	0	CRACKED	20020715002	CTR
CL215 1A10	5741	W/F ATTACH ANGLE	2153103658	CRACKED	20020714001	CTR
CL215&611(CL215)	2710	AILERON CABLE	0	WORN	20020130002	ONT
CL215&611(CL415)	2400	CONNECTOR	215T5218354	BURNT	20020606016	QUE
CL215&611(CL415)	2710	AILERON CABLE	0	WORN	20020130001	ONT
CL215&611(CL415)	2730	EYE BOLT	215241152	BROKEN	20011128010	QUE
CL215&611(CL415)	2730	ROD END	215T92491	LOOSE BEARING	20021008007	QUE
CL215&611(CL415)	2730	TORQUE TUBE	215T92636		20021004003	QUE
CL215&611(CL415)	2910	HYDRAULIC LINE	215T7519424	CHAFED	2 SDRs	QUE
CL215&611(CL415)	3020	VALVE ANTI RETOU	0		20020402003	QUE
CL600 1A11(600)	2120	CONNECTOR	600953373	TORN/SPLIT	20020131006	ONT
CL600 1A11(600)	2910	HYDRAULIC LINE PRESS	AE7051911		20020220001	OTT
CL600 1A11(600)	3240	HYDRAULIC LINE ASSEMBLY	200809271	RUPTURED	20020408007	ONT
CL600 1A11(600)	5210	MAIN PAX DOOR	60031700	OPENED	20010921017	QUE
CL600 1A11(600)	5530	SPPRT CROSS-BEAM	600926291	CRACKED	20020517008	QUE
CL600 2A12(601)	2132	OXY MASJ DRIO	0	FAILED	20011018022	ONT
CL600 2A12(601)	2400	GEN LINE CONTACTOR	ZCDBA023	CONTACT BURNT	20011113013	OTT
CL600 2A12(601)	2432	BATTERY	171BS1011	BURNT	20020221003	QUE
CL600 2A12(601)	2697	FIRE PROTECTION	0		20020913010	OTT
CL600 2A12(601)	2697	WIRING	0		20020926001	OTT
CL600 2A12(601)	2697	WIRING HARNESS	0		20020925003	OTT
CL600 2A12(601)	2710	BEARING	0	BROKEN	20021125002	QUE
CL600 2A12(601)	2710	BEARING R/H QUAD	UK	BROKEN/AND/WORN	20021217006	ONT
CL600 2A12(601)	2761	PCU	6007510315		20020523002	OTT
CL600 2A12(601)	2822	CONNECTOR ASSEMBLY	NPN	FAILED	20020806002	PAC
CL600 2A12(601)	3241	NIL		0	20020207003	OTT
CL600 2A12(601)	3260	NIL/UNKNOWN	8015778827	WORN	20020228020	QUE
CL600 2A12(601)	3320	WIRE	MILL16878DTD	BURNT	20020501006	QUE
CL600 2A12(601)	3410	ADS HEATER CTRL	405489	BURNT INSIDE	20011217020	OTT
CL600 2A12(601)	5210	BELLCRANK	6003189021		20020207004	OTT
CL600 2A12(601)	5610	WINDSHIELD	6003303026	CRACKED	20011004018	ONT
CL600 2B16(601 3A)	2312	CAPT HANDMIKE JC	0	SHORTED	20020621002	ONT
CL600 2B16(601 3A)	2420	ELECT WIRING	XCS1A10N	CHAFED	20011130011	QUE
CL600 2B16(601 3A)	2424	VOLT REGULATOR	756654A	NOT REGULATING	20020916007	OTT
CL600 2B16(601 3A)	2742	MACHINE PIN	212071440	SHEARED	20021101001	QUE
CL600 2B16(601 3A)	2997	12 GAUGE WIRE	0	SHORTED	20020923001	QUE
CL600 2B16(604)	2600	WIRE BUNDLE	0	CHAFED, BURNT	20020215001	QUE
CL600 2B16(604)	2710	AILERON	0	FAILED	20020326007	QUE
CL600 2B16(604)	2720	ECROU (NUT)	MS178264	MISSING	20020201014	QUE
CL600 2B16(604)	3242	MLG BRAKE UNIT	60485123101	FAILED	20020830019	OTT
CL600 2B16(604)	3246	BOLT	GY22623	BROKEN	20020402008	OTT
CL600 2B16(604)	3320	MHC-II	9906813004	FAILED	20020408016	QUE
CL600 2B16(604)	5414	STAY BRACE STRUT	539553	FAILED	20011005005	QUE
CL600 2B16(604)	5610	CO-PILOT WNDSHLD	6003303026	LOSS OF FACEPLY	20020226009	ONT
CL600 2B16(604)	5610	WINDSHIELD	6003303025	CRACKED	20011121011	ONT
CL600 2B19(RJ)	0000	DOOR	NA	N/A	20020510014	QUE
CL600 2B19(RJ)	0000	ENGINE	0	FAILED	20010905019	OTT

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
CL600 2B19(RJ)	0000	PUMP FITTING	0	LOOSE	20010814017	OTT
CL600 2B19(RJ)	2100	AIR CYCLE MACHINE	78279013	FAILED	20020110004	QUE
CL600 2B19(RJ)	2100	AIR CYCLE MACHINE	78279015	SEIZED	4 SDRs	VAR
CL600 2B19(RJ)	2100	FLAPPER DOOR	601R386541	OUT OF RIG	20021217008	OTT
CL600 2B19(RJ)	2110	DUEL BYPASS VALVE	808442	FAILED	20011113008	QUE
CL600 2B19(RJ)	2110	TEMP SWITCH	75065917	FAILED	20011113005	QUE
CL600 2B19(RJ)	2120	DUCT	0	DAMAGED	20020311004	QUE
CL600 2B19(RJ)	2130	BLEED TEMP SENSOR	GG670800051	INOPERATIVE	20020307013	QUE
CL600 2B19(RJ)	2130	ROD ASSEMBLY	601R386493	BROKEN	20020308011	QUE
CL600 2B19(RJ)	2133	OUTFLOW VALVE	0	CONTAMINATED	20011217012	QUE
CL600 2B19(RJ)	2150	PRE-COOLER	GG670950011	CRACKED	20020903011	OTT
CL600 2B19(RJ)	2161	TEMP CONTROLLER	8161014	FAULTY	20020124004	QUE
CL600 2B19(RJ)	2210	FCC CARD	6229815704	FAILED	20020221006	QUE
CL600 2B19(RJ)	2215	AILERON SERVO AC	6224404101	HIGH TORQUE	20021112002	OTT
CL600 2B19(RJ)	2400	ESSENTIAL RELAY	K1XD	FAULTY	20011019007	QUE
CL600 2B19(RJ)	2420	CONNECTOR	BKAE2400301	SHORTED	20010921022	QUE
CL600 2B19(RJ)	2420	PLUNGER - BLADEL	764510	UNSERVICEABLE	20020725005	QUE
CL600 2B19(RJ)	2432	APU BAT CHARGER	237BC1012	FAILED	3 SDRs	QUE
CL600 2B19(RJ)	2433	TRANSFER RECT UNIT	TRU3502	FAULTY	20011122005	QUE
CL600 2B19(RJ)	2433	TRU	TRU3502	FAILED	20020110018	QUE
CL600 2B19(RJ)	2530	FAN ASSEMBLY	0		20020806005	QUE
CL600 2B19(RJ)	2611	SMOKE DETECTOR	473052		2 SDRs	QUE
CL600 2B19(RJ)	2613	ELEMENT	356072310	FAILED	20020215006	QUE
CL600 2B19(RJ)	2700	AILERON	60091000	FAILED	20011128007	QUE
CL600 2B19(RJ)	2710	AILERON CONTROL	0		2 SDRs	VAR
CL600 2B19(RJ)	2710	AILERON MIXER	6009119153	ROTATION RESISTANCE	2 SDRs	OTT
CL600 2B19(RJ)	2710	AILERON QUADRANT	0		20020604001	QUE
CL600 2B19(RJ)	2710	AILERON QUADRANT	0		20020610006	QUE
CL600 2B19(RJ)	2710	AILERONS CABLES	0		20020809001	OTT
CL600 2B19(RJ)	2710	AILERON SERVO ACT	6224404001	FAILED	20020211011	QUE
CL600 2B19(RJ)	2710	DOOR	NA	N/A	2 SDRs	OTT
CL600 2B19(RJ)	2710	LEVER ARM	6009118610	JAMMED	20010921021	QUE
CL600 2B19(RJ)	2710	LH QUADRNT ASSEMBLY	6009117153	FAILED	20020221010	QUE
CL600 2B19(RJ)	2710	PULLEY	600908002	CONTAMINATED	20020808001	OTT
CL600 2B19(RJ)	2710	QUADRANT ASSEMBLY	6009119153	FAILED	20011121015	QUE
CL600 2B19(RJ)	2710	SPOILERON PCU	270007	FAILED	20020110017	QUE
CL600 2B19(RJ)	2720	HIRF CARD	8220287401	FAILED	20020228014	QUE
CL600 2B19(RJ)	2721	RUDDER TRUNK PANEL	601R5122623	FAILED	20020412002	QUE
CL600 2B19(RJ)	2730	HSTCU	0	FAILED	20021023007	ATL
CL600 2B19(RJ)	2730	SERVO MOUNT	8220260001	BOLTS SHEARED	20020627001	OTT
CL600 2B19(RJ)	2730	STAB TRIM SWITCH	3094334	JAMMED	20020905005	OTT
CL600 2B19(RJ)	2731	PITCH TRIM SWITCH	0		20020531001	OTT
CL600 2B19(RJ)	2731	STAB TRIM SWITCH	9960013	FAILED	20020222002	QUE
CL600 2B19(RJ)	2740	CONNECTOR	MS27473T24B61SP	BURNT	20020502021	QUE
CL600 2B19(RJ)	2740	HSTCU	70607		20020412008	QUE
CL600 2B19(RJ)	2740	HSTCU	70608	FAILED	20020322012	QUE
CL600 2B19(RJ)	2740	STAB TRIM SWITCH	3094334	FAILED	2 SDRs	VAR
CL600 2B19(RJ)	2742	HSTAB COMPUTER	0		20020103009	QUE
CL600 2B19(RJ)	2742	MACH TRIM ACTUATOR	0		20020726010	QUE
CL600 2B19(RJ)	2742	NIL	0		20020104014	QUE
CL600 2B19(RJ)	2742	STAB TRIM SWITCH	AC94A0855	FAILED	20020328007	QUE
CL600 2B19(RJ)	2750	BPSU	8551009	FAILED	20020328006	QUE
CL600 2B19(RJ)	2750	BPSU UNIT	0		20020806006	QUE
CL600 2B19(RJ)	2750	CONTROL UNIT	0		20020923003	QUE
CL600 2B19(RJ)	2750	FLAP ACTUATOR	852D10011		20020920002	OTT
CL600 2B19(RJ)	2750	FLAP CONNECTOR	0	CORRODED	20011114009	QUE
CL600 2B19(RJ)	2750	FLAP FELX SHAFT	1104SD100401	SHEARED	20021114001	OTT
CL600 2B19(RJ)	2750	FLEX CABLE ACTUATOR	1104SD1002011	FAILED	20020502008	QUE
CL600 2B19(RJ)	2751	WIRING HARNESS	0	INTERNAL FAULT	20021115001	QUE
CL600 2B19(RJ)	2752	FLAP ACTUATOR	853D10012	UNSERVICEABLE	20020822007	OTT
CL600 2B19(RJ)	2752	FLAP ACTUATOR 3	0		20020523001	OTT
CL600 2B19(RJ)	2752	FLAP ACTUATORS	854D10012	INOPERATIVE	20011101005	QUE
CL600 2B19(RJ)	2752	FLAPS	0	FAILED	20011122011	QUE
CL600 2B19(RJ)	2752	POWER DRIVE UNIT	0		20020925001	QUE
CL600 2B19(RJ)	2760	POWER CONTROL UNIT	270003	FAILED	20020228010	QUE
CL600 2B19(RJ)	2760	SECU	4916405	FAULTY	20011011005	OTT
CL600 2B19(RJ)	2760	SPOILER	3G5209C	FAILED	20020228009	QUE
CL600 2B19(RJ)	2782	FLAP PANEL	601R145012	FAILED	20020412001	QUE
CL600 2B19(RJ)	2820	FUEL SENSE LINE	CC670622581	LEAKING	20020502023	QUE
CL600 2B19(RJ)	2840	HARNESS-L/H	601R571351	CHAFED	20020123001	QUE
CL600 2B19(RJ)	2841	FUEL SYSTEM COMP	0		20021129004	ATL
CL600 2B19(RJ)	2910	HOSE ASSEMBLY	0		20020604004	QUE
CL600 2B19(RJ)	2910	HOSE ASSEMBLY	AE4096G0060000	DETERIORATED	20021115007	QUE
CL600 2B19(RJ)	2910	HYDRAULIC SYSTEM	0		2 SDRs	QUE

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
CL600 2B19(RJ)	2910	NIL/UNKNOWN	601R752861	DAMAGED	20011101003	OTT
CL600 2B19(RJ)	2913	EDP	848847	CRACKED	3 SDRs	QUE
CL600 2B19(RJ)	2913	ENGINE DRIVEN PUMP	PV304448	LEAKING	20020110011	QUE
CL600 2B19(RJ)	2913	PACKING	M832481039	BROKEN	20011005012	QUE
CL600 2B19(RJ)	2913	PUMP ELECT-HYDRA	0		20011221006	QUE
CL600 2B19(RJ)	3020	SEAL	3475	DAMAGED	20011219001	QUE
CL600 2B19(RJ)	3140	DISPLAY FAN #2	AE0804AA1	BURNT	20020918001	OTT
CL600 2B19(RJ)	3213	MAIN FITTING	17064103	BROKEN	20020604006	OTT
CL600 2B19(RJ)	3213	MAIN LANDNG GEAR	601R85001103	CRACKED	20020322015	QUE
CL600 2B19(RJ)	3213	R/H MAIN BEAM	17064104	BROKEN	20011005006	QUE
CL600 2B19(RJ)	3220	ELECTRICAL LEAD	UNKNOWN	UNKNOWN	20020916001	OTT
CL600 2B19(RJ)	3220	NOSE LANDING	16050101	UNSERVICEABLE	20021025002	OTT
CL600 2B19(RJ)	3230	NLG ASSEMBLY	16050105	FAILED	20020201020	QUE
CL600 2B19(RJ)	3230	NLG SELECTOR VALVE	75000600	FAULTY	20011019019	QUE
CL600 2B19(RJ)	3230	SELECTOR VALVE	0		20020903008	QUE
CL600 2B19(RJ)	3234	GEAR HANDLE ASSEMBLY	7179015	FAILED	3 SDRs	QUE
CL600 2B19(RJ)	3234	MLG SELECTOR VALVE	0		20011217008	QUE
CL600 2B19(RJ)	3234	MLG SELECTOR VALVE	750005000	FAILED	20020211010	QUE
CL600 2B19(RJ)	3234	NLG SELECTOR VALVE	601R751461	FAILED	20020730001	OTT
CL600 2B19(RJ)	3234	SELECTOR VALVE	750006000	FAILED	20020315003	QUE
CL600 2B19(RJ)	3244	CONE BEARING	13685		20020530013	QUE
CL600 2B19(RJ)	3244	MICHELIN TIRE	0274380	BLEW OUT	20021008001	OTT
CL600 2B19(RJ)	3244	RETREADED TIRE	128173	SEPARATED	20011011004	QUE
CL600 2B19(RJ)	3246	L/H OUTBOARD WHEEL	50105711	MISSING	20020221004	QUE
CL600 2B19(RJ)	3260	DOOR	NA	N/A	20020710001	OTT
CL600 2B19(RJ)	3310	SWITCH	0	LOOSE	20020412004	QUE
CL600 2B19(RJ)	3320	LAMP HOLDER	BC10065003	BURNT	20020117008	QUE
CL600 2B19(RJ)	3417	AIR DATA COMPUTER	8220372140	FAILED	20011113021	QUE
CL600 2B19(RJ)	3418	COMPUTER	3995100208	FAILED	20020502009	QUE
CL600 2B19(RJ)	3425	COMPUTER	6229815704		20021210007	QUE
CL600 2B19(RJ)	3442	WEATHER RADAR	6229302004	IMPACT DAMAGE	20021106001	OTT
CL600 2B19(RJ)	3460	FMS CDU	0		20011210006	QUE
CL600 2B19(RJ)	3510	OXYGEN LINE	380270260	RUPTURED	20020322016	QUE
CL600 2B19(RJ)	4900	APU	0	FAILED	20020211007	QUE
CL600 2B19(RJ)	4900	FITTING ASS VENT	22853401101	BROKEN/MISSING	20020821001	OTT
CL600 2B19(RJ)	4940	APU	897889	FAILED	20020201019	QUE
CL600 2B19(RJ)	4990	APU	38004883		2 SDRs	QUE
CL600 2B19(RJ)	4990	APU	49100011	FAILED	20020502007	QUE
CL600 2B19(RJ)	4990	DOOR	NA	N/A	20020904008	OTT
CL600 2B19(RJ)	5210	FITTING	601R3807413	CRACKED	20021023008	ATL
CL600 2B19(RJ)	5210	HANDLE	H341931	CORRODED	2 SDRs	OTT
CL600 2B19(RJ)	5210	HANDLE	H3451427	FAILED	20011130009	QUE
CL600 2B19(RJ)	5210	PASSENGER DOOR	0	JAMMING	20020821005	ATL
CL600 2B19(RJ)	5210	PAX DOOR SEAL	051940	BROKEN/DEBONDED	2 SDRs	OTT
CL600 2B19(RJ)	5220	ESCAPE HATCH HAN	H341931	CORROSION	3 SDRs	OTT
CL600 2B19(RJ)	5230	SPRING	601350821	FAILED	20020502006	QUE
CL600 2B19(RJ)	5270	DOOR LTCH HNDLE	0	STICKY	20020201018	QUE
CL600 2B19(RJ)	5270	HARNESS	52100033	FAULTY	20020121007	QUE
CL600 2B19(RJ)	5270	PROXIMITY SWITCH	0	FAILED	20020201022	QUE
CL600 2B19(RJ)	5270	SENSORS	0	EXCESS GREASE	20020201017	QUE
CL600 2B19(RJ)	5315	FLOOR BEAM	601R3111357	CRACKED	20020412011	QUE
CL600 2B19(RJ)	5315	FLR STRUCT ANGLE	0	CRACKED	2 SDRs	QUE
CL600 2B19(RJ)	5321	FLOOR SKIN	601R31146	CRACKED	20011113020	QUE
CL600 2B19(RJ)	5321	PRESSURE FLOOR S	0		20020529002	OTT
CL600 2B19(RJ)	5410	ENG SUPPORT BEAM	60135006	CRACKED	9 SDRs	QUE
CL600 2B19(RJ)	5410	LWR/UPPER WEB	601350061	CRACKED	19 SDRs	QUE
CL600 2B19(RJ)	5610	CAPT WINDSHIELD	601R350339	CRACKED	4 SDRs	QUE
CL600 2B19(RJ)	5610	CAPT WINDSHIELD	NP1393211	SHATTERED(OUTER)	3 SDRs	VAR
CL600 2B19(RJ)	5610	COCKPIT WINDOW	601R3303311	SHATTERED	4 SDRs	VAR
CL600 2B19(RJ)	5610	COCKPT WINDOW	NP1393276	CRACKED	2 SDRs	QUE
CL600 2B19(RJ)	5610	DOOR	NA	CRACKED	20020822002	OTT
CL600 2B19(RJ)	5610	F/O'S WINDSHIELD	NP1393212	CRACKED	2 SDRs	QUE
CL600 2B19(RJ)	5610	L/H CKPT SIDE WN	601R330333	CRACKED	20011123006	QUE
CL600 2B19(RJ)	5610	L/H WINDOW	NP1393225	CRACKED	7 SDRS	QUE
CL600 2B19(RJ)	5610	L/H WINDSHEILD	NP1393215	CRACKED	12 SDRS	OTT
CL600 2B19(RJ)	5610	L/H WINDSHEILD	NP1393219	CRACKED	3 SDRs	OTT
CL600 2B19(RJ)	5610	L/H WINDSHIELD	0		2 SDRs	OTT
CL600 2B19(RJ)	5610	L/H WINDSHIELD	601R330331	9631H1938	20020819002	OTT
CL600 2B19(RJ)	5610	LEFT SIDE WINDOW	NP1393221	CRACKED	5 SDRs	VAR
CL600 2B19(RJ)	5610	LEFT WINDSHIELD	NP13932319	CRACKED	20011217009	QUE
CL600 2B19(RJ)	5610	NIL	0		20020104013	QUE
CL600 2B19(RJ)	5610	PILOT SIDE WNDOW	NP1393225	CRACKED	7 SDRs	QUE
CL600 2B19(RJ)	5610	PILOT WINDSHIELD	601R330331	CRACKED	20020301002	QUE
CL600 2B19(RJ)	5610	PILOT'S WINDOW	NP1393226	CRACKED	5 SDRs	QUE

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
CL600 2B19(RJ)	5610	R/H WINDSHEILD	NP13932110	CRACKED	7 SDRs	VAR
CL600 2B19(RJ)	5610	R/H WINDSHEILD	601R3303310	CRACKED	3 SDRs	OTT
CL600 2B19(RJ)	5610	R/H WINDSHIELD	NP1393216	CRACKED	2 SDRs	QUE
CL600 2B19(RJ)	5610	R/H WINDSHIELD	0	CRACKED	20020516002	QUE
CL600 2B19(RJ)	5610	R/H WINDSHIELD	601R3303314	CRACKED	20020315002	QUE
CL600 2B19(RJ)	5610	SIDE WINDOW	NP1393222	CRACKED	2 SDRs	VAR
CL600 2B19(RJ)	5610	WINDOW	0	CRACKED	20020910001	OTT
CL600 2B19(RJ)	5610	WINDOW ASSEMBLY	0		20020826005	QUE
CL600 2B19(RJ)	5610	WINDSCREEN	0	CRACKED	20021220005	ATL
CL600 2B19(RJ)	5610	WINDSHIELD	01058H42001	INNER PLY CRACKED	20011218008	QUE
CL600 2B19(RJ)	5610	WINDSHIELD (L/H)	601R330335	SHATTERED	20020715006	OTT
CL600 2B19(RJ)	5610	WINDSHIELD R/H	0		20020517001	OTT
CL600 2B19(RJ)	5610	601R33033-9	0		20020704002	OTT
CL600 2B19(RJ)	5730	L/H WINGBOX EXT	60010385	DAMAGED	20020215002	QUE
CL600 2B19(RJ)	5730	SCREW HOLES	0	CRACKED	20020211008	QUE
CL600 2B19(RJ)	5730	WING PLANK	601R10004	CRACKED	2 SDRs	QUE
CL600 2B19(RJ)	5750	AILERON	0	FAILED	20020110014	QUE
CL600 2C10(RJ)	1210	REFUEL/DEFUEL PN	79888311	UNKNOWN	2 SDRs	OTT
CL600 2C10(RJ)	2760	HINGE FITTING	C670170855	CRACKED	20021129005	OTT
CL600 2C10(RJ)	2760	SEE DESCRIPTION	SEE DESCRIPTION		20020823001	OTT
CL600 2C10(RJ)	2760	SSCU	C13045BA02	FAILED	20020510012	QUE
CL600 2C10(RJ)	2800	REFUEL/DEFUEL PA	0		20020715004	OTT
CL600 2C10(RJ)	2820	FUEL LINE	CC670621042	CRACK	20021222001	OTT
CL600 2C10(RJ)	2820	FUEL SENSE LINE	CC670622581	BROKEN	2 SDRs	QUE
CL600 2C10(RJ)	2820	TUBE	CC670622471	BROKEN	20020502024	QUE
CL600 2C10(RJ)	2910	HYDRAULIC LINE	MM67075293001	CRACKED	20020828001	OTT
CL600 2C10(RJ)	2910	HYDRAULIC LINE	CN6272003001	WELDING CRACK	20020826001	OTT
CL600 2C10(RJ)	4930	FUEL NOZZLE	WE38304862	CRACKED	3 SDRs	OTT
CL600 2C10(RJ)	5312	PRESSURE BULKHEAD	MM67036182		2 SDRs	OTT
CL600 2C10(RJ)	5610	COPILOT WINDOW	601R3303312	SHATTERED	8 SDRs	VAR
CL600 2C10(RJ)	5610	DOOR	NA	CRACKED	20020523004	OTT
CL600 2C10(RJ)	5610	L/H SIDE WINDOW	601R3303311	CRACKED	20021025005	OTT
CL600 2C10(RJ)	5610	LH WINDSHIELD	601R330339	CRACKED	20020620002	OTT
CL600 2C10(RJ)	5610	RH SIDE WINDOW	NP1393226	CRACKED	20020905002	OTT
CL600 2C10(RJ)	5610	RIGHT WINDSHIELD	NP1393216	CRACKED	20020103008	QUE
CL600 2C10(RJ)	5610	WINDSHIELD		CRACKED	2 SDRs	OTT
CESSNA						
A150K	5700	BRACKET ASSEMBLY	04320041	CRACKED	20020411008	ATL
A152	5511	L/H INBD L/E RIB	043200146	CRACKED	20021105009	QUE
A185F	0000	AILRN CNTRL DRUM	05117831	CHIPPED	20020325005	WST
A185F	2432	REINFORC BRACKET	07321011	CRACKED	20020829005	WST
A185F	2720	RUDDER CABLE, FW	0510105173	FRAYED	20011211004	ATL
A185F	2750	FLAP PULLEY BRACKET	0512128	BROKEN	2 SDRs	VAR
A185F	3200	FORK	6960298	CRACKED	20020523017	ONT
A185F	3246	FOAT HATCH COVER	65D1	MISSING	20020729006	ONT
A185F	5312	BULKHEAD-L/H	07421155	CRACKED	20011219006	ATL
A185F	5500	ANGLE-TAILCONE	07120487	CRACKED	20020606008	ONT
A185F	5511	CHANNEL	07326032	CRACKED	20011211005	ATL
A185F	5511	REINFORCEMENT	07321014	CRACKED	20011221001	ATL
A185F	5521	CANTED TIP RIB	07346041	CORRODED	20011211019	ATL
A185F	5551	REINFORCE BRACKET	07321014	CRACKED	20021122002	ONT
P210N	3220	LOWER TRUNION	124340215	CRACKED	20011219004	ONT
R172K	2410	BEARING	0	SEIZED	20020611004	WST
S550	5730	DOUBLER	NA	CRACKED	20021016035	CTR
TR182	2435	MOTOR	0	SEPARATED ARMATU	20020801015	WST
TU206C	5512	FITTING	07326012	SHEARED	20020322004	PAC
TU206G	3246	LINK	3A050518001	SEVERED	20020906001	ONT
U206B	5744	AILERON HINGE BRACKET	1220[illegible]011	CRACKED	20020530010	ONT
U206E	5744	O.B AILERON HINGE	122005112	CRACKED	20020830020	ONT
U206F	5744	HINGE	122005311	CRACKED	20020529003	PAC
U206G	2701	CONTROL TUBE	126014215	CRACKED	20011018015	ONT
U206G	2720	ARM RUDDER BAR	0411307	CRACKED	20011018014	ONT
U206G	2731	SCREW ASSEMBLY	03103625	BROKEN	20020726020	ONT
U206G	2820	FUEL LINE	NA	CORROSION	20021204005	QUE
U206G	2842	FUEL QUANTITY SENDER	0	CORRODED	20011031018	ONT
U206G	5520	RIB ASSEMBLY	12346391	CRACKED	20011018012	ONT
U206G	5744	AILERON BRACKET	122005312	CRACKED	20011019013	OTT
U206G	5751	L/E SKIN	122008516	CRACKED	20011031019	ONT
150F	5743	STIFFENER ASSEMBLY	04118991	UNSERVICEABLE	20021008006	ONT
150J	2720	RUDDER STOP	NAS428H37	MISSING	20020731014	QUE
150L	3246	WHEEL HUB ASSEMBLY	C30057	CRACKED	20020729011	CTR
150M	0000	CLUTCH	64150020SC	SLIPPING	20011019026	ATL
150M	2433	RECTIFIER	D2FF10B379AA	WORN	20020130006	ONT
150M	2434	FAN/STIFFENER	UNKNOWN	BROKEN TO PIECES	20021022004	ONT

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
150M	2434	HUB	530406	WORN	20020903004	QUE
150M	2436	VOLTAGE REGULATOR	VR600A	INOPERATIVE	20011005003	ONT
150M	2720	SPRING	031019613	BROKEN	20011102007	QUE
150M	2731	TRIM TAB ACTUATOR	12600741	MISSING PINS	20020812005	ONT
152	2720	SPRING-BRAKE	031019613	BROKEN	20011102009	PAC
152	2720	TUBE ASSEMBLY NOSE	05430224	JAMMED	20011219008	PAC
152	2731	ELEVATOR SKIN	043200122	CRACKED	20020208004	ONT
152	3221	FORK ASSEMBLY	04425037	CRACKED	4 SDRs	ONT
152	5320	STIFFENER	04102362	CRACKED	20020503004	QUE
152	5342	REINFORCE SPAR	043200115	CRACKED	20020904001	PAC
152	5346	ENGINE MOUNT	0451003 36	CRACKED	20020725008	PAC
152	5511	L/H INBOARD L/E RIB	043200146	CRACKED	20021119009	QUE
152	5511	R/H INBOARD L/E RIB	04320016	CRACKED	20021119010	QUE
152	5530	FITTING	04311481	BROKEN	20020718009	PAC
152	5542	FORWARD SKIN	04330106	CRACKED	20020501011	ONT
152	5551	BRACKET	04320049	CRACKED	20021031002	ONT
170A	5346	BRACKET	04112816	EXTREME CORROSION	20011120009	WST
172B	5510	SPAR	05320019	CRACK	20020102003	ONT
172D	3246	WIRE PULL TIER	OD33924925	BROKEN	20020916005	ONT
172F	2730	BRACKET ASSEMBLY	05130633	CRACKED	20020530006	ONT
172G	3246	FLYING WIRE	704AC5225	BROKEN	20021119008	ONT
172G	5511	HORIZ STAB SPAR	0	CRACKED	20020617002	WST
172K	2820	FUEL LINE	0500011874	WORN	20020810003	ONT
172M	2312	RADIO NAV COM	300	FAILED	20020830008	CTR
172M	2436	OVEN VOLTAGE SENSOR	0560	FAILED	20020830006	CTR
172M	2700	BUSHING	05341251	WORN	2 SDRs	ATL
172M	2720	SPRING	03101965	BROKEN	20020213007	ONT
172M	2810	VALVE ASSEMBLY	07161249	FAILED	20021119012	ATL
172M	3242	BOLTA	N4H214	BROKEN	20021016030	WST
172M	3244	AIRSTOP MICHELIN	0923150	DEFECTIVE	20020522006	CTR
172M	3250	ARM, NG STEERING	07430118	CRACKED	20011105014	ATL
172M	3400	SAME AS ABOVE	0	UNSERVICABLE	2 SDRs	QUE
172M	3422	VANE	0	STICKY	20020208002	WST
172M	3457	GN	S430000013911	FAILED	20020913004	WST
172M	5540	RUDDER HORN ASSEMBLY	05310081	CRACKED	20020425003	ATL
172N	2720	RUDDER SPRING	03101965	BROKEN	2 SDRs	VAR
172N	3246	WHEEL HALF	D30656	CRACKED	20020724004	QUE
172N	3340	LANDING LIGHT SWITCH	0		20021120006	PAC
172N	5260	STEP & HANDLE KITAK	172168	CRACKED	20020722015	ONT
172N	5310	DOOR POST ASSEMBLY	05132831	CRACKED	20020125004	WST
172P	3211	BOLT	S21381	SHEARED	20020422003	ONT
172P	3252	SHAFT	05421011	SHEARED	2 SDRs	ONT
172P	5310	SKIN DECK	05135212	CORRODED	20020619006	PAC
172P	5510	FRONT SPAR ASSEMBLY	053200198	CRACKED	20020116004	ATL
172R	2810	FUEL TANK	051600918	CRACKED	20021118007	ONT
1172S	5312	AFT SPINNER BULK	055032111	CRACKED	20020606017	PAC
177B	2434	ROTOR	ES4145	OUT OF TOLERANCE	20020730006	WST
180A	2730	PIN EYE	16322RS	BROKEN	20020725010	PAC
180H	3221	BOLT	0	BROKEN	20011116016	WST
180H	5312	TAILCONE REINFORCE	07120487	CRACKED	20021122003	ONT
180J	2720	PULLEY BRACKET	05121602	CRACKED	20011205004	PAC
180J	3200	SHOCK STRUT	30A04000100	BROKEN	20011217017	ONT
180J	3211	FUSE FITTING	36653RH	CORRODED	20011127011	ONT
180J	5550	HINGE ASSEMBLY	07321008	CRACKED	20011029012	PAC
180J	5744	FLAP ROLLER BUSH	0523921	CRACKED	20011205003	PAC
182	3231	OUTBOARD L/G SUPPORT	05411212	CRACKED	20020213011	PAC
182	5712	RIB CENTRE	17207221981	FAILED	20020430003	PAC
182K	2720	REAR BULKHEAD	07126161	CRACKED	20020307002	ONT
182K	3211	LANDING SUPPORT	07416032	CRACKED	20020307004	ONT
182K	5313	FWD FUSE SKINLM	07133343	CORRODED	20020307005	ONT
185C	3213	GEAR LEG	740017	CRACKED	20020405002	CTR
208	5312	AFT BULKHEAD	12128582	CRACKED	20011002010	PAC
208	2731	ELEV TRIM ACTUATOR	26612151	CORRODED	20011029006	PAC
208	2910	TUBE ASSEMBLY	8A12000007	DEFORMED	20020806004	ONT
208	3060	WIRE CONNECTOR	2601048200	BURNT	20011001002	ONT
208	3246	STRUT FITTING	8AO2195006	HOLES ELONGATED	20020612005	ONT
208	5312	CANTED BULKHEAD	2612591	CORRODED	20011029009	PAC
208	5343	FITTINGS	26111379	CORRODED	20011029005	PAC
208	5347	SEAT RAIL	2611106014	CORRODED	20011029007	PAC
208	5510	ATTACH SUPPORT	26320273	CORRODED	20011029003	PAC
208	5511	SPAR CAP	26320233	CORRODED	20011029010	PAC
208	5550	HINGE ASSEMBLY	263440221	CORRODED	20011029008	PAC
208B	1100	NIL	0		20011219007	ONT
208B	2434	ALTERNATOR	C6115050201		20021118009	OTT
208B	2436	GCU	61539012N		20011019001	ONT
208B	2700	ELEV TRIM ACTUATOR	26612151	FAILED	20020118011	ONT
208B	2710	BELLCRANK	262400724	WORN	20011005004	ONT
208B	2731	SCREW	26612158	DAMAGED THREADS	20011017006	CTR
208B	2752	FLAP ACTUATOR	99105863RX	LOCKED	20011105004	OTT
208B	2752	FLAP MOTOR	145350	SEIZED	20011116013	WST
208B	3244	MAIN WHEEL	0		20020905008	ONT
208B	3340	SWITCH	MS25306222	ON CONDITION	20021206004	WST
208B	3340	WIRE (2)	20 GAUGE	SHORTED	20011210013	WST
208B	3420	C.D.I.	0	FAILED	20020408014	WST
208B	3457	COOLING FAN	FN100	FAILED	20020820007	ONT
208B	5230	LATCH	260120413	LOOSE	20020529005	PAC
210L	3260	SQUAT SWITCH	12700341	FAILED	20021115009	WST
305	3220	TUBE	280X4	SPLIT	20020731017	OTT
310L	3230	DOWN LOCK SPRING	50410051	BROKEN	20021118004	ONT
310R	2434	ALTERNATOR	ALT9422	FAILED	20020620003	CTR
310R	3310	POST LITE ADAPTOR	A91641	BROKEN	20020116001	ONT
337A	2720	MOUNT BRACKET	151350013	CRACKED	20021125010	ONT
337F	3297	MLG DOWNLOCK SWITCH	S20881	BROKEN	20021004007	WST
337G	3230	LANDING GEAR	15410072	STIFF	20011211010	QUE
337G	3232	RETAINER RING	MS166251068	FAILED	20020821007	ONT
401	2140	HEATER FUEL PUMP	AHE722043	LEAKING FUEL	20011212004	CTR
401B	0000	SPACER	85921701	WRONG PART	20011003015	CTR
401B	5743	HINGE BRACKET	082210045	CRACKED	20011030005	CTR
402B	3222	NIGEAR TRUNNION	5842000213	CRACKED	20020607011	CTR
404	2434	ALTERNATOR DRIVE	646855	PITTED	20021210008	ONT
404	3221	CHANNEL	58130441	CRACKED	20021210005	ONT
404	3221	NLG ELL WEBS	5213040910	CRACKED	20021210006	ONT
414	2434	ALT DRIVE GEAR	0	RUBBER MISSING	20020531008	CTR
414	3200	BELLCRANK	59420011	CRACKED	20020626013	CTR
414	3213	UPPER TRUNNION	5041000206	CRACKED	20020814001	CTR
414	3230	LINK ASSEMBLY	08411102	SHEARED	20011023003	CTR
414	5346	ENGINE MOUNT	J951358	DEFORMED	20020719009	CTR
414A	2400	FUSEABLE PLUG	0	OPENED	20020325006	WST
414A	2916	SIGHT TUBE	511700712	SCRAP	20020722006	ONT
441	2110	THERMAL SWITCH	7468331	SHORTED	20021010007	QUE
441	2897	WIRE HARNESS	57181061	CHAFED	20020611001	ONT
441	2910	HOSE	CM3690A60XXX	CHAFED	20020612002	CTR
441	3160	DPU	6229682004	FAILED	20021202001	PAC
441	3416	ALTIMETER ENCODER	10220011833	DEFECTIVE	20020719002	PAC
441	3451	DME 40	6221233001	FAILED	20021202003	PAC
441	3457	GNS 530	0110055010	DEAD	20021202002	PAC
441	3610	EMERGENCY PRESS RELIEF VALVE	47061	FAILED OPEN	20011003016	CTR
441	5340	BRACKETS	58130441	CRACKED	20021120004	CTR
441	5440	ENGINE TRUSS	575100615	BROKEN	20021115022	CTR
500	2422	WIRE	3P639CP589	BHSHORTED	20011018024	ONT
500	3610	CLAMPS	189148	LOOSE	20011004008	OTT
550	2121	VENT BLOWER	0	CHAFED	20011018021	ONT
550	2440	EXTERNAL GPU PLU	0		20020416005	ONT
550	2497	WIRE ASSEMBLY	650801127	SPLIT INSULATION	20021101011	WST
550	2711	CONTROL SHAFT	556575717	DAMAGED	2 SDRs	ONT
550	2731	CANTED BULKHEAD	641201534	WORN	20021002001	ONT
550	2750	FLAP MOTOR	9910554	INTERMITTENT	20021203003	ONT
550	2780	L/H MOTOR FLAP	99100554	EXCESSIVE PLAY	20020220008	WST
550	3200	PINS & BUSHINGS	5541205678	CORROSION	20021220009	ONT
550	3211	BUSHING	684130667	CORRODED	20021001007	ONT
550	3242	BFG BRAKE ASSEMBLY	215286	BROKEN STATOR DI	20020102002	ONT
550	3242	HOSE	AE3683218G0150		20021218004	ONT
550	3242	STATOR	1338931	CRACKED	20020606013	ONT
550	3242	STATOR	1338931CGNGC	CRACKED	20020327008	ONT
550	3242	STATOR	1338932	CRACKED	2 SDRs	ONT
550	3242	STATOR DISC	1338932CHNGD	CRACKED	20020419001	ONT
550	3242	STATOR PLATE	133893	BROKEN	20021204006	ONT
550	3297	WHEEL GEARS	31064	MISSING	20020313004	PAC
550	3340	NAV LIGHT LENS	68417066530	TAB BREAKING OFF	20020416003	ONT
550	3610	DUCT	99120264	UNCOUPLED	20020524001	ONT
550	5330	OUTBOARD DOOR LINE	TE55112402	WORN	20020711002	ONT
550	5330	SKIN SEAM	0	CRACKED	20011018020	ONT
550	5711	WING ATTACH LUGS	0	NICKED	2 SDRs	ONT
550	5730	R/H SKIN PANEL	65210008	CORRODED	20021001008	ONT
550	5753	RIB EXTENSION	652511585	WORN	20021001003	ONT
550	5753	RIB EXTENSIONS	6521158192	WORN/GOUGE	20021220007	ONT
560	3260	DIFF PRESS SW	D37C15	OUT OF CALIBRATN	20011116019	CTR
560XL	2720	RUDDER SERVO CAB	666000178	SERVICEABLE	20020502027	QUE

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
650	2720	CABLE AFT ASSEMBLY	626023248	FRAYED	20020829002	QUE
750	5524	ELEVATOR HINGE		CRACKED	2 SDRs	VAR
CHAMPION						
7EC	5711	SPARS	0	CRACKED	20020722013	ONT
7ECA	2720	MICO-SLEEVE	0	NOT CRIMPED PROP	20021029008	WST
7ECA	2731	ELEV CABLE	0	WORN/FRAYED	20020322006	WST
7GCBC	5711	FRONT,-REAR SPAR	0		20020313001	CTR
COLONIAL						
C 2	3213	CYLINDER	14102B		20020205002	ONT
CONAIR						
FIRECAT	5540	BEARING	KSP6A	EXCESSIVE PLAY	20020220006	PAC
CONVAIR						
340	2434	D.C. GENERATOR	0		20011123010	PAC
340	3423	SEAL	UK	LEAKING	20020613005	PAC
440	3251	PULLEY	AN2102B	SPLIT	20010522017	PAC
440	3310	LAMP HOLDER ASSEMBLY	13053WN	BURNED	20020624006	PAC
440	5610	L/H WINDSHIELD	340311030 17	SHATTERED	20021007011	QUE
580	2610	SENSING ELEMENT	356080765		20020206005	PAC
580	2612	ZONE 1 FIRE LOOP	356680900	CHAFED	20020411010	PAC
DASSAULT						
FALCON 10	3520	SQUAT SWITCH	9G1C24091	MOISTURE INSIDE	20020207001	ONT
FALCON 20	2822	FUEL BOOST PUMP	2060B	FAILED	20020903016	ONT
FALCON 20	5610	PANEL GLASS	MY20261109	CRACKED	20010914006	ONT
DEHAVILLAND						
DHC 1B 2	2720	L/H RUDDER CABLE	C2CF741AND	FRAYED	20011211009	ATL
DHC 2 MKI	2701	CONTROL COLUMN	C2CF1977	CRACKED	20020129002	PAC
DHC 2 MKI	2720	FWD RUDDER CABLE	VALLT2CF1029R1	FRAYED/WORN	20011218009	PAC
DHC 2 MKI	2840	FUEL TRANSMITTER	TJ13	LEAKING	20020129001	PAC
DHC 2 MKI	3213	STRUT ATTACHMENT	901230602	CRACKED	20020312001	PAC
DHC 2 MKI	3246	FLOAT DECK FITTING	6A02362007	BROKEN	20020527010	QUE
DHC 2 MKI	3246	SPREADER BAR FITTING	901230602	CRACKED	20020430010	PAC
DHC 2 MKI	3250	TORQUE TUBE	C2UT473	CRACKED	20011205005	PAC
DHC 2 MKI	3270	TORQUE TUBE	C2UT473	CRACKED	20020826010	PAC
DHC 2 MKI	3411	ELECTRICAL CONNECTOR	UNKNOWN	BURNT	20011217025	PAC
DHC 2 MKI	5320	STRUT ASSEMBLY	C2FS3280A	CORRODED	20011121005	CTR
DHC 2 MKI	5524	HINGE PIN	C2TE67	UNDAMAGED	20020311005	PAC
DHC 2 MKIII	2730	BEARING	KS4	DISINTEGRATED	20020717001	ONT
DHC 3	2720	CABLE CONTROL RUDDER	C3CF1985	WORN	20020125006	QUE
DHC 3	2731	R/H SERVO TAB	C3TE1312	IN 3 PIECES	20020626005	ONT
DHC 3	3222	FRONT STRUT	C3UF1085	CRACKED	20020211016	CTR
DHC 3	5523	ARM ATTACH BLOCK	VALTOCC113618	CRACKED	20011004005	ONT
DHC 3T	2750	O/B FOREFLAP	C3WF24		20020613001	OTT
DHC 6	5413	LONGERON	C6W1512S141		20020913012	PAC
DHC 6 100	2460	WIRE	M7A16	BURNT	20020124002	PAC
DHC 6 100	2700	ELEVATOR-FLAP IN	0		20020627011	PAC
DHC 6 100	5713	NACELLE LONGERON	0		20020627010	PAC
DHC 6 200	2710	COVER	0	FAILED	20020617004	CTR
DHC 6 300	2121	EXPANSION CHAMBER	C6VF11181	BROKEN	20011016001	ONT
DHC 6 300	2432	CELL	0	DEFORMED	20011128008	QUE
DHC 6 300	2436	REGULATOR VOLT	VR1010242A	FAILED	20010921025	QUE
DHC 6 300	2750	ELEV/FLAP ROD	C6CT10461	LOOSE SWAGE	20020416002	ONT
DHC 6 300	2820	BODY	700246C	CRACKED	20020410003	PAC
DHC 6 300	3242	ORG. BRAKE LINING	09610800	CRACKED	20020621001	ONT
DHC 6 300	5210	AIRSTAIR DOOR AS	C6FS36265	FAILED	20020506010	ONT
DHC 6 300	5311	AFT FUSELAGE RIB	C6FS181927		20020822004	WST
DHC 6 300	5311	R/H SIDE FRAME	C6FSM142236	CRACKED	20011030002	WST
DHC 6 300	5530	ADAPTER PLATE	C6FSM181829	CRACKED	20021115016	WST
DHC 7 102	2740	WING SPAR CAP	75710099	CHAFED	20020104020	ONT
DHC 7 102	3020	DE-ICE BOOT	297D513658	UNGLUED	20011217015	ONT
DHC 7 102	5730	PANEL ASSEMBLY	75300154011	MISSING	20011121012	ONT
DHC 7 103	2900	HOSE	DSC152D8025426	RUPTURED	2 SDRs	OTT
DHC 8	2421	ROTOR ASSEMBLY	31708301	FAILED	20020403007	OTT
DHC 8	2910	HYDRAULIC LINE	82950010307	PIN HOLE IN LINE	20020415002	OTT
DHC 8	5412	FAIRLEAD	SEP038SEP039	NEW	20011211011	ONT
DHC 8	5751	AILERON R/H	85740004003	IN SERVICE	20020321003	OTT
DHC 8 100	2450	AC POWER MNITR PAN	67003008010	BURNT	20020201002	ONT
DHC 8 100	3230	NLG RELEASE CABLE	83200500003	BROKEN	20010921010	ONT
DHC 8 100	3230	RETRACT ACTUATOR	0		20020613002	OTT
DHC 8 100	3414	AIRSPEED INDICATOR	2114011342	LEAKING	20011018001	ONT
DHC 8 102	2100	GUIDE PIN	311325001	DAMAGED	20020805005	QUE
DHC 8 102	2140	HEAT EXCHANGER	7786832		20020508009	ATL
DHC 8 102	2422	400 HZ INVERTER	0		20011207003	ATL
DHC 8 102	2433	TRU GROUND WIRE	28VS200Y4DH		20020708005	ATL
DHC 8 102	2434	STARTER/GEN	230880028	FAILED	20011004007	ONT
DHC 8 102	2435	DC STARTER/GENERATOR	0	FAILED	20021107003	ATL
DHC 8 102	2435	O-RING SEAL	AS3209241	DAMAGED	20010905011	ATL
DHC 8 102	2450	WIRING	242110037C12A1	BURNT	20020226013	ATL
DHC 8 102	2497	WIRING	0		20020624004	ATL
DHC 8 102	2700	NIL	0		20011029004	ATL
DHC 8 102	2722	O-RING	NAS16128	CUT	20020724012	ATL
DHC 8 102	2722	RUDDER ACTUATOR	112003		20020904002	PAC
DHC 8 102	2741	ELEVATOR TRIM IN	83910081003	NEW	20020524008	ATL
DHC 8 102	2750	TORQUE TUBE ASSEMBLY	0	CHAFED	20020627006	ATL
DHC 8 102	2760	ACTUATOR BRACKET	85710559001	CRACKED	20011204001	ATL
DHC 8 102	2821	FUEL FILTER	3038454	DIRTY	20020502001	ONT
DHC 8 102	2844	PRESSURE SWITCH	7G980	INTERMITTENT	20020813001	ATL
DHC 8 102	2900	HYDRAULIC TUBE ASSEMBLY	82950010197	PIN HOLE	20021129006	ATL
DHC 8 102	2900	HYDRAULIC LINE	82970009387	LEAKING	20021217004	ATL
DHC 8 102	2900	TEE-BULKHEAD	AN938D8	CRACKED	20021107002	ATL
DHC 8 102	2900	TUBE ASSEMBLY	82970410115	CHAFED	20021115017	ATL
DHC 8 102	2900	TUBE ASSEMBLY	82950010193	PIN HOLE LEAK	20021011003	ATL
DHC 8 102	2910	GEAR DOWNLINE	82910009113	LEAKING	20020624001	ATL
DHC 8 102	2910	HYDRAULIC LINE	82970010161	LEAKING	20011001010	PAC
DHC 8 102	2910	HYDRAULIC LINE	82950010109	CHAFED	20020903010	ATL
DHC 8 102	2910	HYDRAULIC LINE	82950010273	CRACKED	20020425004	ATL
DHC 8 102	2910	HYDRAULIC LINE	82950010115	LEAKING	20020630024	ATL
DHC 8 102	2910	HYDRAULIC LINE	82960010143	LEAKING	20020704003	ATL
DHC 8 102	2910	HYDRAULIC LINE	82910010195	PIN HOLE LEAK	20020726012	ATL
DHC 8 102	2910	HYDRAULIC LINE	82950010173	RUPTURED	20020627005	ATL
DHC 8 102	2910	HYDRAULIC LINE	82970009325	CRACKED	20021216002	ATL
DHC 8 102	2910	HYDRAULIC LINE	DCS252840124	SPLIT	20020510025	ATL
DHC 8 102	2910	HYDRAULIC TUBE	82950010303	PIN HOLE LEAK	20020424003	ATL
DHC 8 102	2910	HYDRAULIC TUBE	82970010477	SEVERED	20011113003	ATL
DHC 8 102	2910	RIGID HYDRAULIC TUBE	82910009143	LEAKING	20011031009	ONT
DHC 8 102	2910	RIGID HYDRAULIC LINE	82950010207	CRACKED	20020926005	ATL
DHC 8 102	2910	RIGID HYDRAULIC LINE	82950010335	LEAKING	20020910005	ATL
DHC 8 102	2910	RIGID HYDRAULIC TUBE	82970009387	LEAKING	20011031010	ONT
DHC 8 102	2910	RIGID HYDRAULIC TUBE	82950010269	PIN HOLE LEAK	20020226012	ATL
DHC 8 102	2910	RIGID HYDRAULIC TUBE	82970009129	PIN HOLE LEAK	20020226011	ATL
DHC 8 102	2910	RIGID HYDRAULIC TUBE	82970010249	PIN HOLE LEAK	20011116012	ATL
DHC 8 102	2910	SHUTTLE VALVE	0	STUCK OPEN	20020821004	ATL
DHC 8 102	2910	TUBE ASSEMBLY	82970017 5	BROKEN	20020509009	ATL
DHC 8 102	2911	TUBE ASSEMBLY	82970410119	CHAFED	20021115018	ATL
DHC 8 102	2913	ENGINE DRIVEN PUMP	570347	FAILED	20020107001	ATL
DHC 8 102	2913	SHAFT ASSEMBLY	570717	SHEARED IN TWO	2 SDRs	ATL
DHC 8 102	2920	FLUID LINE	82970010143	LEAKING	20020813005	ATL
DHC 8 102	2931	PRESSURE SWITCH	7G772	FAILED	2 SDRs	VAR
DHC 8 102	2932	PRESSURE SWITCH	0		20020627003	ATL
DHC 8 102	3010	DE-ICE BOOT	8SC0029029	TORN	20011108006	PAC
DHC 8 102	3040	RELAY	KCD4N	FAILED	20011001009	PAC
DHC 8 102	3211	FITTING	85311176	CRACKED	20021010006	QUE
DHC 8 102	3230	CABLE ASSEMBLY	8320506003	FRAYED/BROKEN	20011126005	ATL
DHC 8 102	3230	PSEU	841005		20021206002	ATL
DHC 8 102	3233	GEAR ACTUATOR	10500103		20020524002	ATL
DHC 8 102	3234	SELECTOR VALVE	L0		20020906003	QUE
DHC 8 102	3243	HYDRAULIC LINE	82920010177	LEAKING	20020603003	ATL
DHC 8 102	3246	OUTER WHEEL HALF	314354	DESTROYED	20020715010	ATL
DHC 8 102	3246	WHEEL HALF ASSEMBLY	3006202	PIECE MISSING	20010924009	ATL
DHC 8 102	3250	FUSE LINK	88521	FAILED	20011227003	ATL
DHC 8 102	3260	CABLE ASSEMBLY	82400033001	BROKEN	20011227001	ATL
DHC 8 102	3260	LANDING GEAR POST	0		20021219008	ATL
DHC 8 102	3260	PC CARD	82410306001		20020424005	ATL
DHC 8 102	3297	WIRING HARNESS	0	CHAFED	20020617009	ATL
DHC 8 102	3310	DC POWER SUPPLY	18271	BURNT	20020220014	ATL
DHC 8 102	3320	LAMP END SOCKET	BR63031023	DESTROYED	20020712001	ATL
DHC 8 102	3413	TCAS-VS	457400GA1312	INCORRECT READING	20021219006	ATL
DHC 8 102	5280	AFT HINGE	AN960816L	WORN	20021002004	ATL
DHC 8 102	5610	HEAT TERMINAL	0	OVERHEATED	20011004011	ATL
DHC 8 102	5610	WINDOW	NP15790213	CRACKS	20021217007	ATL
DHC 8 102	5730	WIGGINS FITTING	0	INCORECT INSTALL	20020708001	QUE
DHC 8 106	5541	R/H UPPER SKIN	85540012103	CRACKED	20011029018	WST
DHC 8 200	2420	AC CONTACTOR BOX	82450026	BURNT	20011109015	ONT
DHC 8 200	2422	AUX. INVERTER	DH1030246		20021213005	OTT
DHC 8 200	2497	L/H AC CONTACTOR	82450016		20021024003	OTT
DHC 8 200	3246	MAIN LANDING GEAR	83210001007		20021213006	OTT
DHC 8 300	2100	AIR CYCLE MACHINE	0	SEIZED	20020815003	OTT
DHC 8 300	2197	AIR CONDITIONING	0		20021017003	OTT
DHC 8 300	2565	DITCHING DAM ASSEMBLY	4KA102510REVL	FAILED	20011017015	ONT

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
DHC 8 300	2730	ELEVATOR BUMPER STOP	85520271003	DETERIORATED	20020131009	ONT
DHC 8 300	2820	TUBE	82630105139	CHAFED	20020819010	OTT
DHC 8 300	2910	ENGINE DRIVEN PUMP	82970003I7	LEAKING	20011017009	ONT
DHC 8 300	2910	ENGINE HYDRAULIC PUMP	0	INTERNAL FAILURE	20011218005	ONT
DHC 8 300	2910	HYDRAULIC LINE	AE2463530E240	SPLIT	20020522004	OTT
DHC 8 300	2910	HYDRAULIC TUBE	82970009267	CHAFED	20011004003	ONT
DHC 8 300	2910	TUBE ASSEMBLY	82970002G9	CRACKED	20011004001	ONT
DHC 8 300	3010	DISTRIBUTOR VALVE	153212A	FAILED	20011017014	ONT
DHC 8 300	3233	ACTUATOR	8300101	CONTAMINATED	20020508012	ONT
DHC 8 300	3320	LAMP HOLDER	B0330211150	ARCING	20020508011	ONT
DHC 8 300	5220	BEARING	MS276463839	CORRODED	20020731006	OTT
DHC 8 300	5610	CAPT SIDE WINDOW	17180003	SHATTERED	20020201005	ONT
DHC 8 301	2424	AC GENERATOR CONTROL	51608002	FAILED	20011120014	ATL
DHC 8 301	2710	DISCONNECT CABLE	82700513101	UNK	20020813007	ATL
DHC 8 301	2750	TORQUE TUBE	7343820	WORN	20020312010	ATL
DHC 8 301	2820	TUBE-FUEL LINE	3035987	WORN	20021113001	PAC
DHC 8 301	2820	TUBE-OIL VENT	30347156	WORN	20021113002	ATL
DHC 8 301	2824	DUMP VALVE	0	STUCK OPEN	20020724011	ATL
DHC 8 301	2900	HOSE ASSEMBLY	DSC252B40124	RUPTURED	20021112008	ATL
DHC 8 301	3060	BRACKET	7826511	CRACKED	20020213001	ATL
DHC 8 301	3244	WHEEL ASSEMBLY	314802OPTA	TIRE DESTROYED	20020702011	ATL
DHC 8 301	3297	DOOR	NA	SUSPECT	20020920003	ATL
DHC 8 301	3397	PIDG SPLICE	320562	OVERHEATED/BURNT	20021122009	ATL
DHC 8 301	5230	LINK ASSEMBLY	0	BROKEN	20020425005	ATL
DHC 8 301	5420	BEAM	85310380	CRACKED	20020211001	ATL
DHC 8 311	2213	FLT. GUIDE COMPUTER	7003974722	FAILED	20020817007	ATL
DHC 8 311	2421	AC GENERATOR	31708001A	FAILED	20021115020	ATL
DHC 8 311	2720	PRESSURE SWITCH	7G7921	FAILED	20011203002	ATL
DHC 8 311	2722	PRESSURE REGULATOR	2379003001	FAILED	20021206003	ATL
DHC 8 311	2750	SEAL ASSY	85350712001	2 SDRs		OTT
DHC 8 311	2810	SEALANT	0	LEAKING	20011001001	PAC
DHC 8 311	2900	HYD PRESS MANIFOLD	0	BYPASSING	20020926002	ATL
DHC 8 311	2900	TUBE ASSEMBLY	82920010177	PIN HOLE	20021023006	ATL
DHC 8 311	2910	BRAKE HOSE DISC	252A40272	CRACK	20020521009	QUE
DHC 8 311	2910	FLUID LINE	82970009113	LEAKING	20020813002	ATL
DHC 8 311	2910	HYD FLEX HOSE DISC	252B40124	SPLIT	20011126004	ATL
DHC 8 311	2910	HYDRAULIC LINE	82910010177	PIN HOLE	20021219001	ATL
DHC 8 311	2910	RIGID HYDRAULIC TUBE	82970009379	PIN HOLE LEAKING	20011004006	ONT
DHC 8 311	2916	RELIEF VALVE	3811208102	LEAKS	20011231001	ATL
DHC 8 311	3040	CONTROLLER,HEAT	0802071001		20011210004	ATL
DHC 8 311	3150	SIDE PANEL	8006221	BURNT WIRES/COMP	20021216003	ATL
DHC 8 311	3230	ACTUATOR	82910016009	INTERNAL BYPASS	20011203003	ATL
DHC 8 311	3232	DOOR ACTUATOR	82970014011	CRACKED	20021015009	ATL
DHC 8 311	3244	RECAPPED TIRE	22X65010	OUT OF BALANCE	20011001011	PAC
DHC 8 311	3250	STEERING ACTUATOR	89681	PULLED OUT	20020524007	ATL
DHC 8 311	3310	BULB SOCKET	BVO330002020	BURNT	20011113024	ATL
DHC 8 311	3320	LAMP HOLDER	BV330211150	BURNT	20011001003	PAC
DHC 8 311	3397	WIRING & SPLICE	0	OVERHEATED	20021121006	ATL
DHC 8 311	5210	HAND RAIL	85210240007	SHEARED	20021029011	ATL
DHC 8 311	5300	TRANSVERSE BEAM	85310382	CRACKED	20011105010	ATL
DHC 8 311	5630	OUTER WINDOW	85240076001	CRACKED	20020909001	ATL
DHC 8 314	2910	HYD TUBE LANDING DOWN	82920010189	CRACKED	20020411003	QUE
DHC 8 400	2131	PRESSURE CONTROL PANE	92147A020103	FAILED	20011017012	ONT
DHC 8 400	2210	ATTITUDE HEADING	0		20021218008	OTT
DHC 8 400	2215	AILERON ROLL SER	0		20020930004	OTT
DHC 8 400	2435	DC STARTER GENERATOR	11521082	FAILED	20020508014	ONT
DHC 8 400	2530	WIRING13B	121ORN	CHAFED	20020510009	ONT
DHC 8 400	2612	FIRE LOOP	1010961		20020521002	OTT
DHC 8 400	2612	FIRE SENSING LOOP	0		20020927001	OTT
DHC 8 400	2612	FIRE/OVERHEAT SENSOR	10109801	FAILED	20020131010	ONT
DHC 8 400	2612	OVERHEAT DETECTOR	101098		20020516008	OTT
DHC 8 400	2700	DISPLAY UNIT	0		20020711004	OTT
DHC 8 400	2710	PULLEY	82742339001	SPLIT IN HALF	20011018003	ONT
DHC 8 400	2721	RUDDER TRIM SWITCH	682015	WIRING CHAFED	4 SDRs	ONT
DHC 8 400	2730	PITCH TRIM	0	FAILED	20020510003	ONT
DHC 8 400	2742	PITCH TRM ACTUATOR	0	FAILED	20020509014	ONT
DHC 8 400	2752	PIN	1502371	OUT OF POSITION	20021008004	OTT
DHC 8 400	2780	HYDRAULIC PRESS SWITCH	0	FAILED	20020509008	ONT
DHC 8 400	2781	ELEVATOR TRM INDICATOR	FE278001	FAILED	20020201001	ONT
DHC 8 400	2900	HYDRAULIC PIPE	82974216001	LEAKING	20020510008	ONT
DHC 8 400	2910	HYDRAULIC SYSTEM	0		20020621005	OTT
DHC 8 400	2913	ENGINE DRIVEN PUMP	6617302	FAILED	20020228019	ONT
DHC 8 400	2913	HYDRAULIC LINE	82974219005	RAPTURED	20011031008	ONT
DHC 8 400	3000	ENGINE IDLE ADAPTOR	4100S02801	BURNT	20020131007	ONT
DHC 8 400	3010	DUAL DISTRIBUTION	4100S00501		20020606015	OTT
DHC 8 400	3020	DUAL DISTRIBUTION	0		20020531004	OTT
DHC 8 400	3020	HEATER, ENG INTAKE	4100S02802	BURNT	20011218004	ONT
DHC 8 400	3060	PROP DE-ICE LEAD	69707012	BURNT	20011018002	ONT
DHC 8 400	3097	BUS BAR	697070212	SHORTED, BURNT	20021024005	OTT
DHC 8 400	3230	HYDRAULIC HAND PUMP	1022851		20020823002	OTT
DHC 8 400	3230	LEVER	485121	CRACKED, BROKEN	20011218003	ONT
DHC 8 400	3230	MLG UPLOCK ASSEMBLY	465003	WORN	20020201006	ONT
DHC 8 400	3230	MLG UPLOCK BRACKET	854144465101	FAILED	20020201007	ONT
DHC 8 400	3230	POWER TRANSFER	U5114904		20020604002	OTT
DHC 8 400	3230	PROXIMITY SENSOR	401020101	IMPROPER CRIMPED	20011031006	ONT
DHC 8 400	3230	PSEU	0	FAILED	20020509004	ONT
DHC 8 400	3230	SENSORS	0	FAILED	20020509016	ONT
DHC 8 400	3230	SOLENOID SEQ VALVE	483023	FAILED	20011017013	ONT
DHC 8 400	3244	TIRE ASSEMBLY	0	EXPLODED	20020531013	OTT
DHC 8 400	3246	BEARING	29685	COLLAPSED	20020528008	OTT
DHC 8 400	3250	STEERING CONTROL	0		20020711003	OTT
DHC 8 400	3260	LANDING GEAR POS	473915		5 SDRs	VAR
DHC 8 400	3260	NOSE WHEEL CENTER	471513		20021219003	OTT
DHC 8 400	3260	NOSE WHEEL SENSOR	401020101	BROKEN	20020510007	ONT
DHC 8 400	3260	PROXIMITY SENSOR	0		20020806002	OTT
DHC 8 400	3260	RH MLG DOWNLOCK	464505	INTERNAL SHORT	2 SDRs	OTT
DHC 8 400	3297	LANDING GEAR SYSTEM	0		20020531010	OTT
DHC 8 400	3297	NW SENSOR HARNESS	471515	LEAKING	2 SDRs	ONT
DHC 8 400	3297	NOSE WHEEL CENTER	0		20020606011	OTT
DHC 8 400	3320	FLUOR TUBE HOLDER	404810	BURNT	20020114003	ONT
DHC 8 400	3320	FLUOR TUBE HOLDER	404820	OVERHEATED	2 SDRs	ONT
DHC 8 400	3320	LAMP HOLDER	338210	BURNT	20020509012	ONT
DHC 8 400	3320	LH SIDEWALL LAMP	0	BURNT	20020228017	ONT
DHC 8 400	3440	COMPUTER	42000332501		20021219007	OTT
DHC 8 400	5210	FORWARD PAX DOOR	0		20020515010	OTT
DHC 8 400	5210	FORWARD PAX DOOR	0		20020515011	OTT
DHC 8 400	5230	AFT CARGO DOOR	85237004001	FAILED	20020508013	ONT
DHC 8 400	5270	DOOR LOCK SENSOR	82420109035	FAILED	20020509005	ONT
DHC 8 400	5270	DOOR PROX SENSOR	0	FROZEN	20020509006	ONT
DHC 8 400	5270	SENSOR	0		20020918013	OTT
DHC 8 400	5270	SPRING	85230535101	FROZEN	20020509007	ONT
DHC 8 400	5297	PROX SENSOR SPRING	0	FROZEN	20020509011	ONT
DHC 8 400	5753	FLAP SHROUD SKIN	85731170		20021023004	OTT
DHC 8 402	3060	BUS BAR	697070212	NEW	20020607003	ONT
DHC 8 402	3230	CABLE GUIDE	471901	BENT	20021105002	ONT
DH60G	2210	AUTOPILOT SERVO	ST472	WORN	20020712002	OTT
DH83C	2460	WIRE #8	2431155A81	MELTED	20011126006	ATL
DIAMOND						
DA 20 A1	1410	COOLANT PIPE	2072000002	LEAKING	20020312004	WST
DA 20 A1	5600*	CANOPY SPRING	2056000902	BROKEN	20021217003	ONT
DA 20 A1	5610	CANOPY	2056501100	CRACKED	20021206005	ONT
DORNIER						
328 100	2760	RESTRICTOR VALVE	ZRV873	FAILED	20020606006	WST
DOUGLAS						
B26C	5711	SPAR	0	CORRODED	20020702001	WST
C54EDC	2900	HYD PRESSURE HOSE	0	RUPTURED	20020829012	WST
C54GDC	2900	HYD PRESSURE HOSE	0	LEAKING	20021115003	WST
DC9 32	2170	HEAT EXCHANGER	0	SEPARATED	20011121016	QUE
DC9 32	2731	ROD	31701621	FAILED	20020121004	QUE
DC9 32	3310	MAP LIGHT ASSEMBLY	39564823	BURNT	20010308002	QUE
DC9 32	4920	APU	49700011	FAILED	20011114002	QUE
DC9 83	3260	PROXIMITY SENSOR	833703	SCRAPT	20020702009	QUE
MD 83	3246	HALF INBOARD WHEEL	50078902	CRACKED	20021010005	QUE
EMBRAER						
EMB 110	3246	INNER WHEEL HALF	300608	FRACTURED	20021030006	OTT
EMB 110P1	2120	CLAMP	4562150	LOOSE	20020523009	PAC
EMB 110P1	2622	EXTINGUISHER	0	LOOSE	20021104007	OTT
EMB 110P1	2730	ELEVATOR CABLE110	K15001012	FRAYED	20021101003	OTT
EMB 110P1	3010	WING DE-ICE BOOT	25S5D508419	RIPPED	20011018013	OTT
EMB 110P1	3210	BALL JOINT	14445	DAMAGED THREADS	20011029001	OTT
EMB 110P1	3230	TORQUE LINK	14470	CRACKED	20021028004	CTR
EMB 110P1	3260	DOWNLOCK	1459500001	FAILED	20011121014	ONT
EMB 110P1	3320	SWITCH	5500455	MELTED	20021016037	QUE
EMB 110P1	5540	BRACKET	4A3441	CRACKED	20020605003	CTR
EMB 110P1	5552	ELEVATOR HINGE	4A314003	CRACKED	20020326011	CTR
EMB 110P1	5554	ATTACH BRACKET	4A3441	WORN	20021115006	CTR
EMB 110P1	5712	HI-LOCKS	0	SHEARED	20011109014	ONT

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
ENSTROM						
280	6520	T/R GEARBOX	28135255R	DAMAGED	20011031017	ONT
EUROCOPTER DEUT						
BK117	2910	SERVO VALVE	10546682	CRACKED	20021126002	OTT
BK117	5302	FLANGE RING	11203025221	CORRODED	20020109001	ONT
BK117 A 4D	5410	TITANIUM SKIN	0	CRACKED	20020312003	WST
BK117 B 1D	1100	FLIGHT MANUAL	0		20020724015	WST
BK117 B 2D	1101	FLIGHT MANUAL	0		20020724016	WST
BK117 B 2D	3340	LENS	UK	BROKEN	20021021005	OTT
BK117 B 2D	6220	ROD END ASSEMBLY	10513143	WORN	20021007010	OTT
BK117 B 2D	6321	BRAKE PAD PISTON	0		20020803001	WST
BK117 B 2D	6510	T/R BELLCRANK	11788659	GROOVED	20021209009	OTT
BO105 C BS	6310	ROLLER BEARING	4638020024	PEELING	20021021002	ONT
BO105 C BS	6320	BALL BEARING	4619312050	PITTED/PEELING	20021021003	ONT
BO105 C BS	6320	BALL BEARING	4638302023	SPALLING/PEELING	4 SDRs	ONT
BO105 C BS	6320	BEARING	4619302046	DEFECTIVE	20011114016	ONT
BO105 C BS	6320	BEARING	4619310072	DEFECTIVE	20011114017	ONT
BO105 C BS	6320	BEARING	4638020024	PEELING	20020507024	ONT
BO105 C BS	6320	BEARING	4619303081	SPALLING	20020507023	ONT
BO105 C BS	6320	BEARING/AXLE	4619204001 46382	PEELING	20011203005	OTT
BO105 C BS	6320	ROLLER BEARING	4638302024	PEELING/SPALLING	20021021006	ONT
BO105 C BS	6320	WASHER	4619310128	BROKEN	20020103002	ONT
BO105 C CDN	5620	WINDOW TRACK	M105230027	DEBONDED	20020813009	ONT
BO105 C CDN	5630	TRACK	M105230027	BROKEN	20020903003	QUE
BO105 C CDN	6310	MAIN TRANSMISION	4638001009	METALCONTAMINATE	20020718001	VAR
BO105 C CDN	6320	MAIN GEARBOX	4638001009	METALCONTAMINATE	20011105016	ATL
BO105 C CDN	6320	MAIN XSMN	4638001001	MAKING METAL	20020715009	ONT
BO105 C CDN	6510	BEARING BRACKET	1053025136	LOOSE	2 SDRs	VAR
BO105 S CDN BS 4	6710	BELLOWS	V51313842CR764	FROZEN	20020327007	ATL
BO105 S CDN BS 4	6720	T/R SLIDING SLEEVE	105376201	ROUGH DUPLX BRG	20020322002	PAC
FAIRCHILD						
SA226TC	3243	BRAKE MASTER CYL	0		20020614005	OTT
SA227AC	2910	TUBE ASSEMBLY	27810322511	CRACK	20020820011	ATL
SA227AC	3260	INDICATOR, GEAR	2782186057		20021105003	ATL
SA227AC	5270	NIL/UNKNOWN	0		20021105004	ATL
FOKKER						
F28 MK1000	2510	G/S LIGHT BALLAST	SD190470020	FAILED	20010406003	WST
F28 MK1000	2742	HOR STAB CTRL UN	1110043A1	STICKING	20011003005	WST
F28 MK1000	3232	DOOR ACTUATOR	125001	HOUSING FAILURE	20020401001	WST
F28 MK1000	3260	SQUAT SWITCH	404HE996	NO EXTERNAL DEFE	20020725011	ATL
F28 MK1000	4940	STARTER	372697241	FAILED	20020607017	CTR
F28 MK1000	5220	FRAME	A20401411		20020604009	WST
F28 MK1000	5600	WINDSHIELD (CAPT	0	CRACKED	20011218011	WST
F28 MK1000	5610	CENTRE GLASS PLY	NA	CRACKED	20011217024	ATL
FOUND BROS						
FBA 2C	5711	WING SPAR	0	CORRODED	20020718010	PAC
GRUMMAN						
G 159	2434	GENERATOR	30E2041A	SHORTED	20021115010	WST
HARVARD						
4	3260	CABLE	4533516	BROKEN	3 SDRs	VAR
4	5552	R/H FITTING	5221019	CRACKED	20010921013	ONT
HAWKER SIDDELEY						
HS 748 2A	2400	CONNECTOR	MS3456L3273P		20010928001	ONT
HS 748 2A	2612	CONNECTOR	0	OIL FOULED	20020612003	ONT
HS 748 2A	2750	TORQUE TUBE	2F11645	SHEARED	20020416006	ONT
HS 748 2A	2800	CONNECTOR	MS3456L3273P	DISCOLOURED	20011029019	OTT
HS 748 2A	3230	HOSE	5Q2395	BROKEN	20011031011	ONT
HS 748 2B	2110	SUPERCHARGER	139112	DAMAGED	20011121006	CTR
HS 748 2B	3251	NLG STEER ACTUATOR	100574006	FAILED	20021030003	CTR
HELIO						
H395A	5751	RIB STITCH CORD	0	CHAFED	20020611002	PAC
HUGHES						
369D	2842	FUEL QUANT. SEND	369D2963035	NEW	20011210014	PAC
369D	3422	DIRECTIONAL GYRO	200DC	SHORTED	20011116011	PAC
369D	5210	LOGGING WINDOW	36935071	BROKEN	20021118002	WST
369D	5512	TIP CAP	369D2363312	CRACKED	20020729001	PAC
369D	6210	AS ABOVE	0	CRACKED	20020910008	OTT
369D	6210	MAIN ROTOR BLADE	500P2100101	FAILED	5 SDRs	PAC
369D	6210	M/R BLADE ASSEMBLY	369D21100523	CRACKED	2 SDRs	VAR
369D	6220	LEAD LUG LINK	369H120321	CRACKED	20021125007	WST
369D	6220	LWR HUB SEAL	369D1225	POPPED	20020507004	PAC
369D	6310	SPRAG	369D25351	CHIPPED	20011016002	PAC
369D	6520	ROLLER BEARING	369D25146	CRACKED	2 SDRs	PAC
369D	6520	T/R GEARBOX	369D25400	DAMAGED	2 SDRs	WST
369D	6720	TORQUE TUBE	369H75319	CRACKED	20020430004	PAC
369E	5610	DOOR WINDOW, R.H.	369H202472	GOOD	20021025001	ATL
369E	6520	ROLLER BEARING	369D25146	CRACKED	20020828009	PAC
ISRAEL						
ASTRA SPX	2435	LH GEN CABLE ASS	25W817090501	BURNT/SHORTED	20011127016	ONT
ASTRA SPX	2520	BOLT	NAS110436	FAILED	20020129004	WST
ASTRA SPX	2612	FIRE DETECT LOOP	30012301175300014	INTACT /UNSERVIC	20020430012	ONT
ASTRA SPX	2916	CAP FILLER	4178881	OK	20021108004	OTT
1124	2797	WIRING	NA	CHAFING	20020715007	OTT
KAMAN						
K 1200	6310	ENGINE/TRANSMISSION	0		2 SDRs	CTR
KAMOV						
KA32A11BC	6220	VERTICAL LIMITER	D2B20000B	CRACKED	20011002006	PAC
KA32A11BC	6320	GEARBOX	0	MAKING METAL	20010724002	PAC
LAKE						
LA 4 200	5551	NIL	2220021		20011031021	ONT
LA 4 200	5740	SPAR CAP DOUBLER	21610063	CRACKED	20020826008	PAC
LEARJET						
24D	3246	INBD WHEEL ASSEMBLY	95440265	CASTING BROKEN	20020619005	PAC
35	2130	SEAL	3001241	CRACKED	20020830001	QUE
35	2400	VARIOUS WIRES	0	BURNT	20011119009	QUE
35	3241	CONNECTOR PIN-G	0	BROKEN	20020227008	WST
35	3260	BULB	BEPBA07GBP	BURNT	20020103014	OTT
35A	2424	RHEOSTAT	21039	PLASTIC MELT	20020711001	QUE
35A	2730	RH BELL, HORN	233151116	HOLE ELONGATED	20020731007	QUE
35A	2761	PISTON-ROD	LMCH3351	CORRODED	20020508002	QUE
35A	3233	ACTUATOR	2327100506	INTERNAL LEAKAGE	20020417003	QUE
35A	5342	CLIP	23320192	SHEAR RIVETS	20020731005	QUE
45	2210	STALL WARNING CO	0		20020318007	WST
45	2730	BEARING-HINGE E	MS276416	SHIFTED	20020418001	ONT
45	2910	FILTER MANIFOLD	662910100100500 07		20011217021	WST
45	3210	CLEVIS	4532303016001	BAD DESIGN	20020517006	QUE
45	3240	BRAKE CONTROL UN	429333	INTERMITTENT	20011217022	PAC
45	3243	BRAKE SHUTTLE	VA0		20020318006	WST
45	3260	SQUAT SWITCH	0		20020822006	ONT
45	3418	COMPUTER, STALL	0		20021119014	WST
45	5610	GLASS LAYER	17360106	CRACKED	20020626011	QUE
45	5610	L/H WING SHIELD	17360015	SHATTERED	20021108013	PAC
LOCKHEED						
L 1011 385	1531		0	FUSELAGE MAIN ST0	20020117007	QUE
L 1011 385 1 14	2530	BUFFET/GALLEYS	0		20011211025	QUE
L 1011 385 1 14	2913	SHAFT,COUPLING	346931	SHEARED	20020527007	QUE
L 1011 385 1 14	3220	SLEEVE, NLG TORQ	1524601101	BROKEN IN 2	20020308004	QUE
L 1011 385 1 14	3232	ACTUATOR	2690002119	CRACKED	20020705006	QUE
L 1011 385 1 14	3233	ACTUATOR	1523042101	CRACKED	20021108018	QUE
L 1011 385 1 14	3310	FLIGHT COMPARTMENT	30049156	PITTED	20011210024	QUE
L 1011 385 1 15	2497	CENTER RELAY BOX	717510006		20021110003	QUE
L 1011 385 3	0000	CHECK VALVE	7390761	SPRINGS BROKEN	20020501010	QUE
L 1011 385 3	2161	CONTROLLER	7698801		20020829017	QUE
L 1011 385 3	2197	NIL/UNKNOWN	0		20020912001	QUE
L 1011 385 3	2210	YAW RATE GYRO #1	707603400		20020117014	QUE
L 1011 385 3	2520	SAME AS ABOVE	1103080100		20020408013	QUE
L 1011 385 3	2530	EVAPORATOR	331216	TUBING CRACKED	20020820009	QUE
L 1011 385 3	2780	LE FLAP CONTROL	0		20020117018	QUE
L 1011 385 3	2900	TUBE ASSEMBLY	1515774175	DAMAGE	20011211026	QUE
L 1011 385 3	3200	MLGCM MANIFOLD	740845103	CRACKED	20020620010	QUE
L 1011 385 3	3233	MLG ACTUATOR	1535927111		20020429004	QUE
L 1011 385 3	3243	BRAKE CONT. MODULE	60028812	CRACKED	20020708003	QUE
L 1011 385 3	3260	LANDING GEAR POS	0		20020110016	QUE
L 1011 385 3	3320	DECODER	1103070110		20020705004	QUE
L 1011 385 3	3411	SENSOR AOA	0861CAG	MISSING PARTS	20020816001	QUE
L 1011 385 3	3500	OXY. HOSE ASSEMBLY	40193733	CRACKED	20021001013	QUE
L 1011 385 3	3600	DUCT, WING PYLON	1560580109	CHAFED THROUGH	20021117001	QUE
L 1011 385 3	4997	STARTER HARNESS	0		20020912002	QUE
L 1011 385 3	5230	GEARBOX	116E100	SHEARED	20020117015	QUE
L 1011 385 3	5240	DOOR ASSEMBLY	1613510103	MISSING	20020816003	QUE
L 1011 385 3	5610	WINDOW	1503048127	DELAMINATED	20020221020	QUE
L 1011 385 3	5610	WINDSHIELD	0		20020501009	QUE
L 188A	5700	R/H WING	0	CRACKED	20020829006	WST
MAULE						
M 4 220C	5711	SPARS	0	CRACKED	20020530011	ONT
MCDONNELL DOUGLAS HC						
500N	3222	LANDING GEAR	369H600142	CRACKED	2 SDRs	QUE
500N	3222	LANDING GEAR	369H600151	CRACKED	2 SDRs	QUE

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
500N	3222	LANDING GEAR STR	369H600152	CRACKED	20011211016	QUE
MITSUBISHI						
MU 2B36(USA)	3222	BOLT	030A39313	CRACKED	20011221007	ONT
MU 2B36(USA)	3280	SWITCH	21EN96	SUSPECT INTERMIT	20020307012	PAC
MU 2B60(USA)	3252	ROD END	016A39212		20020513001	ONT
MU 2B60(USA)	3280	LANDING GEAR POS	0		20020325007	ONT
MU 2B60(USA)	5414	HANDLE	016A1331621		20020207005	ONT
MU 2B60(USA)	5620	WINDOW	010A31870	MISSING	20020308014	ONT
MOONEY						
M20E	2820	RIGID FUEL LINE	0	CORRODED	20020724005	QUE
M20J	5310	TUBE	0354130	MISSING WELD	20020104019	ONT
MORAVAN						
Z242L	2731	FWD CNTRL CABLE	Z142441300000	FRAYED	20020626006	ONT
Z242L	3250	SPRING	Z4242170001	BROKEN	4 SDRs	ONT
Z242L	3251	CABLE	Z4242390000	BROKEN	20020910007	ONT
Z242L	3251	SPRING	Z24242170001	BROKEN	20020830021	ONT
NORTH AMERICAN						
B25J	5540	RH RUDDER	0		20020322008	ONT
PILATUS						
PC 12 45	2434	ARMATURE	UNKNOWN	GROOVED	20020704005	WST
PC 12 45	2434	BRUSHHOLDERASSEMBLY	9789601090	WORN	20011120001	ONT
PC 12 45	2434	DRIVE SHAFT	5243212137	WORN	4 SDRs	VAR
PC 12 45	2435	INSIDE DOOR BEARING	9408308803	WORN	20020904005	WST
PC 12 45	2460	RELAY	9740926112	QUARANTINED	20020214002	ONT
PC 12 45	2710	STOP BELLCRANK	5271212075	MISSING	20011011015	ONT
PC 12 45	2740	K22 RELAY	9742001212	FAILED	20021003004	WST
PC 12 45	2740	SWITCH-STAB TRIM	9443019112	NO CONTINUITY	20020325002	ONT
PC 12 45	2742	PITCH TRIM ACTUATOR	97873014203	FAILED	3 SDRs	VAR
PC 12 45	2750	CONTACTOR	97403381 11	SHORTED	20011127012	ONT
PC 12 45	2750	FCWU	9787320015	GOOD	20011120002	ONT
PC 12 45	2752	FLAP ACTUATOR	9787320307		2 SDRs	ONT
PC 12 45	2752	FLAP DRIVE ARM	52752121 54	CRACKED	20020812001	ONT
PC 12 45	2780	FLEX SHAFT	9450202201	BROKEN	20020218002	ONT
PC 12 45	2822	FUEL BOOSTER PUMP	RR53710K	PINCHED WIRE	20011011022	ONT
PC 12 45	2916	HYD POWER PACK	PPEV3008EA3B	CRACKED	20020103003	CTR
PC 12 45	2917	HYD. SYS. PRESS.	0		20020327004	ONT
PC 12 45	2932	PRESSURE SWITCH	0		20021127003	ONT
PC 12 45	3010	SURFACE DE-ICE B	0		20021220008	ONT
PC 12 45	3080	HARNESS	3E23602	BROKEN WIRE	2 SDRs	ONT
PC 12 45	3110	MASTER/CAUTION W	0		20020702008	ONT
PC 12 45	3150	CAWS DISPLAY	972813201		20020103017	WST
PC 12 45	3213	AXLE BOLT	AN427	WORN & STEPPED	20020326010	QUE
PC 12 45	3213	TRAILING LINK	5321012167	CORRODED	20020910006	ONT
PC 12 45	3220	DRAG LINK	5322012072	BROKEN IN HALF	20020326003	CTR
PC 12 45	3222	LINK SAFETY BOLT	AN427	CORRODED & WORN	20020314002	ONT
PC 12 45	3230	DRAG LINK, NLG	5322012072	BROKEN	20010927001	ONT
PC 12 45	3230	RELAY	9740926112	INTERMITTENT	20020215016	ONT
PC 12 45	3233	INDICATOR SWITCH	UNKNOWN		20021101006	ONT
PC 12 45	3242	BRAKE LINING	0	WORN	20021003002	WST
PC 12 45	3242	FLARED SWIVEL AS	9462061335	LEAKING	20020227004	ONT
PC 12 45	3242	HYDR SWIVEL ASSEMBLY	0		20020515008	ONT
PC 12 45	3242	ROTOR DISK	23203500	BROKEN	2 SDRs	WST
PC 12 45	3242	STATORS	0	WORN/WARPED	20021030008	ONT
PC 12 45	3242	WEAR PAD	06308400	WORN PAST LIMITS	20021105011	ONT
PC 12 45	3244	TIRE	0213500	LEAKING	20021003003	WST
PC 12 45	3310	OVERHEAD PANEL	972813210	FLICKERING	20020927003	ONT
PC 12 45	3340	WIRE	0	CHAFED	20011031001	ONT
PC 12 45	3400	CAWS DISPLAY	9788132012	FAILED	20020226003	WST
PC 12 45	3411	PITOT STATIC TUB	9851112302	FAILED	20021127001	ONT
PC 12 45	3425	SYMBOL GENERATOR	06804021111 1		20020115001	ONT
PC 12 45	5210	ATTACH BRACKET	NONE GIVEN	LOOSE RIVETS	20020212001	ONT
PC 12 45	5210	INSIDE DOOR PASS	0	CRACKED	20020430013	ONT
PC 12 45	5210	SHOCK STRUT	5521012312		20021205002	ONT
PC 12 45	5244	HINGE HOLDER	5711012367	CRACKED	20020226016	ONT
PC 12 45	5610	RH SIDE WINDOW	9598110112	BROKEN	2 SDRs	ONT
PC 12 45	5610	SIDE WINDOW	9598110111	CRACKED	20020306004	ONT
PIPER						
PA23 250	3230	SPRING	487312	BROKEN	20011130012	QUE
PA23 250	3242	BRAKE DISKS	PIPERNO754612	CRACKED	20020307006	ONT
PA23 250	5100	L/E WING	0	WRONG MEASURMNT	20020523016	ONT
PA23 250	5751	RIB	1710013	CRACKED	20021115023	ONT
PA23 250	5751	SPAR	1710018	CRACKED	20021115024	ONT
PA24 250	3400	SAME AS #8	0		20020128005	WST
PA28 140	3222	CYLINDER	6531904	FAILED	20011121013	ONT
PA28 140	5713	HAT SECT STRING R	6208603	BROKEN	20011030001	PAC
PA28 180	5540	RUDDER	6354600	CORRODED	20020327003	QUE
PA28 180	5700	FWD WING WALK	6206102	CRACKED	20020904010	ONT
PA28 180	5730	WING SPAR ATTH	6205600	CORRODED	20020327002	QUE
PA28 180	5751	AILERON	0	CORRODED	20020327005	QUE
PA28 181	2460	CIRCUIT BREAKER	454709	BROKEN	20020117010	CTR
PA28R 200	2510	AS ABOVE	AS ABOVE	CRACKED	20020227011	ONT
PA28R 200	2520	AS ABOVE	AS ABOVE	CRACKED	20020227013	ONT
PA28R 201	5751	DOUBLER	3564016	CRACKED	20020503002	QUE
PA30	0000	FUEL TANK VENT	0	PLUGGED	20020214003	WST
PA30	3230	CONDUIT LDG GEAR	455180	GALLED/SCORED	20011105018	ATL
PA31	0000	DOWNLOCK CABLE	7268210	MISALIGNMENT	20020515004	QUE
PA31	0000	POWER PACK	OAS29305	FAILED	20010921016	ONT
PA31	0000	SWITCH	487862	DIRTY	20011004014	ONT
PA31	2400	CIRCUIT BREAKERS	454656	CRACKED	20021204007	ONT
PA31	3210	BOLT	AN17651	BROKEN	20021125011	QUE
PA31	3230	BEARING	452440	SEIZED	20011017006	CTR
PA31	5280	OTBD GEAR DOOR	4205900	CRACKED	20021002011	WST
PA31	5280	SPRING	756265	BROKEN	20021002014	WST
PA31	5280	WING RIBE	4040522	CRACKED	20021002012	WST
PA31	5300	HINGE	4752932	CRACKED	20020103013	QUE
PA31	5341	FUSE STRUC SKIN	0	CRACKED	20020527009	QUE
PA31	5400	PLATE	4166300	CRACKED	20011031015	ONT
PA31	5420	TOP WING SKIN	4472303	CRACKED	20021002013	WST
PA31	5510	L/E SKIN	4015514	CRACKED	20021007003	WST
PA31 325	2140	HEATER COMB TUBE	0	LELAKING	20020106006	WST
PA31 325	3230	HOOK ASSEMBLY	4198300	SEIZED	20021219002	ONT
PA31 325	5312	REINFORCEMENT	764028	CRACKED	20020522000	ONT
PA31 350	1497	20 GAUGE WIRE	761488	BURNT	20020312005	CTR
PA31 350	2140	CYCLING SWITCH	A07D32	OVERHEATED	20011030004	CTR
PA31 350	2730	SPRING	710563	CRACKED	20021016031	CTR
PA31 350	2910	HYDRAULIC LINE	4083300	BROKEN	20011128018	CTR
PA31 350	2912	BOWL	AN62341	CRACKED	20011030003	CTR
PA31 350	3213	HINGE	0	CRACK	20011220002	ATL
PA31 350	3220	TUBE	09231500	PUNCTURED	20020116008	ONT
PA31 350	3230	LINK	4204200	BROKEN	20011109003	PAC
PA31 350	3230	UPLOCK BRACKET-RIVET	0	FAILED	20011002004	PAC
PA31 350	3242	ANCHOR BOLT	753407	BROKEN	20011109004	PAC
PA31 350	3245	TUBE	0923150	PUNCTURED	20020123002	ONT
PA31 350	3250	SCISSOR & BOLT	4025700402377	BROKEN	20020722001	ATL
PA31 350	5430	PLATE SKIN ATTH	4166300	CRACKED	20021030005	ONT
PA31 350	5531	DRAG ANGLE7	105907	CRACKED	20020322005	WST
PA31 350	5700	FITTING ASSEMBLY	4029400	CRACKED	20020304001	ATL
PA31T	2100	CLAMP	554901	LOOSE	20020919001	ONT
PA31T	2110	TUBE ASSEMBLY	8124402	SEPARATED	20020326004	ONT
PA31T	3213	LINK ASSEMBLY	4033600	CRACKED	20011031013	ONT
PA31T	5512	R/H HORIZ/STAB	4650037	CRACKED	20020527005	ONT
PA31T2	1200	HYDRAULIC FLUID	41	WATER CONTAMINTN	20020125001	ONT
PA31T2	2430	VOLTAGE REGULATOR	VR15283B	FAILURE	20020401002	ONT
PA31T2	2844	FUEL PRESS SWITCH	M400705	LEAKING	20010921015	ONT
PA31T2	3210	BOLT	AN517A	SHEARED	20020510019	ONT
PA31T2	3220	TUBE	0923150	PUNCTURED	20020117001	ONT
PA31T2	3230	DOWN LOCK SWITCH	47936002	BROKEN WIRE	20021217002	ONT
PA31T2	3260	LIGHT SOCKET	472740		20021024001	ONT
PA31T2	5280	MAIN OUTBOARD HINGE	42059007	CRACKED	20020729005	ONT
PA32 300	5513	STAB TRIM BRCKET	0	CRACKED	20020523014	ONT
PA32 300	5720	DOUBLER HINGE	6210500	CRACKED	20011114015	QUE
PA32 300	5730	LOWER RIGHT SKIN	0	CRACKED/SEPARATED	20020508015	ONT
PA34 200	5400	RIB ASSEMBLY	7847502	DAMAGED	20021007014	ATL
PA34 200	5553	REAR FIN SPAR	9556300	FAILED	20011102002	QUE
PA34 200	5712	RIB	7850003	BUCKLED	20020606004	ATL
PA34 200	5712	RIB	78500002	CRACKED	20021101002	QUE
PA34 200T	5310	SKIN ASSEMBLYY	7861901	CHNGE SKIN THICK	20020114005	ONT
PA34 200T	5751	O/B LEADING EDGE	37271000	CRACKED	20020222006	PAC
PA34 220T	2140	FUEL PUMP	84251003	LEAKING	20020403004	WST
PA42 720	3230	BOLT	401195	BROKEN	20011121008	CTR
PA42 720	3230	SW WIRE HARNESS	668346	WIRING DISCONNEC	20011121009	CTR
PA44 180	2140	COMBUSTION TUBE	88D9310	CRACKED	20011217016	ONT

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
PA44 180	2900	HYDRAULIC FLUID	MILH5606	DIRTY	20020122002	ONT
PA44 180	3020	CARB HEAT BOX	86245834	BROKEN	20011031024	ONT
PA44 180	3220	BOLT	NAS464P427	SHEARED	20020422001	ONT
PA44 180	3220	INNER SPRING	6716800	BROKEN	20021121004	ONT
PA44 180	3232	BRACKET	8628305	BROKEN	20021010009	ATL
PA44 180	5300	INNER DOOR FRAME	76467003	CRACKED	20020125005	ONT
PA44 180	5751	AILERON SKIN	8656204	CRACKED	20020607012	ONT
PA46 500TP	2435	STAR./GEN. SHAFT	UNKNOWN	CORRODED	20020820003	ONT
PA46 500TP	2612	FIRELOOP	653677	CHAFED	20020515013	QUE
PA46 500TP	2810	FUEL COVER	0	LEAKING	20020607006	QUE
PA60 600	5740	HI-LOCK FASTNER	HL19PB621	CRACKED	3 SDRsOTT	
PIPER AEROSTAR						
PA60 600	3213	COLLAR	0	CRACKED	20020104006	ONT
ROBINSON						
R22	6310	V-BELT	A1902	TORN	20011003004	WST
R22 BETA	2435	BRUSHES	0	U/S	20020621006	WST
R22 BETA	2810	LOWER SKIN	0	CRACKED	20021203006	WST
R22 BETA	2841	FUEL QNTY SENDER	A5501	INOPERATIVE	20020405016	ONT
R22 BETA	6320	MAIN ROTOR	A0061		20011217019	WST
R44	5302	TAIL CONE	C0231	CRACKED	20020215008	ONT
R44	6310	SEAL RETAINER	C1683	CRACKED	20020122005	WST
R44	6310	SPRAG	C1883	CRACKED	20020122006	WST
R44	6700	CYCLIC AND T/R A	0		20011220004	WST
R44	6700	CYCLIC BUNGEE	0		20011220003	OTT
SAAB						
SF340A	2121	FAN	C2096800	NO ROTATE	20021023005	ATL
SF340A	2424	GCU	51634002	INOPERATIVE	20021007001	ATL
SF340A	3222	N/G SHOCK STRUT	AIR123300	SERVICABLE	20020104005	ATL
SF340A	3320	BALLAST	BA08006281	FAILED	20020416001	ATL
340B	2610	SMOKE DETECTOR	CGAB120101	FAILED	20021118013	CTR
340B	2611	SMOKE DETECTOR	CGAB120101	FAILED	5 SDRs	CTR
SCHWEIZER						
SGS 2 33A	2730	CONTROL CABLE	22D1174A	FRAYED	2 SDRs	VAR
SGS 2 33A	3240	BRAKE SHOE	B7200R	BROKEN	20021210004	WST
269C	2520	CONTROL ROD	269A9642	FAIR	20010727012	QUE
269C	6310	LWR COUPLE SHAFT	269A5583	BROKEN SPLINE	20010727008	QUE
269C 1	2421	ALTERNATOR	ALU8421	FAILED	20021031013	QUE
269C 1	2434	ALT BRACKET	LW10382	CRACKED	20021031016	QUE
269C 1	3400	V.S.I.	821020	FAILED	20021031011	QUE
269C 1	6330	TUBE ASSEMBLY	269A21725	CRACKED	2 SDRs	PAC
SHORT&HARLAND						
SD3 60	2750	FLAP CONTROL CAB	SD3456037XA	BROKEN	20020926003	PAC
SD3 60	5280	BOSS	SD3101059BXA	CORRODED	20020403003	PAC
SIKORSKY						
S61	6320	LOWER HOUSING	S613520670042	CRACKED	20020326008	PAC
S61L	6310	INPT FREWHE UNIT	5610743500060	WORN	20011012007	PAC
S61N	2434	SHAFT	30E2097A	SHEARED	20011221003	PAC
S61N	6210	L/H INPT FW UNIT	6107435000061	WORN	20020913003	PAC
S61N	6320	ACCESSORY GEARBOX	5001T90G06	WORN BEARINGS	20021018002	PAC
S61N	6320	GENERATOR GEAR	S613520756009	WORN	20020411004	PAC
S61N	6320	MAIN GEARBOX	S613520600046	FAILED	20020917006	PAC
S61N	6320	RING GEAR	S6135220173	CRACKED	20020913001	PAC
S61N	6510	AFT SUPPORT FRAME	S613564019001	CRACKED	20011106001	PAC
S64E	6710	VALVE & SLEEVE ASSEMBLY	1565202535	SCORED	20011012008	PAC
S76A	0000	TURBINE DISK	0292253240	RUBBING	20011003003	PAC
S76A	2435	BELL HOUSING	230811130	SEPARATED	20020521007	PAC
S76A	2910	HYDRAULIC HOSE	S548C2C165000	PIN HOLE	20021202004	PAC
S76A	2910	HYDRAULIC MAIN S	76651030040?3	CHAFED	20011219009	PAC
S76A	2913	PUMP	7965008808102	SHAFT SHEARED	20020123004	OTT
S76A	3040	WIPER BLADE	90009213	SHEARED	20021007002	PAC
S76A	3213	TUBE ASSEMBLY	76250021021?3	CRACKED	20020220007	PAC
S76A	3246	WHEEL SUB ASSEMBLY	5003450	CRACKED	20011107001	PAC
S76A	3260	WIRING HARNESS	7655200904046	BROKEN	20010726012	QUE
S76C	6220	HUB	7610308010049	CRACKED	20011116006	PAC
SOCATA						
TB 9	2700	SWIVEL ROD END	TB1017012000	BROKEN	20020917005	PAC
TBM 700	5753	FLAP	T700A575000001	INSERTS DEBONDIN	20020220011	ONT
SWEARINGEN						
SA226TC	2497	CONNECTOR	J340	CHAFED WIRES	20021001012	WST
SA226TC	2730	SAME	27K44062003		20021024006	CTR
SA226TC	2910	HYDRAULIC LINE	2781032135	CRACKED	20011003017	PAC
SA226TC	2913	SAME	2781032755	CRACKED	20021128001	CTR
SA226TC	3230	BOLT	AN313	WORN	20020124009	PAC
SA226TC	3243	COTTER PIN	AM38022	BENT	20020614004	CTR
SA226TC	3340	EXTERIOR LIGHTING	0		20020916003	CTR
SA226TC	3497	NAVIGATION SYSTEM	0		20020923007	CTR
SA226TC	5260	CORNER BRACKET	2724044010	CRACKED	20020411001	WST
SA226TC	5711	SPAR	0	CORROSION/CRACKED	20020529001	CTR
SA227AC	2612	BRACKET	2762099007	FAILED	20020718007	PAC
SA227AC	3297	CIRCUIT BREAKER	0	FAILED	20021009030	CTR
SA227AC	3414	AIRSPEED INDICATOR	2013011208	FAILED	20011018007	ONT
SA227AC	5230	DOOR LATCH	H29495	WORN	20011011013	ATL
SA227AC	5270	MICROSWITCH	V31	GOOD	20020215015	ONT
UNKNOWN						
UNKNOWN	3130	TRANSISTOR Q306	MMBT222A	FAILED	20020501005	PAC
UNKNOWN	3233	O-RING	MS28775138	SWOLLEN	20011127008	PAC
ZENAIR						
CH701	3222	NOSE GEAR ASSEMBLY	7L13	FAILED	20020226010	ONT

engines

ALLIED SIGNAL						
TPE331	7321	FUEL CONTROL	0		20020318005	OTT
TPE331	7321	SPRING	UNKNOWN	WORN	20020318003	OTT
ALLISON						
AE-3007A1	7260	GRSHFT BVL PINIO	23061402	FRACTURED	20011019005	QUE
AE-3007C	7250	LP TURBINE SHAFT	23059694	RUBBED/HEAT	20020422002	OTT
250-C20	7200	BEARING	0	MAKING METAL	20020719003	WST
250-C20	7250	PWR TURB SUPPRT	6898731	LEAKING	20011127004	PAC
250-C20	7250	1ST STAGE NOZZLE	6878496	CRACKED	20020405023	ONT
250-C20	7261	EXTERNAL OILS SU	23053320	WARPED	20021129009	PAC
250-C20	7310	FUEL LINE	68756320	CRACKED	20021007004	OTT
250-C20	7314	CANISTER	1C274	FAILED	20011011009	QUE
250-C20	7314	FWD BOOST PUMP	10274	INOPERATIVE	20020405018	ONT
250-C20	7321	FUEL CNTROL UNIT	23034702	FAILED	20011002001	PAC
250-C20	7323	GOVERNOR	104100A13A8	FAILED	20020830001	CTR
250-C20	7323	LINEAR ACTUATOR	206062721011	U/S	20020819006	PAC
250-C20	7920	COMPMUNT INSERT	68750121	LEAKING	20020307009	WST
250-C20B	7210	BEARING	6890493	CRACKED	20020125002	WST
250-C20B	7210	GEARBOX COVER	23037420	WORN	20020405008	ONT
250-C20B	7210	MAIN GEARBOX	4638001001	METAL CONTAMINAT	20011011011	ATL
250-C20B	7220	NUT PLATE	NAS697A3		20020321001	PAC
250-C20B	7230	ADAPTER COUPLING	23097911	CRACKED	20020103016	PAC
250-C20B	7230	COMPRESSOR	6890550	OVERHAULED	2 SDRs	PAC
250-C20B	7230	COMRSR CASE HALV	2305742	WORN	20020405004	ONT
250-C20B	7240	OUTER COMBST CASE	6870992	CRACKED	2 SDRs	VAR
250-C20B	7250	CONNECTOR	6848194	LEAKING	20021129011	PAC
250-C20B	7260	TURBINE ENGINE	0		20020806011	QUE
250-C20B	7280	SEAL	369A8322	RENDERED	20021029002	WST
250-C20B	7300	FUEL TUBE	6859172	CHAFED	20011207002	ONT
250-C20B	7310	FUEL FILTER	0	FAILED	20020912008	ONT
250-C20B	7314	AFT BOOST PUMP	1C2710FR	INOPERATIVE	20020405009	ONT
250-C20B	7314	BOOST PUMP	D107318D		20020627008	ONT
250-C20B	7314	FUEL BOOST PUMP	1C2710	FAILED	2 SDRs	PAC
250-C20B	7320	FUEL TUBE	6859172	CHAFED	20011211001	ONT
250-C20B	7321	FUEL CONTROL UNIT	252464429	FAILED	20011003002	PAC
250-C20B	7323	DRIVE GEAR	0	DISCONNECT	2 SDRs	VAR
250-C20B	7323	GOVERNOR	252476914		20011210010	CTR
250-C20B	7323	GOVERNOR	23065121	FAILED	20020702003	CTR
250-C20B	7323	GOVERNOR	0	NON-VISIBLE	2 SDRs	CTR
250-C20B	7323	PT GOVERNOR	252466714	INOPERATIVE	2 SDRs	VAR
250-C20B	7323	SPRING	1056058312	BROKEN	2 SDRs	VAR
250-C20B	7323	TORQUE TUBE	206062708007	CRACKED	20020430008	PAC
250-C20B	7412	EXCITER BOX	6896093	NO OUTPUT	20020425001	ONT
250-C20B	7910	SEAL	369A8322	LEAKING	20021002008	WST
250-C20F	7250	2 1/2 BEARING	0	WORN	20021031003	ONT
250-C20F	7314	FUEL BOOST PUMP	P94C16802	MAKING METAL	20020213008	PAC
250-C20R	7230	SPUR ADAPTER	23031922	SPALLED	20020612006	ATL
250-C20R	7323	DRIVESHAFT	NK	SHEARED	20020815001	ONT
250-C28	7240	OUTER COMB CASE	2303910	CRACKED	20020405013	ONT
250-C28B	7230	MOUNT ASSEMBLY	23007217	CRACKED	20020523015	ONT
250-C28B	7250	1ST STAGE NOZZLE	23008593	BURNT	20020405014	ONT
250-C30P	7200	POWER TURBINE	23071313	WORN	20010622038	CTR
250-C30P	7210	GEARBOX	23035178	SEIZED	20020320004	PAC
250-C30P	7230	COMPRESSOR ASSEMBLY		0	20020206004	PAC
250-C30P	7260	LUB OIL PUMP ASSEMBLY	23039794	GALLED	20020129006	CTR

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
250-C30P	7314	PUMP INTERNAL	0	BROKEN	20010625049	WST
250-C30S	0000	ENGINE ASSEMBLY	0		20010725030	QUE
250-C30S	7170	DRAIN TUBE ASSEMBLY	0	BURNT	20010813007	QUE
250-C30S	7250	TURBINE	23004540	DEBONDED	20021029001	PAC
250-C30S	7250	TURBINE SEAL	6875491	HEAVY COKING	20021001005	PAC
250-C30S	7603	THROTTLE CABLE	7630101910117	BROKEN	20021024004	QUE
250-C47B	7230	COMPRESSOR ASSEMBLY	23065593	CRACKED	20020206001	PAC
501-D13	7210	FILTER	6789595	CONTAMINATED	20020531014	PAC
501-D13	7430	STARTER	383350121	FAILED	20021031009	QUE
501-D13	7930	PRESS TRANSMITTER	ST104E	FAULTY INDICATION	20020605009	PAC
501-D13D	7200	ENGINE	0	FAILED	20011128011	QUE
501-D13D	7200	WIRING	0	CHAFED	20021104006	QUE
501-D22A	7210	RED. GEAR. BOX	685029	CONTAMINATION	20020722014	ONT
AVCO LYCOMING						
AEIO-360-A1B6	7100	CAMSHAFT HYD.	LW18840	WORN	20011217018	ONT
AEIO-360-A1B6	7120	ENGINE MOUNT	L24263100000	CRACKED	20011031025	ONT
AEIO-360-A1B6	7414	ELECTRONICS	0	FAILED	2 SDRs	ONT
AEIO-360-A1B6	7414	IMPULSE COUPLING	M3100	BROKEN/WORN	5 SDRs	ONT
AEIO-360-A1B6	7800	EXHAUST STACK	0	CRACKED	20020731003	ONT
AEIO-360-A1B6	7810	EYE END	L24266701320	BROKEN	20020408009	ONT
ALF-502L	7230	ENGINE	0	FAILED	20020626016	QUE
ALF-502L	7250	ENGINE	0	FAILED	20021007013	QUE
ALF-502L	7323	TUBE ASSEMBLY	2193340	CRACKED	20020411002	QUE
ALF-502L	7830	THRUST REVERSER	0		20021129001	OTT
ALF-502R-5	7300	CABLE ASSEMBLY	HC760H0003092	BROKEN	20020510023	ATL
HIO-360-D1A	7320	FUEL CONTROL	252434710	FAILED	20021031012	QUE
HIO-360-D1A	8011	STARTER	MHB4016R	BROKEN	20021004005	WST
HIO-360-D1A	8540	AFT NUT	289A54023	LOOSE	20021003008	WST
HO-360-C1A	7322	CARBURATOR	1060301	GOOD	20011219005	ONT
HO-360-C1A	7603	THROTTLE BEARING	M4414M	WORN	20021031014	QUE
HO-360-C1A	8011	STARTER	MHR4020SN127	BROKEN GEAR	20010727013	QUE
HO-360-C1A	8500	ENGINE	0	FAILED	20021031010	QUE
IO-360-A1B6	7414	MAGNETO	4372	WEAK SPARK	20020510018	ATL
IO-360-C1E6	8500	ENGINE	0	METAL CONTAMINATE	20010912019	ATL
IO-360-L2A	7322	FUEL CONTROL SERVO	RSA5AD1	FAILED	20020729008	ONT
IO-360-L2A	7414	MPULSE	M3163	CRACKED	20021010004	ONT
IO-360-L2A	7931	OIL PRESSURE SWITCH	83278	FAILED	20021009026	WST
IO-360-L2A	8011	STARTER	PM2401	INTERNAL SHORT	20021022007	ONT
IO-360-L2A	8011	STARTER ORBENDIX	UNKNOWN	STUCK	2 SDRs	ONT
IO-540-AB1A5	8520	CONNECTING ROD	LW13865	BROKEN	20020617003	WST
IO-540-C4B5	7310	FUELING TUBE	120980210	WORN	20020510011	QUE
IO-540-C4B5	7314	FUEL PUMP	LW15473	OIL DIAPHRAM U/S	2 SDRs	VAR
IO-540-C4B5	7414	BEARING	67542	DESTROYED	2 SDRs	ONT
IO-540-C4B5	7414	BEARING	67542	LOOSE IN HOUSING	2 SDRs	ONT
IO-540-K1G5	8011	WORM GEAR	636058	BROKEN	20020211013	QUE
IO-540-K1J5	7602	MIXTURE CONTRL CAB	600035549	SEPARATED	20011108007	PAC
IO-540-S1A5	7920	HOSE	920024647	RUPTURED	20020228016	PAC
LTIO-540-J2BD	7810	COUPLING	MVT69183200	CRACKED	20020503003	QUE
LTIO-540-J2BD	8120	TURBINE BEARING	0	STIFF	20020905004	ONT
LTIO-540-J2BD	8520	CAMSHAFT	LW12201	WORN LOBE	20020313005	ONT
LTS-101-600A-2	7324	GP NOZZLE	411109008	ERRODED	20021217001	QUE
LTS-101-600A-3A	7230	INTAKE SEAL KIT	350A070867	PARTIALLY DESTROYED	20020103006	QUE
LTS-101-750B-1	7130	L/H ENG FIRE SHL	1176625001	CRACKED	20021115005	WST
LTS-101-750B-1	7200	U/K	U/K	U/K	20020815006	WST
LTS-101-750B-1	7323	BEARING	LN9367GE12N2	CONTAMINATED	20020104021	WST
LTS-101-750B-1	7323	BEARING	LN9367GE5DN2	WORN OUT	20020104022	WST
LTS-101-750C-1	7310	FITTING	416209004	WORN	20020521004	PAC
O-235-C2C	7322	BUTTERY VALVE	04500704	SEPARATED	20020726019	ONT
O-235-L2C	7120	ENGINE MOUNT	045100336	CRACKED	20021105008	QUE
O-235-L2C	7160	BUTTERFLY SEAL	04500704	TORN	20011004017	ONT
O-235-L2C	7322	CARBURETOR	105267	FAILED	20021204008	QUE
O-235-L2C	7414	MAGNETO	0		20020530016	PAC
O-235-L2C	8011	BENDIX DRIVE	0	DISINTEGRATED	2 SDRs	ATL
O-235-L2C	8520	CRANKCASE	LW13282	PIN HOLE	20020312008	ATL
O-235-L2C	8530	CYLINDER	LW11633	CRACKED	20021122006	ONT
O-320	7322	FLOAT	CF30766	WORN	20011018011	ONT
O-320	8530	INTAKE VALVE	0	BADLY SEATED	20020621004	QUE
O-320-A2B	7140	ENGINE MOUNT	12351015	BROKEN TUBE	20011004016	WST
O-320-B2C	7414	MAGNETO	106006141	STRIPPED TEETH	20020122001	PAC
O-320-B2C	7921	ENG OIL COOLER	20008A	CRACKED	20020523006	WST
O-320-B2C	7921	OIL COOLER PANEL	A30915	CRACKED	20020405017	ONT
O-320-B2C	7931	OIL FILTER	CH48108	SEPARATED	20020828004	PAC
O-320-B2C	8011	STARTER	MZ4222	INOPERATIVE	20020405015	ONT
O-320-D2G	8530	EXHAUST VALVE	AEL19001	BROKEN	20020808006	QUE
O-320-D2J	7414	MAGNETO	4771	FAILED	20011127002	PAC
O-320-D2J	8530	CYLINDER ASSEMBLY	AEL651024	CRACKED	2 SDRs	PAC
O-320-D2J	8530	CYLINDER ASSEMBLY	AEL6510241	CRACKED	2 SDRs	PAC
O-320-E2A	7800	EXHAUST PIPE	9907704	FAILED	20020618002	ONT
O-320-E2D	7120	ENGINE MOUNT ASSEMBLY	05510171	CRACKED	2 SDRs	VAR
O-320-E2D	7160	BAFFLE	TA8071	BROKEN	20021118008	CTR
O-320-E2D	7800	MUFFLER	175400125	CRACKED	20020226002	ONT
O-320-E2D	7810	R/H AFT EXHT RIS	17540071	CRACKED	2 SDRs	VAR
O-320-E2D	8500	ENGINE CASE	0	CRACKED	20011105015	ATL
O-320-E2D	8520	CAMSHAFT	AEL18840	WORN	20020312002	PAC
O-320-E2D	8530	P/ROD SHRD TUBE	75772	BROKEN	20021204010	ATL
O-320-E3D	7800	EXHAUST STACK	9904404	CRACKED	20020130004	ONT
O-320-H2AD	7322	CARBURETOR	105009N	REPAIRABLE	20021009023	ONT
O-320-H2AD	7414	COIL	10382588	WRONG PART	20020308006	WST
O-320-H2AD	7414	MAGNETO	1038255514	FAILED	20020103004	ONT
O-320-H2AD	8520	CRANKSHAFT	LW1594470	CORRODED	20011120013	WST
O-320-H2AD	8520	CRANKSHAFT	LW1594485	CORRODED	2 SDRs	WST
O-360-A4K	8520	CRANKCASE	LW13820	LEAKING	20020503005	QUE
O-360-E1A6D	8530	EXHAUST VALVE	74541	BURNT	20020626017	ATL
O-360-J2A	7414	DISTRIBUTOR GEAR	10357584	WORN	20020806003	WST
O-360-J2A	7414	DISTRIBUTOR BLOCK	10357424	CRACKED	20020829011	WST
O-540	7414	CONTACT POINTS	10361631	LOOSE	20020507014	WST
O-540-E4C5	7414	DOWEL	STD1065	SHEARED	20011108012	PAC
O-540-F1B5	7310	FUEL DRAIN VALVE	A7611	LEAKING	20021031015	QUE
O-540-F1B5	7414	ROTATING MAGNET	1052947	CRACKED	2 SDRs	WST
O-540-F1B5	7921	HUB ASSEMBLY	C1861	CRACKED	20011102005	QUE
O-540-J3C5D	8510	CRANKCASE	LW14675	CRACKED	20011102008	QUE
O-540-J3C5D	8530	SPRING	0	BROKEN	20011102006	QUE
TIO-540	8520	CAMSHAFT	LW19340	WORN BEYOND LIMIT	20020219001	OTT
TIO-540-A2B	7280	IDLER GEAR	71664	BROKEN	20020806013	PAC
TIO-540-A2B	7414	ROTATING MAGNET	0	SEIZED	20011017003	WST
TIO-540-A2B	8500	INDICATOR LIGHT	URHB32E	DEAD	20020808005	QUE
TIO-540-A2B	8520	CRANKGEAR	76786	BROKEN	20020422007	PAC
TIO-540-A2B	8520	UNKNOWN	UNKNOWN	UNKNOWN	20020607018	PAC
TIO-540-A2B	8530	CYLINDER STUD	3813	BROKEN	20020508016	PAC
TIO-540-A2B	8530	EXHAUST VALVE	LW16740	SEPARATED	20020430002	PAC
TIO-540-A2C	7120	L/H&R/H ENGINE MOUNT	4000707	WORN	20011031014	ONT
TIO-540-A2C	7421	SPARK PLUG	URHB32E	FAILED	20020626014	QUE
TIO-540-A2C	7920	OIL PRESS LINE	0	CORRODED	20020528002	QUE
TIO-540-A2C	7931	DRYAIR PUM GASKET	61183	TORN	20011217005	ONT
TIO-540-A2C	8530	EXHAUST VALVE	LWM6740	BROKEN	20010910014	QUE
TIO-540-F2BD	8500	ENGINE	0	FAILED	20020611005	WST
TIO-540-J2B	7313	FUEL INJECTOR	LW18853	DAMAGED THREADS	20011003006	WST
TIO-540-J2B	8520	BEARING	SL74309	DESTROYED	20020227003	CTR
TIO-540-J2BD	7314	FUEL PUMP	RG9080J4A	FAILED	20020829010	WST
TIO-540-J2BD	7320	MIXTURE CONTROL	25245009	INTERNAL GRIPPING	20020903001	QUE
TIO-540-J2BD	7414	MAGNETO(DUAL)	1038291018	DAMAGED	20011108011	PAC
TIO-540-J2BD	7603	L/H THROTTLE CTR	2489418	SEIZE/BROKE	20011219003	WST
TIO-540-J2BD	7714	END DIFFCONTROLLER	4708869002R	INTERMITTENT	20020829004	WST
TIO-540-J2BD	7931	ENGINE	TIO540J2BD	FAILED	20021004009	CTR
TIO-540-J2BD	7931	PRESSURE RELIEF	77808	WEAK	20020226006	CTR
TIO-540-J2BD	8120	TURBO CHARGER	LW12483	LEAKING	2 SDRs	VAR
TIO-540-J2BD	8500	R/H ENGINE	LTIO540J3BD	METAL CONTAMINAT	20021016029	WST
TIO-540-J2BD	8500	VACUUM PUMP	442CW6	FAILED	20020226007	CTR
TIO-540-J2BD	8520	CRANKSHAFT	AS19340		20020328008	ATL
TIO-540-J2BD	8520	CRANKSHAFT	11F20022D3	CRACKED	20020719007	CTR
TIO-540-J2BD	8520	L/H ENGINE	0		20020304005	ONT
TIO-540-J2BD	8520	R/H ENGINE	LTIO540J2BD	FAILED	20021108016	WST
TIO-540-J2BD	8530	LIFTER BODY	72877	FAILED	20020726006	WST
T5313B	7300	NIL/UNKNOWN	0		20020918008	WST
T5313B	7810	COVER EXH DIFFUSER	114018201	CRACKED	20020226001	PAC
T5317A	7230	FUEL REGULATOR	117078081	WORN/CONTAMINATE	20020530002	PAC
VO-435-A1E	7320	THROTTLE CABLE	A5222890	FROZEN	20011211018	PAC
BOMBARDIER ROTAX						
912 A	8520	WELSH PLUG	0		20020703001	WST
912 A3	7322	DIAPHRAGM	861115	SWOLLEN	2 SDRs	ONT
912 A3	7322	JET NEEDLE	961215	WORN	2 SDRs	ONT
912 F3	7322	DIAPHRAGM	861115	SWOLLEN	20011031005	ONT

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
912 F3	7322	JET NEEDLE	961215	WORN/SHEARED	2 SDRs	VAR
912 F3	7410	TRIGGER COIL KITN	965177	BROKEN WIRE	20020220015	ONT
912 F3	7421	SPARK PLUG 12 MM	897255	BROKEN OFF	20020211017	ONT
912 F3	8500	ENGINE	0	FAILED	20020507003	PAC
912 F3	8520	OVERLOAD CLUTCH	996881	SLIPPING CLUTCH	20021112005	PAC
912 F3	8530	EXHAUST VALVE	N854115	CHIPPED	3 SDRs	ONT
912 F3	8530	INTAKE VALVE	N854105	CRACKED	2 SDRs	ONT
912 S	8011	SPRAG CLUTCH	958856	WORN	20020731018	OTT
912 S3	8520*	CASE	868364	CRACKED	20021213007	OTT
912 S3	8530	EXHAUST VALVE	854116	BROKEN	20021210002	OTT
CFM INTERNATIONAL						
CFM56-5A1	7200	ENGINE	0	FAULTY	20020308009	QUE
CFM56-5A1	7300	CONTROLLER (ECU)	1519M83P14		20020801006	QUE
CFM56-5A3	7280	PRESSURE LINE	0	LOOSE	20020517002	ONT
CFM56-5A5	7140	ENGINE MOUNT	0		20021028005	QUE
CFM56-5C4	7100	ENGINE	CFM565C4	FAILED	20020121005	QUE
CFM56-5C4	7200	BEARING	3041679010	FAILED	20011127015	QUE
CFM56-5C4	7200	NIL	0		20020104018	QUE
CFM56-5C4	7310	ENGINE FUEL LINE	6494301140	LEAKING	20010910006	QUE
CURTISS WRIGHT						
982C9HE2	7314	ED FUEL PUMP	AN4101	UNSERVICEABLE	20020712006	PAC
982C9HE2	7810	EXHAUST STACKCON	80535	BROKEN	20020617010	PAC
982C9HE2	7931	ENGINE	982C9HE2MR5	FAILED	20020625001	PAC
982C9HE2	7931	ENGINE	0	LOW OIL PRESS	20020515002	PAC
FAIRCHILD						
6-440-C5	7322	CARBURETOR	MA45		20020416004	ONT
GARRETT						
ATF3-6A-4C	7200	ENGINE	0	LEAKING	20020312006	ONT
TFE731-2-2B	7322	FCU	307080022	DEFECTIVE	20020227001	QUE
TFE731-20AR-1B	8011	STARTER GEN	6608456005	FAILED	20020430006	PAC
TFE731-20R-1B	8011	BEARINGS	0		20020213006	WST
TFE731-3A-200G	7230	VANE STATOR	30703177	SEPARATED	20020612007	ATL
TFE731-3R	7931	GASKET	30714211	PORTION MISSING	20020607009	WST
TFE731-40-1C	7150	BRANCHED HARNESS	30607621	FAILED	20011012005	PAC
TFE731-40R-200G	7931	LOW OIL PRESS SWITCH	1103P0954	OPENED	20020501003	WST
TFE731-5BR	7931	STARTER/GENERATOR	23080005	VIBRATION	20011101019	QUE
TFE731-5BR	8011	STARTER GENERATOR	80601401	FAILED	20020220010	ONT
TFE731-5R	7200	BEARING CARB SEAL	0	FAILED	20010912002	WST
TPE331-10-511M	7300	OIL LINE	017A4710127	CHAFED	20011221008	ONT
TPE331-10-511M	7321	FCU	89778018	LEAKING	20020911001	ONT
TPE331-10UA	7300	FUEL SHUT-OFF VALVE	39423091	LEAKING	20011017005	CTR
TPE331-10UA	7600	CABLE, POWER LEVER	C8102419	BROKEN	20011120007	PAC
TPE331-10UA-511G	7250	BLADE	31081251	ERODED	20011217011	OTT
TPE331-10UA-511G	7260	BEARING	358348	DAMAGED	20020319001	CTR
TPE331-10UA-511G	7322	FCU	89778017		20020206003	CTR
TPE331-10UGR	7260	BEARING HOUSING	31035851	SCORING	20011030006	CTR
TPE331-10UGR	7320	P3 BLEED AIR LINE	137928L405	BROKEN	20011121007	CTR
TPE331-11U	7250	BEARING SEAL	0	LEAKING	20020718004	PAC
TPE331-11U-611G	7250	FUEL LINE	8945682	CHAFED	20021104004	PAC
TPE331-11U-611G	7260	ACCESS GEAR ASSEMBLY	31039772	LOOSE	20010907003	PAC
TPE331-11U-612G	7230	1ST IMPELLER	31071104	CRACKED	20020906002	ONT
TPE331-11U-612G	7230	1ST STG IMPELLER	31071102	BROKEN VANE	20020422008	OTT
TPE331-12UHR	7932	OIL TANK ASSEMBLY	2765030101	CRACKED	20020118009	WST
TPE331-5-251K	7500	BLEED AIR LINE	88027687	BROKEN	20020604010	PAC
TPE331-5-251K	7600	ENGINE	0		20020710002	WST
TPE331-5-251K	7930	CHIP DETECTOR	31039721	CRACKED	20020104003	PAC
TPE331-5-251K	8097	RELAY	MS24185D1	BURNED	20020531011	OTT
TPE331-6-252B	7260	TORQUE SENSOR BEARING	31030351	DAMAGED	20020905001	QUE
TPE331-6-252B	7321	FCU GEAR	0	BROKEN	20020903006	QUE
GENERAL ELECTRIC						
CF34-1A	7300	ENGINE	0	FAILED	20020308012	ONT
CF34-1A	7931	MOTEUR	0		20020325001	QUE
CF34-3A1	7100	JETPIPE	0	LEAKING	20020110009	QUE
CF34-3A1	7200	ENGINE	0	FAILED	4 SDRs	VAR
CF34-3A1	7260	CARBON SEAL	5018T49P01	DAMAGED	20020211003	QUE
CF34-3A1	7260	IDG SHAFT O-RING	M832481216	NICKED IN 3 PLACES	20011218010	QUE
CF34-3A1	7261	SCAVENGE PUMP	0		20021201001	QUE
CF34-3A1	7321	MFC	6078T55P015	FAILED	20020502020	QUE
CF34-3A1	7500	RH14TH STAGE SOV	32895902497		20020819001	OTT
CF34-3A1	7603	THROTTLE GEARBOX ASSEMBLY	2100140007	FAILED	20020221007	QUE
CF34-3A1	7830	BLOCKR DOOR LINK	22850785105	BROKEN	20011119010	QUE
CF34-3A1	7830	POWER DRIVE UNIT	1267587	UNSERVICEABLE	20021217009	OTT
CF34-3A1	7830	THRUST REVERSER	32725706	SHEARED	20021009003	OTT
CF34-3A1	7931	SCAVENGE PUMP	UNKNOWN	O'RING DAMAGED	20020528001	OTT

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
CF34-3A1	8000	CHECK VALVE	624907B	FAILED	20020709001	OTT
CF34-3A2	7200	ENGINE	0	FAILED	20011005007	QUE
CF34-3B	7261	LUBE SCAV PUMP	6087T04P05	FAILED	20011019014	QUE
CF34-3B	7920	ENGINE OIL REPLE	6016310053		20020705001	WST
CF34-3B1	7100	ENGINE	CF343B1	SHUTDOWN	20020117004	QUE
CF34-3B1	7110	COWL SUPPORT ROD	A33721	JAMMED	20010905020	OTT
CF34-3B1	7110	STAY BRACE STRUT	2285058310	NOT SECURED	20020531003	OTT
CF34-3B1	7200	ENGINE	CF343B1	OVERTEMP	2 SDRs	OTT
CF34-3B1	7200	O-RING	0	LEAKING	20020110012	QUE
CF34-3B1	7200	R/H ENGINE	CF343B1	FAILED	20020515006	QUE
CF34-3B1	7200	R/H ENGINE	CF343A1	LEAKING INTERNAL	20021022002	QUE
CF34-3B1	7230	BEARING	99207SOCN5054T61	MIGRATED	20011130008	QUE
CF34-3B1	7230	CARBON SEAL	6047T63P04	UNKNOWN	20021009002	OTT
CF34-3B1	7230	ENGINE	0		20021125004	QUE
CF34-3B1	7250	LEFT ENGINE	CF343B1	SEIZED	2 SDRs	VAR
CF34-3B1	7261	ENGINE	0	FAILED	20010905018	OTT
CF34-3B1	7261	LUBE SCAV PUMP	6087T4P05	FAILED	20011113001	QUE
CF34-3B1	7280	ENGINE	CF343B1	UNKNOWN	20020620004	OTT
CF34-3B1	7321	MECH FUEL CONTROL	5078T55P13	LEAKING	20011122007	QUE
CF34-3B1	7500	HEAT SENSE ELEMENT	356124310	LEAKING	20020117006	QUE
CF34-3B1	7603	BOLT	NAS464P416	WORN	20020221008	QUE
CF34-3B1	7603	ELECT CONNECTOR	M8372395R1005N	FAILED	20011101013	QUE
CF34-3B1	7620	ENGINE	0	FAILED	20020221005	QUE
CF34-3B1	7830	ACT FITTNG ASSEMBLY	22850808141	FAILED	2 SDRs	QUE
CF34-3B1	7830	STOW IRCRO SWITCH	22850741115	FAILED	20020502022	QUE
CF34-3B1	7921	OIL COOLER	6078T05P02	LEAKING	20020103010	QUE
CF34-3B1	7931	HYD PUMP PAD	0	LEAKING	20020515007	QUE
CF34-3B1	7933	R/H ENGINE	0	LEAKING	20020304002	QUE
CF34-3B1	8300	ENGINE	0		2 SDRs	VAR
CF34-8C1	7830	CASCADE VANES	CN6241242005	INCORRECT INSTALL	20020408012	QUE
CF6-80C2A8	7200	ENGINE TURBINE	CF680C2A8		20020628004	QUE
CF6-80C2A8	7250	LPT 7 MANIFOLD	1473M51P01	CRACKED	20020617006	QUE
CF6-80C2A8	7300	M.E.C.	8061889		20020110019	QUE
CF6-80C2A8	7300	NIL/UNKNOWN	0		20020629014	QUE
CF6-80C2A8	7321	COUPLING	2244003501	ADRIFT	20011210011	QUE
CF6-80C2A8	7321	THROTTLE CABLE	4261212	WATER SOAKED	20020405028	QUE
CF6-80C2A8	7500	DUCT, INTERFACE	13842515	CRACKED	20021117002	QUE
CF6-80C2B1F	7230	NIL/UNKNOWN	1442M66G06	CRACKED	20020315007	QUE
CF6-80C2B6F	7200	ENGINE	CF6	FAILED	20020110001	QUE
CF6-80C2B6F	7500	DUCT	0	DAMAGED	20020104011	QUE
CF6-80C2B6F	7830	THRUST REVERSER	0	FAILED	20020502013	QUE
CF700-2D-2	7300	FUEL PUMP	9234A8		20020201013	ONT
CF700-2D-2	7920	HOSE	MY2078810	LEAKING	20020903013	ONT
CF700-2D-2	7920	TUBE ASSEMBLY	5002T27P01	CRACKED	2 SDRs	ONT
CT58	7250	3RD STAGE NOZZLE	6006T87G13	CRACKED	20011126002	OTT
CT58-140-1	7260	FRAME ACCESS DRIVE	4002T00G013	WORN	20020913002	PAC
CT58-140-1	7321	FUEL CONTROL UNIT	7257255	FAILED	20020430009	PAC
CT58-140-1	7910	CAP ASSEMBLY	41650		20020205003	PAC
CT7-5A2	7250	O-RINGS	0	FAILED	20020626001	WST
CT7-5A2	7260	GEARBOX	6053T89G01	LEAKING	20020128003	WST
CT7-9B	7200	ENGINE	0		20011221002	CTR
INTERNATIONAL AERO						
V2500-A1	7300	HP FUEL PUMP	5008735G	LOW PRESSURE	20020308002	ONT
KLIMOV						
TB3-117BMA	7603	POWER LEVER	5005930		2 SDRs	PAC
TB3-117BMA	7603	THROTTLE CABLE	50059300750012	CHAFED	2 SDRs	PAC
PRATT & WHITNEY						
JFTD12A-4A	7321	FUEL CONTRL UNIT	7045402L2	FAILED	20021122007	PAC
JT15D-1A	7100	ENGINE	0	FAILED	20020114008	ATL
JT15D-1A	7270	INNER BYPAS DUCT	3021436	CRACKED	2 SDRs	QUE
JT15D-4	7110	RH LWR COWLING	555211060	ENTIRE PART DAMAGE	20021115004	PAC
JT15D-4	7160	INLET ASSEMBLY	555225056	BROKEN RIVETS	20020930005	ONT
JT15D-4	7220	ENGINE INLET	555225056	LOOSE RIVETS	20011018016	ONT
JT15D-4	7250	GAS GEN. CASE	0	CRACKED	20020724008	ATL
JT15D-4	7250	HP TURB BLADES	0	CRACKED	20020724006	ATL
JT15D-4	7250	NIL/UNKNOWN	0		20020918012	WST
JT15D-5	7200	FAN BLADE	0		20020624005	OTT
JT15D-5	7230	ENGINE	310061601	METAL CONTAMINATE	20020312009	ATL
JT8D-15	7120	NUT	84821CD524	MISSING	20020131001	WST
JT8D-15	7200	ENGINE	0	FAILED	2 SDRs	VAR
JT8D-15	7230	ENGINE	0		20011128013	WST
JT8D-15	7260	ENGINE	0		20011231004	WST
JT8D-15A	7830	ENG THRUST REVERSER	0	FAILED	20021122005	CTR
JT8D-15A	8012	PRESS.WITCH START VALVE	1G309	FAILED	20021007009	ONT

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
JT8D-17	7100	ENGINE BULLET	658536916	DAMAGED	20020204002	WST
JT8D-17	7230	ENGINE	0		20020103007	ONT
JT8D-17	7500	DUCT	655386511	MIA	20020319004	WST
JT8D-17	7830	THRUST REVERSER	53101010		20020724007	QUE
JT8D-17	7930	OIL PRESS TRANSMITTER	FT104Y	FAILED	20020110002	QUE
JT8D-17	8012	WIRE	301A18	SHORTED	20010305025	ONT
JT8D-17A	7200	ENGINE	0		20020806008	QUE
JT8D-17A	7500	ISOLATION VALVE	0		20020904007	QUE
JT8D-7	0000	ENGINE	P657537D	FAULTY	20000624051	QUE
JT8D-7A	6011	STARTER	38315212		20021217010	WST
JT8D-7B	7280	VALVE	626447		20020426003	PAC
JT8D-7B	7314	FUEL PUMP	37820012		20011219011	PAC
JT8D-9A	7120	TRUNNION LINK	655790418	CRACKED	20021028006	PAC
JT8D-9A	7200	ENGINE	0		20020725009	QUE
JT8D-9A	7200	ENGINE NO 2	0		20020830022	QUE
JT8D-9A	7200	OIL LINE	453953	SHEARED	20021002016	PAC
JT8D-9A	7200	TUBE ASSEMBLY	6558135	B-NUT LOOSE	20020315009	ONT
JT8D-9A	7230	DUCT ASSEMBLY	652244146	RUPTURED	20020325008	PAC
JT8D-9A	7230	ENGINE ASSEMBLY	0		20021115011	QUE
JT8D-9A	7250	ENGINE	0		3 SDRs	VAR
JT8D-9A	7250	ENGINE	71500171		20020531005	QUE
JT8D-9A	7261	GEARBOX	667486S	LEAKING OIL	20020826002	WST
JT8D-9A	7300	FUEL TRAP	7436024		20020826007	QUE
JT8D-9A	7312	FUEL HEAT SHUT-OFF	320115	VALVE STUCK OPEN	20020828002	ATL
JT8D-9A	7314	FUEL PUMP	0		20020125008	PAC
JT8D-9A	7321	FUEL CONTROL UNIT	7436024	FAILED	20020502017	QUE
JT8D-9A	7321	NIL	0		20020104009	QUE
JT8D-9A	7500	ENGINE	0		20011121018	WST
JT8D-9A	7500	ENGINE DUCTING	652244131	RUPTURED	20020528005	WST
JT8D-9A	7930	OIL TEMP INDICATOR	0		20021119013	WST
JT8D-9A	7931	ACCESSORY GEARBOX	JT89A	STRIPPED THREAD	20020103015	ONT
JT8D-9A	8300	ENGINE	71700	MISSING FITTING	20020502004	WST
JT9D-7R4D	7230	SEAL	JA804373	DEFECTIVE	20020806007	QUE
JT9D-7R4D	7250	SEAL	804319		20020807003	QUE
JT9D-7R4D	7311	FCOC	500675501	BLEAKING	20011019008	QUE
JT9D-7R4D	7800	CLUTCH ASSEMBLY	253T72041		20020918007	QUE
PT6A-114A	7120	ENGINE MOUNT RING ASS	265102215	CRACKED	20021016032	ONT
PT6A-114A	7321	FUEL CNTRL UNIT	32448097	FAILED	20020702006	ATL
PT6A-114A	7800	EXHAUST FLANGE	265400610	CRACKED	20011105001	ONT
PT6A-135	7261	ENGINE	0		20021213004	ONT
PT6A-135	7314	FUEL PUMP	02532310103	STRIPPED	20020313006	ONT
PT6A-135	7322	FUEL CNTRL UNIT	25244405	FAILED	20020722009	ONT
PT6A-135	7324	HOSE UNION	0	MISALIGNED	20021213003	ONT
PT6A-20	7100	POWER SECTION	0		20021011002	PAC
PT6A-20	7120	BOLT SPECIAL	CSP28229	SHEARED	20020507013	WST
PT6A-20	7200	CASE ASSEMBLY	3020807		2 SDRs	PAC
PT6A-20	7230	ENGINE	0	FAILED	20020121011	ATL
PT6A-20	7530	ENGINE BLEED VALVE	3027249	FAILED	20011002007	PAC
PT6A-21	7160	COWLING	109910029115	CRACKED	20021101007	ONT
PT6A-21	7160	INLET DUCT	1099100299	CRACKED	20021121005	ONT
PT6A-21	7261	OIL FILTER	PT1052287579522		20020104002	ONT
PT6A-21	7322	BEARING	3243621	SEIZED	20021007006	ONT
PT6A-21	7322	FCU	32447452	SEIZED	20020508001	ONT
PT6A-21	7920	OIL TUBE	3035890	GOUGED	20021112007	ONT
PT6A-21	7931	OIL FILTER	PTI052287579522		20011214001	ONT
PT6A-27	7120	BOLT SPECIAL	CSP28229	SHEARED	20020507012	WST
PT6A-27	7200	ENGINE	PT6A27	OIL CONTAMINATE	20020109005	WST
PT6A-27	7321	FUEL CONTROL UNIT	252444076	OUT OF CALIBRATION	20020829001	WST
PT6A-27	7322	FUEL CONTROL UNIT	25244405	FAILED	20020829003	WST
PT6A-27	7603	THROTTLE CABLE	C6EC12551	FRACTURED	20011218002	ONT
PT6A-28	7120	SAME AS ABOVE	50910279	U/S	20020521001	WST
PT6A-28	7200	ENGINE	0	FAILED	20020121010	ATL
PT6A-28	7230	CT BLADES	3039901	CRACKED	20020129003	WST
PT6A-28	7320	TUBE ASSEMBLY	3031448	CRACKED	20020129005	CTR
PT6A-28	7530	P3 AIR FILTER	3029267	FAILED	20020211012	QUE
PT6A-28	7930	ENGINE	PT6A28	MAKING METAL	20020527001	WST
PT6A-28	7930	OIL PRESS TRANS	5581802	FAILED	20020118010	ONT
PT6A-34	7200	ENGINE	PT6A34	DETER. INTERNAL	2 SDRs	ONT
PT6A-34	7250	ENGINE	PT6A34	CRACKED	20020917004	QUE
PT6A-34	7530	P3 FILTER	302968	UNGLUED	20020708010	PAC
PT6A-34	8011	STARTER GEN	200S6L118Q	FAILED	20021105007	CTR

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
PT6A-41	7100	ENGINE	0	FAILED	20020114009	ATL
PT6A-41	7230	ENGINE	0	FAILED	20020702004	ATL
PT6A-41	7230	1ST STAGE SPACER	3018389	HEAVILY RUBBED	20020417004	PAC
PT6A-41	7250	CT BLADE	3027301	CRACKED	20020207002	ATL
PT6A-41	7300	HP FUEL PUMP	025323300	STRIPPED	20020108003	PAC
PT6A-41	7321	ENGINE	0	FAILED	20020905006	ATL
PT6A-41	7322	FUEL CONTROL	324475512	WORN	20021106002	PAC
PT6A-41	7500	ENGINE	0	FAILED	20020306001	WST
PT6A-41	7930	ENGINE	0	METAL CONTAMINATED	20021003005	WST
PT6A-42	7230	CARBON SEAL	311145101	STICKY	20021118005	CTR
PT6A-42	7314	DRIVE COUPLING	0	WORN	20020829008	WST
PT6A-42	7314	ENG DR FUEL PUMP	02532330003	WORN/CORRODED	20020226005	WST
PT6A-42	7400	RUBBER MOUNT	9090771S	DE-BONDED	20020821002	ONT
PT6A-42A	7120	ENGINE MOUNT	102460002		20020918009	ONT
PT6A-42A	7160	ENGINE AIR INTAKE	0		20020820004	ONT
PT6A-42A	7170	ENGINE BREATHER	0		20020821006	ONT
PT6A-42A	7220	L&R INLET DUCT	102418002	CRACKED	20020515012	QUE
PT6A-50	7230	ENGINE	0	FAILED	20021010010	ATL
PT6A-60A	7230	ENGINE	0		20020618006	QUE
PT6A-60A	7310	HOUSING	A13311	LEAKING FUEL	20021118006	CTR
PT6A-60A	8011	BEARING BALL	03600918	PRODUCING METAL	20021118001	ONT
PT6A-65AR	7200	GAS TURBINE ENGINE	0		20020726013	PAC
PT6A-65AR	7260	ACCESSORY GEARBOX	NO ASSEMBLY PIN	INTACT FROM OUTS	20011101015	OTT
PT6A-65B	7220	LINKAGE ASSEMBLY	1189100561	COME APART	20020528004	ATL
PT6A-65B	7712	OIL FILTER	0	METAL CONTAMINAT	20020913008	ONT
PT6A-65B	7931	SLEEVE COUPLING	311360601	FRACTURED	20021016034	ONT
PT6A-67AG	7310	FUEL FILTER ASSEMBLY	500991	LEAKING	20020430001	PAC
PT6A-67B	7297	OIL PX IND. WIRE	4E38B24	CHAFED	20020924001	ONT
PT6A-67B	7310	TRANSFER TUBE	3011155		2 SDRs	ONT
PT6A-67B	7700	ACQ DISPLAY	9752902015		2 SDRs	ONT
PT6A-67B	7700	EIS PANEL	9752902014	FAILED	20020103018	WST
PT6A-67B	7993	ENGINE OIL TEMP	0		20020426001	ONT
PT6A-67B	8000	IGNITION EXCITOR	0		20020117012	ONT
PT6A-67D	7110	CAM-HOOKS	0	FAILED	20011031004	ONT
PT6A-67D	7200	ENGINE	3037313	FAILED	20010912005	CTR
PT6A-67D	7200	TORQUEMETER VALVE	3012347	ERODED	20011031003	ONT
PT6A-67D	7250	ENGINE	0	FAILED	2 SDRs	ATL
PT6A-67D	7250	PT DISK 2	3037313	FAILED	20020719008	CTR
PT6A-67D	7261	ENGINE	0	BLACK OIL	20020822008	ONT
PT6A-67D	7310	TUBE ASSEMBLY	3035618	CRACKED	20020605004	ATL
PT6A-67D	7620	RELAY	77GB408R4A18	CORRODED	2 SDRs	ATL
PT6A-67D	7920	SHAFT	3008786	SHEARED	20020222005	ONT
PT6D-114A	7200	NIL/UNKNOWN	0		20020620005	ATL
PT6T-3	7200	POWER SECTION	PT6T3	FAILED	20020718011	PAC
PT6T-3	7210	UNKNOWN	0		20020123003	PAC
PT6T-3	7250	COMBINING GEARBOX	3032641	SPALLING	20020827006	PAC
PT6T-3	7250	COMBUSTION CASE	311196501	CRACKED	20020815002	OTT
PT6T-3	7314	BOOST PUMP	2050606063		20020408004	ONT
PT6T-3	7321	MANUAL FCU	252496813	LEAKING	20020408002	ONT
PT6T-3	7321	P3 FILTR/UN ASSEMBLY	3028325	BROKEN	20021204001	PAC
PT6T-3	7323	GOVERNOR	0		20020228012	PAC
PT6T-3	7332	FUEL PRESSURE TR	209062608001	DIRTY	20020408001	ONT
PT6T-3	7700	RPM WARNING BOX	209075326	CORRODED	20020408003	ONT
PT6T-3B	7250	PT DISC ASSEMBLY	3022312	RUBBING	20020318004	PAC
PT6T-3B	7310	CROSSOVER ASSEMBLY	30018411	LEAKING	20020405021	ONT
PW118	0000	ENGINE	0	FAILED	20011011021	ATL
PW120	7921	OIL COOLER	28E997	LEAKING	20020228018	ONT
PW120	7921	OIL COOLER ASSEMBLY	0		20011102001	ATL
PW120A	0000	SEAL	AS3209158	CUT	20011012006	QUE
PW120A	7120	REAR MOUNT STRUT	8DK1763001	CRACKED	20021129008	ATL
PW120A	7200	TURBOMACHINERY	0	ENGINE FAILURE	20020425008	ATL
PW120A	7210	REDUCTION GEARBOX	0		20020607013	ONT
PW120A	7210	RGB	0	MAKING METAL	20021129010	ATL
PW120A	7230	LP IMPELLER	3040689	DAMAGED	20020425007	ONT
PW120A	7260	ACCESS DR SPR GEAR	312137201	SHEARED	20011004013	ONT
PW120A	7300	ROD ASSEMBLY	87620097021	INCORRECT ASSEMBLY	20021128002	ATL
PW120A	7311	OIL COOLER	0	LEAKING	20021217005	ONT
PW120A	7312	FUEL HEATER	10839F	FAILED	2 SDRs	ATL
PW120A	7314	HP FILTER	30035681	UNKNOWN	20011227005	ATL
PW120A	7921	OIL COOLER	28E997	LEAKING	9 SDRs	VAR
PW120A	7921	THERMAL REGULATOR VALVE	45E041	INTACT	20011018019	ONT

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
PW120A	7922	OIL TEMP CONTROL	45E041	NO EXTERNAL DEFECT	20020603005	ATL
PW120A	7930	OIL PRES TRANSMITTER	APT761000100DW	FAILED	20011019022	ATL
PW120A	7931	L/H ENGINE	0	FAILED	20020308013	ONT
PW120A	7932	PACKING	AS3209015016	DETERIORATED	20020326002	QUE
PW120A	8011	START CONTACTOR	2431K2	STUCK CLOSED	20011019023	ATL
PW123	7120	STRUT VERT ASSEMBLY	87110016009	BROKEN	20011011014	ATL
PW123	7150	TBD	TBD	TBD	20011205006	ATL
PW123	7314	MECH FUEL CONTROL	324485317	FAILED	20020131008	ONT
PW123	7332	HP FUEL FILTER	5905587	CONTAMINATION	20020621008	ATL
PW123	7500	PRECOOLER	10558000	SPLIT OPEN	20011001005	PAC
PW123	7530	ECS 55PSI SWITCH	7821004	WATER CONTAMINAT	20011031007	ONT
PW123	7530	HBOV BLEED SWITCH	MS274081N	BENT	20020425006	ATL
PW123	7530	PRSOV	7786864	FAILED	20011217002	ATL
PW123	7712	TORQUE SENSOR	0	NO EXTERNAL DEFECTS	20020618001	ONT
PW123	7921	OIL COOLER	0	LEAKING	20021031018	ATL
PW123	7930	OIL PRES TRANSMITTER	APT761000100D	W FAILED	20011017016	ONT
PW123AF	8097	CONTACTOR	C400B3N		20020319002	QUE
PW123E	7930	TRANSMITTER	APT761000100DW		20020815004	OTT
PW150A	7160	INLET ADAPTOR	4100S02802	BURNED	20021105001	ONT
PW150A	7200	FADEC	0		20020726016	OTT
PW150A	7230	AIRCRAFT	0		20020523010	ONT
PW150A	7230	1ST STAGE ROTOR	304865101	UNSERVICEABLE	20021122001	ONT
PW150A	7321	FADEC	0		20020712003	OTT
PW150A	7540	ECSECU	8201003003	FAILED	20020510001	ONT
PW150A	7722	ENG. EGT/TIT IND	0		20020607016	OTT
PW150A	7921	BYPASS VALVE	D2887155C	FAILED	20011004002	ONT
PW150A	7921	OIL COOLER DOOR	0		20020515009	OTT
PW150A	7922	OIL COOLER BYPASS	0		20020604003	OTT
PW150A	7933	OIL TEMP SENSOR	304814801	FAILED	20020510002	ONT
PW207D	7310	FUEL TRANSFER LINE	70077200G800	LEAKING	20020213010	PAC
PW207D	7920	ENGINE OIL LINE	427065244101	CHAFED/WORN	20020213012	PAC
PW306B	7600	HIGH PRESSURE TUBE	BLADE	FRACTURED	20020710003	QUE
PW4060	7230	ENGINE	300U411020	FAILED	2 SDRS	QUE
PW4060	7230	ENGINE	71300421	FAILED	20011019009	QUE
PW4168	7100	ZONE CONTROLLER	978A000007		20021223004	ONT
R-1340-AN-1	7414	L/H MAGNETO	SB9RU3	FAILED	20020606007	CTR
R-1340-AN-1	8530	STUD	0	SHEARED	20011121001	WST
R-1340-S3H1	7300	THROTTLE LEVER	0	BROKEN	20020612008	ONT
R-1340-S3H1	7414	AS ABOVE	45540613	BROKEN	20020906005	ONT
R-1340-S3H1	8520	CAM ROLLER	5999	GALLED	20020322010	ONT
R-1340-S3H1-G	8530	CYLINDER ASSEMBLY	399359	CRACKED	20020326005	QUE
R-1340-59	7414	MAGNETO	BSM9F	FAILED	20020619008	CTR
R-1340-59	8530	CYLINDER	CH91ER	CRACKED	20020830004	CTR
R-1340-59	8530	CYLINDER	AE92181	FRACTURED	20020802002	QUE
R-1340-59	8530	CYLINDER HEAD	358686	BROKEN	20020918011	OTT
R-1340-59	8530	ENGINE	0	CYL HEAD CRACK	20010828017	ONT
R-1340-59	8530	GUDGEON PIN	K60516	BROKEN	20020726011	CTR
R-2000-6	7414	RETAINER	1021488	WORN	20020510021	WST
R-2000-7M2	8500	ENGINE	0	METAL CONTAMINATED	20011017004	WST
R-2000-7M2	8530	CYLINDER	153084		20021210010	WST
R-2800-CA3	7414	MAGNETO DRIVE	0	DAMAGED	20020515005	QUE
R-2800-CA3	7810	EXHAUST STACK	8500017	SPLIT	20020605008	PAC
R-2800-DBL WASP	8530	CYLINDER	356996	CRACKED EAR	20020726014	PAC
R-2800-75M1	7322	CARBURETOR	0	FAILED	20010905010	WST
R-2800-79	7414	MAGNETO	A5838GR1	OUT OF ADJUSTMENT	2 SDRs	WST
R-985	8510	FRONT CASE (NOSE)	39487	CRACKED	20020808003	PAC
R-985-AN-1	8530	CYLINDER HEAD	0	CRACKED	20011029015	PAC
R-985-AN-14B	7120	TUBING	0	CRACKED	20020502003	ONT
R-985-AN-14B	7322	CARBURETOR	A3025U3	FAILED	20020916002	CTR
R-985-AN-14B	7603	FUEL SELECTOR	C2CE67A	FRAYED	20011211003	ATL
R-985-AN-14B	7700	ENG TRIPLE GAUGE	659450105	DESTROYED	20011116005	PAC
R-985-AN-14B	8500	CARBURETOR	NAR7B18		20020402007	PAC
R-985-AN-14B	8500	ENGINE	0	FAILED	20020626009	ONT
R-985-AN-14B	8520	CONNECTING ROD	128511	BROKEN	20011029014	PAC
R-985-AN-14B	8520	ENGINE	0		20021028008	PAC
R-985-AN-14B	8530	CYLINDER HEAD	ST90P10ER	CRACKED	2 SDRs	ONT
R-985-AN-14B	8530	ENGINE	0		20011210012	PAC
R-985-AN-14B	8530	EXHAUST VALVE	71166	FAILED	20011108002	PAC
R-985-AN-14B	8530	INTAKE TUBE	70472	BROKEN	20021022006	PAC
TWIN WASP D3	8500	EXHAUST SEGMENT	A10601X		20021126001	QUE
WASP CA3	7261	CASE FRONT	519587	STRIPPED	20020603004	QUE
WASP CA3	8510	CASE FRONT	519587	STRIPPED	2 SDRs	CTR
2800CA3	7322	CARBURETOR	39145217CL1	LEAKING	20020603006	PAC

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
ROLLS ROYCE						
BR700-715A1-30	7200	ENGINE	0		20020930003	OTT
BR700-715A1-30	7230	HP COMPRESSOR	MODULE33	FAILED STG 2 BLA	2 SDRs	VAR
BR700-715A1-30	7250	LP TURBINE BLADE	MODULE51	FAILED	20020816002	OTT
BR700-715A1-30	7250	MODULE 41	M41121	FAILED	20010907011	OTT
BR700-715A1-30	7260	RADIAL DR SHAFT	39700911	FAILED	20020114006	QUE
BR700-715A1-30	7270	INNER BYPASS DUCT	BR715DTA01601	BURNT	20020211014	QUE
BR700-715A1-30	7300	FUEL CUTOFF SHAFT	BRH10113	NOT ENGAGED	20020723004	OTT
DART 529-8X	8100	PIPE	V9277	FRACTURED	20020226004	WST
DART 532-7	7310	ENGINE	0	FAILED	20020718003	PAC
DART 534-2	7300	THROTTLE CABLE	8303989	FRAYED	20011011006	QUE
DART 534-2	7600	H P CABLE	7303989	FRAYED	20020730004	QUE
DART 534-2	7700	DETECTOR	5D3	FAILED	20020614002	ONT
DART 534-2	7921	ENG OIL COOLER	RK35782A	LEAKING	20021125001	QUE
DART 536-2	7100	SUPERCHARGER	139312	FAILED ROTORS	20020531009	CTR
RB211 TRENT 772B-60	7150	POWER PLANT ELEC	0		20011207007	QUE
RB211 TRENT 772B-60	7200	ENGINE	0		20020201026	QUE
RB211 TRENT 772B-60	7230	NIL/UNKNOWN	0		20021205001	QUE
RB211 TRENT 772B-60	7230	TURBINE ENGINE C	0		20020503007	QUE
RB211 TRENT 772B-60	7310	CLIP	FK26342	BROKEN	20020315010	QUE
RB211 TRENT 772B-60	7310	CLIP	AS62404	CHAFED	20021108020	QUE
RB211 TRENT 772B-60	7310	FERRULE	LK30233	WORN/PITTED	20020501015	QUE
RB211 TRENT 772B-60	7310	HYDRAULIC LINE	AE7111216	WORN	20020121012	QUE
RB211 TRENT 772B-60	7310	PRESSURE TUBE	AE71112111		20020118005	QUE
RB211 TRENT 772B-60	7321	COVER ASSEMBLY	FK23330	WORN THROUGH	20011207006	QUE
RB211 TRENT 772B-60	7321	ENGINE ELECTRONICS	EEC200007BL		20020919002	QUE
RB211 TRENT 772B-60	7530	I/P CHECK VALVE	HTE4500019	DETACHED PIVOT	20011022001	QUE
RB211-22B-02	7100	HP COMPRESSOR	0		20020111003	QUE
RB211-22B-02	7110	PIN	NAS1335S3S09	CORRODED	20020426005	QUE
RB211-22B-02	7200	ENGINE	RB21122B02		20020221018	QUE
RB211-22B-02	7200	ENGINE	0		20020527003	QUE
RB211-22B-02	7830	BLOCKER DOOR	LJ24295	BROKEN IN 2 HALF	20020111002	QUE
RB211-524B4-02	7110	DOOR ASSEMBLY	1615155103	LOST	20020527004	QUE
RB211-524B4-02	7200	ENGINE	RB211524B4		20020221017	QUE
RB211-524B4-02	7200	ENGINE TURBINE	0		20020709002	QUE
RB211-524B4-02	7230	ENGINE	0		20020829015	QUE
RB211-524B4-02	7230	TUBE P3 AIR CONT	LK69554	BROKEN	20020405027	QUE
RB211-524B4-02	7732	VIB SIG COND UNIT	A24000004		20020705005	QUE
RB211-524B4-02	7830	BLOCKER DOOR	LJ37013	BENT	2 SDRs	QUE
RB211-535E4	7230	IPC AND HPC	MOD2ET4	FOD	20021112003	OTT
RB211-535E4	7250	ANNULUS FILLER	MODULE01	MISSING	20020605002	OTT
RB211-535E4	7261	SHROUD RAD. SHAFT	726201	FRACTURED	20021203001	OTT
RB211-535E4-B3	7230	MODULE 04	M04622AB	HPC LINING LOST	20020326006	QUE
RB211-535E4-37	7200	CLAMP	6354600		20020201016	QUE
RB211-535E4-37	7500	STARTER DUCT	LJ41486	CRACKED	20011211023	QUE
RB211-535E4-37	7830	ACCESS PANEL	LJ76673	MISSING	20020222001	QUE
SPEY 511-8	7230	EU66702	PC72366610	FAILED	20020813006	OTT
SPEY 511-8	7230	OGV BOLTS/ NUTS	AS20625K1861114	RELEASED	20020531006	OTT
TAY 651-54	7260	GEN. SPUR GEAR	IPC726120	FAILED	20020322003	QUE
TAY 651-54	7260	HS GEARBOX	726100	MCD LOADED	20020509002	QUE
UNKNOWN	7320	SLIPPER SLEEVE ASSY	77208602	DAMAGED	20020304006	QUE
TELEDYNE CONTINENTAL						
IO-360-G	8540	BEVEL GEAR	632617	FEETH FAILURE	20020611006	WST
IO-470-L	8500	CONNECTING ROD	628752	BROKEN	20020401006	CTR
IO-470-VO	7602	LINK ROD ASSEMBLY	632558	DISCONNECTED	20011105006	ATL
IO-520-C	7300	R/H THROT CABLE	5038901229	BROKEN	20020726008	WST
IO-520-D	7314	ENG DR FUEL PUMP	6462121	FAILED	20011116014	WST
IO-520-D	7322	CARBURETOR	MA45	LOOSE	20020724009	ATL
IO-520-D	8520	CONNECTING ROD	646778	BROKEN	20021016026	PAC
IO-520-D	8520	COUNTERWEIGHT	639195	SCRAP	20020606009	ONT
IO-520-D	8520	CRANKSHAFT GEAR	653631	BROKEN	20020619012	QUE
IO-520-D	8530	CYLINDER	CH71HER	CRACKED	20011017007	CTR
IO-520-D	8530	CYLINDER	654961	PREMATURE USE	20021119011	QUE
IO-520-D	8530	CYLINDER	654961C	WORN	20020510016	ATL
IO-520-F	7421	SPARK PLUG	URHB32E	BROKEN	20020515003	ONT
IO-520-F	7600	ROLL PIN	NAS561P36	SHEARED	20020226008	CTR
IO-520-F	7800	MUFFLER	0	SEPARATED	20020801011	ONT
IO-520-F	8530	EXHAUST VALVE	646286	BURNT	20020510024	WST
IO-520-F	8550	HANDY DRAIN	HD4C2	FAILED	20021009027	ONT
IO-520-M	8530	ENGINE	0		20021016036	QUE
IO-550-F	8530	FUEL TUBE ASSEMBLY	646727		20010821006	ONT
O-200-A	7120	ENGINE MOUNT	045111432	CRACKED	20011114014	QUE
O-200-A	7800	MUFFLER	04504004	CRACKED	20011130014	QUE
O-200-A	8540	CASTING	627307A	DEEP CORROSION	20020307010	ONT

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
O-200-A	8550	GEAR, OIL PUMP	22355	BROKEN SPUT	20020307015	ONT
O-300-C	8530	PISTON	646255	BROKEN SKIRT	20020530009	ONT
O-470-K	7120	ENGINE MOUNT	075100123	CRACKED	20020830016	ONT
O-470-L	7414	MAG	0	INTERMITTENT	20020731002	PAC
O-470-L	7602	THROTTLE SHAFT	0	LOOSE	20021105010	ATL
O-470-S	7100	CAMSHAFT GEAR	0	WRONG ONE	20020608003	ATL
O-470-U	7414	MAGNETO	0		20021124001	WST
O-520-KAH-1	8530	ENGINE	ST711ER	CRACKED	20020726018	ONT
TSIO-360-EB	8011	NEEDLE BEARING	641368	BROKEN	20020725006	PAC
TSIO-360-EB	8530	CYLINDER	CL66P15	CRACKED	20020521005	PAC
TSIO-360-H	8520	ENGINE	0	FAILED	20011003013	WST
TSIO-520-GCM	8530	SUPERIOR PISTON	SA648044	DAMAGED	20020702002	WST
TSIO-520-N	8550	AIR/OIL SEPARATOR	C1650010202	MAKING METAL	20021120001	ONT
TURBOMECA						
ARRIEL 1B	7120	SPH. TRUST BEARING	704A33633208	U/S	20020424002	PAC
ARRIEL 1B	7230	COMPRESSOR COVER	0292152860		20010820013	WST
ARRIEL 1B	7314	FUEL BOOST PUMP	P94B12203	FAILED	20021016018	PAC
ARRIEL 1B	7314	FUEL BOOST PUMP	P94B12203C	FAILED	20021016017	PAC
ARRIEL 1B	7410	H.E. GENERATOR	ABG6766000	FAILED	3 SDRs	PAC
ARRIEL 1B	7421	IGNITER	9550168780	FAILED	3 SDRs	VAR
ARRIEL 1B	7532	BLEED VALVE	8550158260	FAILED	20021016004	PAC
ARRIEL 1B	7532	TACH BOX	0177555170	FAILED	4 SDRs	PAC
ARRIEL 1B	8000	START ELECTROVAL	9550147560	FAILED	20021016014	PAC
ARRIEL 1B	8012	TACH BOX	0177555170	FAILED	3 SDRs	PAC
ARRIEL 1D	7250	BEARING	9609000408	SPALLING	20020827007	PAC
ARRIEL 1D1	7200	REAR BEARING	9026641	CORRODED	20010912008	PAC
ARRIEL 1D1	7250	TUBE-REAR BRG VE	0301047700	PLUGGED	20020507011	WST
ARRIEL 1D1	7310	FUEL CONTROL	0164248850	LEAKING	20021028003	ONT
ARRIEL 1D1	7314	FUEL BOOST PUMP	P94B12209	FAILED	20021016005	PAC
ARRIEL 1D1	7603	FLEX CABLE	704A34130052	BROKEN	20020726009	WST
ARRIEL 1S	7200	LABYRINTH SEAL	0	FAILED	20011105005	PAC
ARRIEL 1S1	7150	ELECTRICAL SYSTE	0	MOISTURE	20010810003	PAC
ARRIEL 1S1	7200	TRIPLEX BEARING	9609000254	FAILED	20011114018	OTT
ARRIEL 1S1	7714	OVERSPEED SENSOR	9580115900	FAILED	20010810002	PAC
ARRIEL 1S1	7714	TACHOMETER BOX	0177555240	FAILED	20010810004	PAC
ARRIEL 2B	7921	FAN MOTOR	9696	WORN	20020830014	ONT
MAKILA 1A	7300	REFUELING PANEL	7965592	NON-OPERATIONAL	20011210001	ATL
WSK PZL KALISZ						
ASZ-62IR-M18	8500	GUDGEON PIN	K80516	FRACTURED	20020725003	CTR
WSK PZL RZESZOW						
PZL-3S	8530	CYLINDER	20330160	CRACKED	20020830010	CTR

propellers

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
DOWTY AEROSPACE						
R408/6-123-F	6100	PROPELLER ELECTR	699018001		20021220003	OTT
R408/6-123-F	6120	PITCH CONTROL UNIT	697073002		20020522003	OTT
R408/6-123-F	6123	PROPELLER FEATHER	0		20020522005	OTT
DOWTY ROTOL						
R212/4-30-4/22	6120	PCU	CU99	SEIZED	20020215012	QUE
R321/4-82-F/8	6120	WIRING CANNON PLUG	0	CLEANED	20021008029	CTR
R408	6113	CABIN WINDOW	0	PUNCTURED	20011017011	ONT
R408	6120	PROPELLERS	R408		20010625011	ONT
R408	6122	PROPELLER GOVERNOR	0	DAMAGED	20020510005	ONT
FAIREY REED						
A66753/X1	6111	BLADE SHEET	A66753X16	CRACKED	20011231002	OTT
HAMILTON STANDARD						
12D40-407	6110	CAP RACE	53216	CRACKED	20020719004	WST
14SF-15	6111	EROSION SHEATH	794404	CRACKED	20011001008	PAC
14SF-19	6111	BLADE#1	SFA13SIOA1	FISSURE	20020502002	QUE
14SF-19	6114	CSA BLADE SEAL	8173881	BROKEN	20011004015	ONT
14SF-23	6111	BLADE ASSEMBLY	SFA13N1R04	BURNT	20011218006	ONT
14SF-23	6111	BLADE SEAL	8173881	LEAKING	20021007008	ONT
14SF-23	6120	PCU	78249047	FAILED	20020201003	ONT
14SF-23	6120	PROP CONTROL UNIT	0	BINDING	20020813004	OTT
14SF-23	6120	PROPELLER CONTROL	0		20011025001	ATL
14SF-7	6123	ELECTRICAL HARNESS	311195401	CORRODED	20020626012	ATL
14SF-7	6123	TORQUE SIGNAL UN	3000500003	INTERMITTENT	20021219004	ATL
2D30-301	6110	PROP HUB	0	CRACKED	20020724003	QUE
23EX583	6123	AS ABOVE	AS ABOVE	BROKEN	20021112009	ONT
43D51	6123	FEATHERING PUMP	1E777BL1	FAILED	20020627009	PAC
54H60-117	6121	VALVE HOUSING	582855		20020722012	ONT
54H60-117	6122	VALVE HOUSING	582855		20020722010	ONT
HARTZELL						
HC-B3R30-2E	6111	BLADE CLAMP	83272	CRACKED	20020821003	PAC
HC-B3R30-2E	6111	CLAMP	1977	CRACKED	20020912006	PAC
HC-B3TN-3B	6112	DE-ICE HARNESS	697611	BROKEN	20010917009	ONT
HC-B3TN-3BY	6120	SWITCH	2345789		20021016027	PAC
HC-B3TN-3G	6122	PROP GOV. (CSU)	82100007F	UNSERVICEABLE	20021029009	WST
HC-B3TN-5G	6111	PROPELLER BLADE	T10282	CRACKED	20021120005	PAC
HC-B4MP-3A	6111	CLAMP NUT	57A1373	FAILED	20010907002	PAC
HC-B5MP-3C	6120	PROP CONTROL CABLE	SD3471106XA	FRAYED & BROKEN	20020604008	PAC
HC-C2YK-1BF	6100	BEARINGS	A2202	WORN	20020125003	WST
HC-C2YK-1BLF	6114	HUB	0	CORRODED	20020827009	PAC
HC-C2YR-1BF	6114	SAME	SAME		20020116007	CTR
HC-D4N-3A	6111	BEARING	57A2202	BROKEN	20020913006	WST
HC-D4N-3C	6100	BETA ROD	B3476A2	SET UP WRONG	20021211003	ONT
HC-E2YR-2RB	6120	NUT	N3807	LOOSE	20010917010	ONT
HC-E3YR-2AFT	6120	UKN	UKN	UKN	20020403005	PAC
HC-E3YR-2ATF	6110	LATCH PIN	A2807	BROKEN	20020722005	WST
HC-E3YR-2ATF	6110	THRUST PLATE	B2256	CRACKED	20020131005	WST
HC-E3YR-2ATF	6122	FLYWEIGHT ASSEMBLY	5008016	FAILED	20021203002	ONT
HC-E3YR-2ATF	6122	PROP GOVERNOR	F624Z		20020423001	ATL
HC-E4A-3D	6111	TEFLON TAPE	99150S12C	WORN THRU	20020517005	PAC
HC-E4A-3D	6112	HARNESS	3E23604	OPEN CIRCUIT	2 SDRs	CTR
HC-E4A-3D	6120	C.S.U.	304955801		20020211004	ONT
HC-E4A-3D	6122	C.S.U.	0		20020124001	ONT
HC-E4A-3D	6123	PRE-LOAD PLATE	UNKNOWN	MOVED	20021127002	WST
HC-E4A-3I	6110	HUB	E3932	DAMAGED	20021108012	PAC
HC-E4A-3I	6114	BEARING	0	FRACTURED	20011127003	PAC
HC-E4A-3I	6114	HUB	57E03932	CORRODED	20021101004	PAC
HC-E4A-3I	6197	PC BOARD	1293640919	SHORTED/MELTED	20020227007	PAC
HC-E4A-3I	6197	WIRES	L195A12KU1C22	CHAFED	20020411009	PAC
HC-E4A-3J	6114	HUB	E3932	FAILED	20021105006	ONT
HC-E4N-3	6110	BOLT	A2431	FAILED	20021204002	ONT
HC-E4N-3	6111	DOWEL PIN	A65	BROKEN	20021204003	ONT
HC-E4N-3	6123	SLEEVE UNIT	B476	CRACKED	20021204004	ONT
HC-12X20-8C	6110	THRUST BEARING	A0014B	CORRODED	20020510022	WST
HC-82VF-2BI	6110	COUNTERWEIGHT	8332	CRACKED	20021119007	ONT
PHC-A3VF-2B	6111	BEARINGS	A0971	DENTED	20020205004	WST
HOFFMANN						
HO-V352F/170FQ	6111	PISTON O-RING	PRP0119026	FAILED	20020409001	PAC
MCCAULEY						
C2A34C204	6114	BEARING	C5270	CORRODED	20021119006	ONT
D2A34C58	6121	CONTROL ARM	A20609	INCORRECT POSIT	20011116002	PAC
D3A34C403	6110	SNAP RING	B4426	MISSING	20020626003	WST
D3A34C404	6122	RELIEF VALVE NUT	0		20011220001	ONT
1A102/OCM	6100	BOLTS	MS20073XXXX		20020103005	ONT
1A170EUHA/7660	6113	BACKPLATE	055032110	BROKEN/TORN	20011123001	ONT
1A170EUHA/7660	6113	BULKHEAD	056032111	CRACKED	20020301004	PAC
1B90	6111	PROPELLER	1B90CM7146	CORRODED	20020729003	ONT
1C160/DTM	6113	AFT SPINER BULKHEAD	055032110	CRACKED	20020411006	ONT
1C160/DTM	6113	AFT SPINER BULKHEAD	055032111	CRACKED	20020411005	ONT
1C160/DTM7553	6100	BOLT	CA462220W	BROKEN	20011004010	WST
2AF34C55	6110	CWT CLAMP	31561	CRACKED	20020510020	WST
2A34C203BC	6111	O-RING	A1633109	SHREDDED	20020307007	ONT
3AF32C93	6110	HUB/BLADE NUT	C93C4904	CRACKED	20020626004	WST
4HFR34C754	6121	BRUSH BLOCK BRACKET	C40536	BENT	20020307008	WST
MT PROPELLER						
MTV8BCC18818A	6114	HUB	A915B	WORN	20020904012	ONT
MTV8BCC18818A	6120	FLAT SPRINGS	1530650012	BROKEN	20020507022	ONT
SENSENICH						
M76AM-2	6111	PROPELLER	0	WELDED	20021125009	ONT

equipment

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
ABEX						
S76	2913	PUMP	7665009808102	SHAFT SHEARED	20020123004	OTT
9615059002	0000	HEAT CONTROLLER	9615059002	FAILED	20001019028	QUE
ABG SECMA						
ADC456	0000	NIL/UNKNOWN	0		20021004002	ONT
AEROSP						
350A34011006	6510	BEARING	593404	CORRODED	20011031022	ONT
AMERIKING						
AK450	2300	G SWITCH	0		20020507007	ATL
APC						
150SG117Q	2435	ARMATURE	150SG1064	BURNT	20021119004	WST
BEECH						
1148100217	3213	SOCKET	5081032019	CRACKED	2 SDRs	PAC
130530025	1100	PLATE INSTRUCT	1013840831	SERVICEABLE	2 SDRs	ONT
BELL						
206075296053	2497	BATTERY WIRE	206075295053	BROKEN	20020530015	ONT
209062608	7332	FUEL PRESSURE TR	209062608001	DIRTY	20020408001	ONT
BENDIX						
103493101	7414	MAGNETO	S6LN1209	FAILED	20020109007	CTR
18237A	3423	SEAL	UK	LEAKING	20020613005	PAC
BF GOODRICH						
38E962E	3010	PRESS REG DE-ICE	38E962E	MALFUNCTION	20020118008	WST
BOEING						
657376188	3231	ROD END	1060779179	CRACKED	20011107002	WST
CESSNA						
0526007201	2810	VALVE ASSEMBLY	07161249	FAILED	20021118012	ATL
175400125	7800	MUFFLER	175400125	CRACKED	20020226002	ONT
36101C	3400	SAME AS ABOVE	0	UNSERVICABLE	20020610009	QUE
CLEVELAND						
04028900A	3246	OUTER WHEEL HALF	16218000	CRACKED	20011031027	ONT
DEHAVILLAND						
C3UF1085	3222	FRONT STRUT	C3UF1085	CRACKED	20020211016	CTR
DOUGLAS						
5910233513	0000	TAILCONE	5910233513	FELL OFF	20001129028	QUE
DOWTY						
10500103	3233	GEAR ACTUATOR	10500103		20020524002	ATL
8900131	3250	STEERING ACTUATOR	89681	PULLED OUT	20020524007	ATL
DUNLOP						
AHA1489	3246	WHEEL HALF	AHA1481	SCRAP	20021010002	ATL
EDO						
3500	3200	FORK	6960298	CRACKED	20020523017	ONT
ELECTROMECH						
1143800287	2110	MOTOR ASSEMBLY	35141000	SEIZED	20020506002	PAC
ELECTROSYS						
ALY8420LS	2435	BRUSHES	0	U/S	20020621006	WST
646655A1	2434	ALT DRIVE GEAR	0	RUBBER MISSING	20020531008	CTR
ERA						
12611132	3310	LAMP HOLDER ASSY	13053WN	BURNED	20020624006	PAC
ESSO						
MIL6086D	0000	MINERAL OIL	MIL6086D	NOT AN SDR	20000412014	ONT
GLOBE						
206062721011	7323	LINEAR ACTUATOR	206062721011	U/S	20020819006	PAC
GODFREY						
139312	7100	SUPERCHARGER	139312	FAILED ROTORS	20020531009	CTR
HAMISTAN						
HART560B24	6123	AS ABOVE	AS ABOVE	BROKEN	20021112009	ONT
HAMILTON						
808442	2110	DUEL BYPASS VALVE	808442	FAILED	20011113008	QUE
HAMLTN						
7701848	6114	HUB, CLUTCH	7701848	WORN	20010905009	OTT
JANITROL						
406099C801	2140	COMBUSTION MOTOR	A07D48	BROKEN	20020522002	CTR
LUCAS						
23080023B	0000	BEARINGS	UNKNOWN	4 SDRs	20020213003	WST
23080023B	8011	BEARINGS	0		20020213006	WST
23085001	8011	BEARING BALL	03600918	PRODUCING METAL	20021118001	ONT
23088002A	8011	BEARING	03600923	FAILED	20020213013	WST
51509002R	0000	SUP COMPONENTS	0	FAILED	20021003006	WST
MARVELSCHEB						
1048941	0000	CARBURETOR	1048941	SUB-STANDARD	20010815010	OTT
105009N	7322	CARBURETOR	105009N	REPAIRABLE	20021009023	ONT

MAKE/MODEL	ATA	PART NAME	PART NO.	PART CONDITION	CTRL NO.	RGN
MCAULY						
C290D4MT4	6122	RELIEF VALVE NUT	0		20011220001	ONT
DCFS290D8T3	6122	BODY	D20267	CRACKED	20020205005	WST
P&W						
P	7530	P3 FILTER	302968	UNGLUED	20020708010	PAC
PILATUS						
524321215	2434	ARMATURE	UNKNOWN	GROOVED	20020704005	WST
9886781507	0000	I.D. TAG	5113412233	BENT	20020225002	ONT
PIPER						
4472307	5700	FITTING ASSY	4029400	CRACKED	20020304001	ATL
4550403	3250	SCISSOR & BOLT	4025700402377	BROKEN	20020722001	ATL
7617101	0000	AS ABOVE	AS ABOVE	CRACKED	20020227012	ONT
7617101	2510	AS ABOVE	AS ABOVE	CRACKED	20020227011	ONT
7617101	2520	AS ABOVE	AS ABOVE	CRACKED	20020227013	ONT
POINTER						
C4000	3400	SAME AS #8	0		20020128005	WST
4000	2562	AS ABOVE	0		20011218012	OTT
400010	2562	AS ABOVE	0		20011218013	OTT
400010	2562	G - SWITCH	0	FAILED	2 SDRs	OTT
PRECISION						
250X035	0000	RAW STOCK	250X035	FAILED	20021002007	WST
PRESTOLITE						
MHB4016	8011	STARTER	MHB4016		20020830017	OTT
MHB4016R	2435	MOTOR	0	SEPARATED ARMATURE	20020801015	WST
MZ4204	8011	BENDIX DRIVE	0	DISINTEGRATED	2 SDRs	ATL
SAFEFLIGHT						
C388062	3418	COMPUTER, STALL	0		20021119014	WST
86273085000	2210	STALL WARNING CO	0		20020318007	WST
SCOTT						
3200	3220	TUBE	280X4	SPLIT	20020731017	OTT
SEXTANT						
7057V4	3400	STANDBY HORIZON	0		20020606018	WST
SIGMATEK						
29010616	3422	VANE	0	STICKY	20020208002	WST
TASK ANAHELM						
AB34	7714	BEARING	X12061	SEIZED	20020916004	CTR
TELEDYNE SYSTEMS						
D133750E01	0000	PACKING	MS28775021	SWOLLEN	20020627002	OTT
TURBOMECA						
ARRIEL1B	7421	IGNITER	9550168760	FAILED	20020729012	WST
UNKNOWN						
N300001	2350	FILTER CAPACITOR	220IF16V	DESTROYED	20021002005	PAC
RR223	3130	TRANSISTOR Q306	MMBT222A	FAILED	20020501005	PAC
UNKNOWN	0000	NIL	0		7 SDRs	VAR
UNKNOWN	0000	PACKING	MS2951204	BROKEN	20011011003	QUE
UNKNOWN	2434	ALTERNATOR	7565T	MISSING NUT	20010621002	PAC
10156	3251	PULLEY	AN2102B	SPLIT	20010522017	PAC
2312M452	3040	CONVERTER W/W	2312M452	FAILED	20020530005	WST
327211	6510	DISC PACK ASSY	327211	INCORRECT ASSY	20021104009	ATL
574205A	3230	SOLENOID & SPRING	11972	FAILED	20020530004	WST
WHITTAKER						
SEE BELOW	2612	FIRE DETECT LOOP	3001230117530014	INTACT/UNSERVICABLE	20020430012	ONT
WOODWARD						
210718	6122	FLYWEIGHT ASSY	5008016	FAILED	20021203002	ONT
8210007F	6122	BEARING ASSY	180315	BROKEN	20021203007	WST

LEGEND

ATA
CTRL NO.
RGN

headquarters

Transport Canada Civil Aviation, Continuing Airworthiness AARDG
Place de Ville, Tower "C", 330 Sparks Street, Ottawa, ON K1A 0N8
Tel: (613) 952-4357, Fax: (613) 996-9178

---

feedback *(TP 6980E) is published quarterly by the Continuing Airworthiness Division of Transport Canada, informing the aviation community of reported day-to-day problems that affect aircraft airworthiness in Canada.*

The articles contained in **feedback** *are derived from Service Difficulty Reports (SDRs) submitted by Aircraft Maintenance Engineers (AMEs), owners, operators and other sources.*

For additional information concerning **feedback** *or the Service Difficulty Reporting Program, contact your nearest Transport Canada Centre.*

Where to find us in cyberspace

http://www.tc.gc.ca/civilaviation/certification/menu.htm